



Setup menu allows user to input management information like grower/farm/field



AgFiniti indicator displays AgFiniti connection and status





Display diagnostics provides information on display and any connected modules (if present)




GPS status indicator displays GPS connection and state

## Starting a New Guidance Event

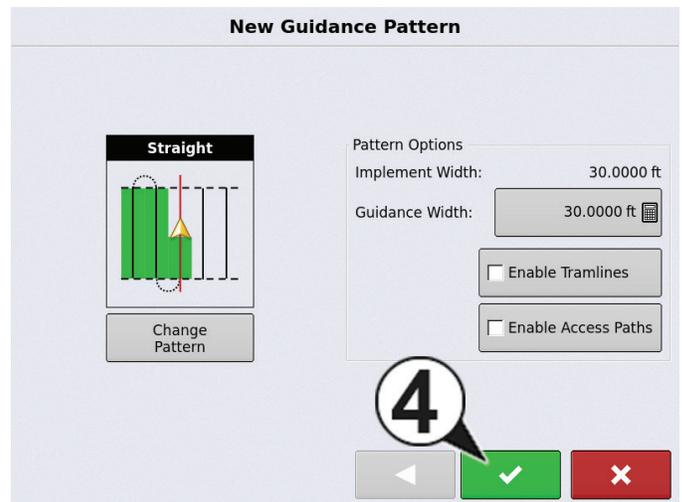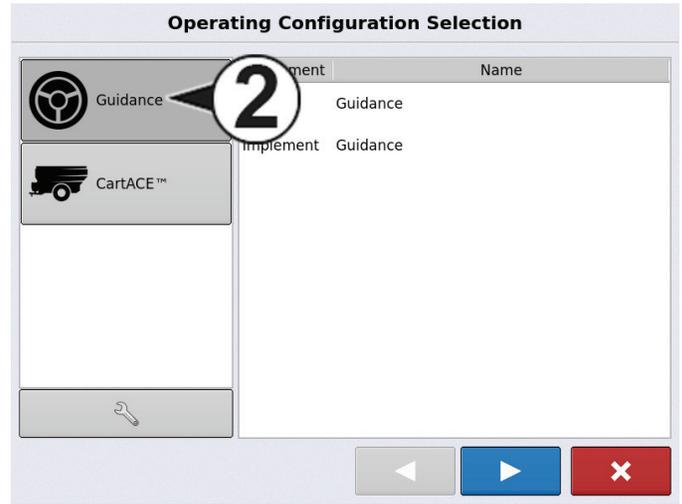


Run without management by unchecking Enable Management

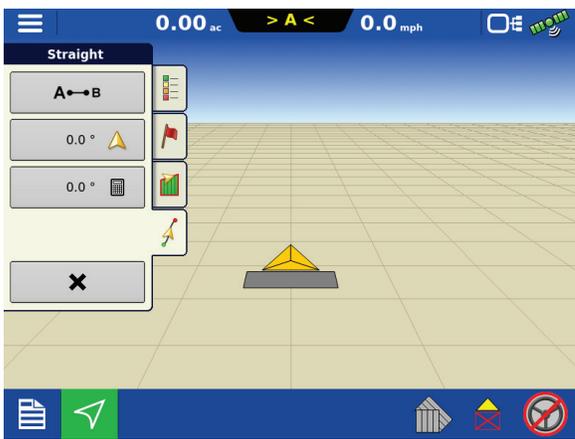


## Pattern Creation




Set the A point and B point of an AB guidance pattern

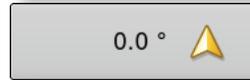

Create a guidance pattern using the vehicles current heading

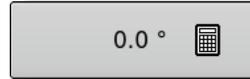

Create a guidance pattern with a user defined heading

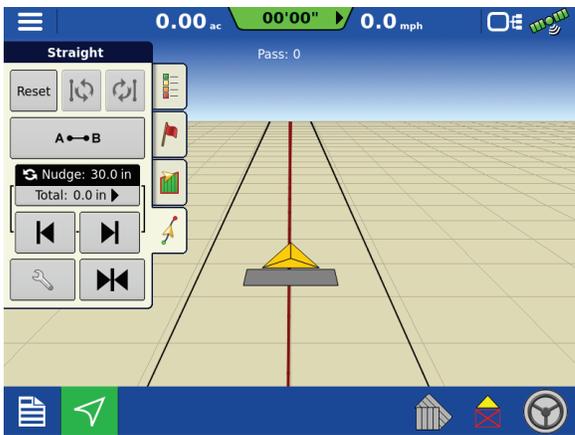

## Run Time



Clears guidance pattern



Nudge guidance pattern left



Nudge guidance pattern right



Remark A - use to recenter loaded pattern



Setup



Press  /  to toggle between on screen views.

Logged swath data is only present in **Zoom to Detail** view. Use pinch/pull and drag the screen to view additional area.



Press to bring up various options such as Home, Event, and Settings.



Steering engaged



Steering ready



Steering not ready



AutoSwath icon – toggle AutoSwath on/off



Implement icon – toggle logging on/off

StableLoc



Green - On

GPS Button



Green - Differential GPS



Yellow - GPS Only




Gray - No GPS

# Quick Reference Guide

AL: 2006655-ENG Rev A

## Connecting the System

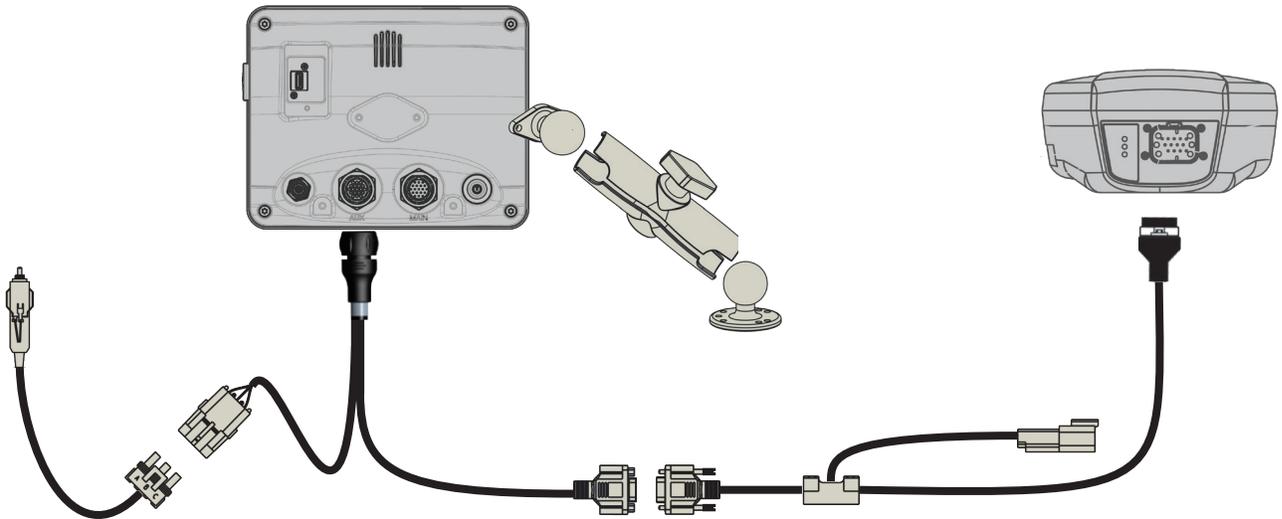

Note: Mount the display to a secure support inside the vehicle cab taking the following into consideration:

- The display must be readily accessible to the machine operator
- The display must not obstruct the operator's normal driving view nor interfere with existing machine controls

For additional information and education please refer to the following resources:

Display User Guide, included with the InCommand 800

Ag Leader Knowledge Base at [support.agleader.com](http://support.agleader.com)

Ag Leader video tutorials at <https://www.youtube.com/user/AgLeaderTutorials>

Ag Leader technical support

<https://www.agleader.com/help/>

email: [support@agleader.com](mailto:support@agleader.com)

phone: 515-735-7000