



IBX100 ELECTRONIC CONTROL UNIT



4679004
46790042

Object Pool rel. 3.3.X

INSTALLATION, USE AND MAINTENANCE

	= Generic danger
	= Warning
ECU	= IBX100 remote control unit
VT	= Virtual Terminal
OP	= Object Pool
TC	= Task Controller

CAUTION:

THE NATIVE CONTROLS INSIDE YOUR VIRTUAL TERMINAL HAVE THE PRIORITY ON ALL THE CONTROLS DERIVING FROM THE IBX100. PLEASE, KEEP THIS IN MIND WHEN PROGRAMMING AND USING THE PRODUCT.

1 Risks and protections before assembly	4	11.11 Home > Data and settings > implement settings > Implement geometry.....	32
2 Intended use	4	11.12 Home > data and settings > implement settings > System configurations.....	33
3 Precautions	4	11.14 Home > data and settings > implement settings > "Fence".....	35
4 Package content	4	11.15 Home > Data and settings > Implement settings > Flowmeter presets.....	35
5 Position on farming machine	5	12 Data and Settings	36
5.1 System recommended composition.....	5	12.1 Data and settings > Manage presets.....	36
5.2 Control unit fixing.....	7	12.2 Data and settings > Working parameters.....	39
5.3 Wiring harness connection.....	8	12.3 Data and settings > Info and alarms.....	40
6 Wiring connections	9	12.4 Data and settings > implement settings.....	42
6.1 General precautions for a correct harness position.....	9	12.5 Data and settings > Job data.....	42
6.2 Control unit (ECU) connection.....	9	12.6 Data and settings > Sprayer capability.....	42
6.3 Securing the Seletron cables.....	10	12.7 Data and settings > System status.....	43
6.4 Control unit valve connection.....	12	12.7.1 Data and settings > System status > Devices status.....	43
6.5 FENCE NOZZLE CONNECTION		12.7.2 Data and settings > System status > ISOBUS.....	44
- Installation with section valves - Fig. 3.....	13	12.7.3 Data and settings > System status > Auxiliary input status.....	45
6.6 FENCE / BUFFER NOZZLE connection		12.7.4 Data and settings > System status > System settings.....	46
- Installation with Seletron system - Fig. 2.....	13	12.7.5 Data and settings > System status > Registration.....	51
6.7 Hydraulic valve connection.....	13	12.7.6 Seletron status.....	51
6.8 Sensor connection.....	14	12.8 Data and settings > User preferences.....	52
7 ISOBUS system cable connection	15	13 Seletron connection	53
7.1 Connection of in-cab cable.....	15	13.1 Seletrons Test.....	55
7.2 Connection of ISOBUS cable.....	15	13.2 ID Reset.....	55
8 Foreword	16	13.3 SELETRON REPLACEMENT.....	56
8.1 "OBJECT POOL" loading.....	16	13.3.1 Preliminary Operations.....	56
8.2 Loading of "Second Sprayer OBJECT POOL".....	16	13.3.2 Replacement procedure.....	56
9 Setting	17	14 Use	58
9.1 Tests and checks before setting.....	17	14.1 "HOME" main screen.....	58
9.2 Control layout.....	17	15 Job functions	59
10 Implement settings > BASIC SETTINGS	18	15.1 Output temporary increase and decrease - Home page > Change target rate.....	59
11 Implement settings > Advanced Setup	19	15.2 Home > Alarms.....	59
11.1 Home > data and settings > implement settings > Boom.....	20	15.3 Home > Automatic functions.....	60
11.2 Home > data and settings > implement settings > Flowmeters.....	21	15.3.1 Home > Automatic functions > Application rate regulation.....	60
11.3 Home > data and settings > implement settings > Pressure sensor.....	22	15.3.2 Home > Automatic functions > Nozzles selection.....	61
11.4 Home > data and settings > implement settings > Valves.....	23	15.3.3 Home > Automatic functions > Simulated speed.....	62
11.5 Home > data and settings > implement settings > Nozzle data.....	24	15.3.4 Home > Automatic functions > Light switches.....	62
11.6 Home > data and settings > implement settings > Speed.....	25	15.4 Home > Tank.....	63
11.7 Home > data and settings > implement settings > Rev counter.....	25	15.5 Main control and section management.....	65
11.8 Home > data and settings > implement settings > Tank.....	26	15.5.1 Control settings WITH Auxiliary Input.....	65
11.9 Home > Data and settings > Implement settings > Hydraulic functions.....	26	15.5.2 Control settings WITHOUT Auxiliary Input.....	65
11.10 Home > data and settings > implement settings > Device calibration.....	27	16.1 End nozzles.....	69
11.10.1 Home > Data and settings > Implement settings > Device calibration > Press. sensor zero value.....	28	16.2 Home > Syncro control.....	71
11.10.2 Home > Data and settings > implement settings > Device calibration > Tank level zero value / Tank 2 level zero value.....	28	17 Maintenance / diagnostics / repairs	72
11.10.3 Home > data and settings > implement settings > Device calibration > Tank profile calibration.....	29	17.1 Cleaning rules.....	72
11.10.4 Home > data and settings > implement settings > Device calibration > Save tank profile.....	30	17.2 LED status key.....	72
11.10.5 Home > Data and settings > Implement settings > Device calibration > Load tank profile / Load tank 2 profile.....	31	17.3 Error messages.....	73
		17.4 Troubleshooting.....	74
		18 Technical data	75
		18.1 Electrical features.....	75
		18.2 Environmental features.....	75
		18.3 Physical features.....	75
		18.4 Pin-out of IBX100.....	76
		19 End-of-life disposal	78
		20 Guarantee terms	78
		21 EU declaration of conformity	78

• MANUAL USE MODES

The section of this manual dedicated to the installation contains information for installers. For this reason we have used technical terms without providing explanations which would be necessary for end users only.

THE INSTALLATION MUST BE CARRIED OUT BY AUTHORIZED AND SKILLED PERSONNEL ONLY. ARAG IS NOT RESPONSIBLE FOR ANY OPERATION SPECIFIED IN THIS MANUAL CARRIED OUT BY UNAUTHORIZED OR UNSKILLED PERSONNEL.

• LIMITATIONS

The descriptions of the assembly phases refer to a "general" Virtual Terminal, so specific models will not be mentioned, unless a certain installation procedure concerns exclusively one VT type.

• RESPONSIBILITY

The installer must carry out "workmanlike" installations and ensure to the end user the perfect operation of the whole system both with ARAG components only and other brands' components.

ARAG always recommends using its components to install control systems.

The installer will be held responsible for any malfunction if he decides to use other brands' components even without actually changing the system parts or harness.

The compatibility check with components and accessories of other manufacturers shall be carried out by the installer.

If the ARAG components installed together with other brands' components get damaged because of what stated above, no direct or indirect warranty will be provided.

1 RISKS AND PROTECTIONS BEFORE ASSEMBLY

The installation works relating to the job computer, except the main connection (ISOBUS system Chap. 7) must be done with battery disconnected, using suitable tools and any individual protection equipment deemed necessary.



Use **ONLY** clean water for treatment tests and simulations: using chemicals during simulated treatment runs can seriously injure persons in the vicinity.

2 INTENDED USE

The equipment you have purchased is a standard ISOBUS system compliant with ISO11783 to be applied to a crop spraying boom.

This device is designed to work on agricultural machinery for spraying and crop spraying applications.

The machine is designed and built in compliance with ISO 14982 standard (Electromagnetic compatibility - Forestry and farming machines), harmonized with EMC - 2014/30/EU Directive.

3 PRECAUTIONS



- Do not aim water jets at the equipment.
- Do not use solvents or fuel to clean the case outer surface.
- Do not clean equipment with direct water jets.
- Comply with the specified power voltage (12 VDC).
- In case of voltaic arc welding, remove connectors from the device and disconnect the power cables.
- Only use ARAG genuine spare parts and accessories.



CONNECTED TO A SUITABLE ISOBUS CONTROL UNIT, THE DEVICE CAN CARRY OUT ELECTROMECHANICAL CONTROL OPERATIONS.

THE PRODUCT DOES NOT FEATURE EMERGENCY STOP DEVICES: THE MACHINE MANUFACTURER MUST PROVIDE ALL NECESSARY SAFETY DEVICES FOR THE EQUIPMENT. IT IS THE MANUFACTURER'S RESPONSIBILITY TO ENSURE THAT THE MACHINE IS SAFE TO USE, ALSO BY MEANS OF ACOUSTIC AND/OR VISUAL SIGNALING DEVICES.

4 PACKAGE CONTENT



Fig. 1

- Control unit



Harnesses must be ordered separately (Ref. ARAG general catalog).

5 POSITION ON FARMING MACHINE

5.1 System recommended composition

To connect all parts of the system correctly, make sure to use the proper connection cables.

Consider all possible variants:

- type of system,
- type of Seletron units connected (single, twin or fourfold)
- number of nozzles per mechanical arm (of spraying boom)

**INSTALLATION DIAGRAM
VERSION FOR SELETRON AND HYDRAULIC CONTROLS**

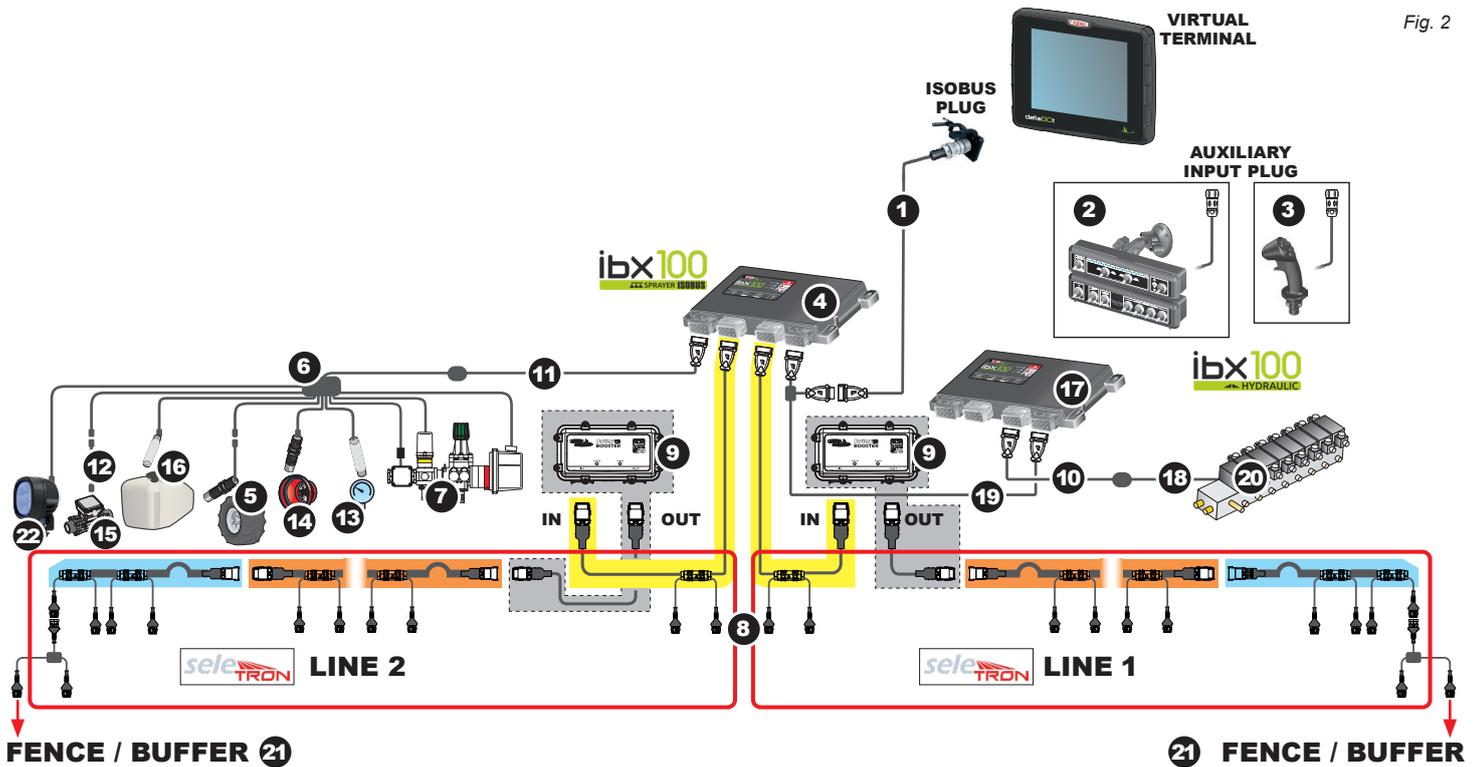


Fig. 2

Legend:

- 1 Standard ISOBUS connector (ISOBUS PLUG) - length 3 m / 6 m / 10 m / 14 m
- 2 Switch boxes with cable - length 0.8 m
- 3 Joystick Explorer with cable - length 0.8 m
- 4 IBX100 Sprayer ISOBUS control unit
- 5 Inductive speed sensor with cable - length 5 m
- 6 Sensor cable 3 m long + main valve + regulating valve
- 7 Control unit with flowmeter
- 8 Seletron cables:
 central cables
 extension cables
 termination cables
- 9 **Battery Booster**
- 10 Connection cable extension - length 3 m / 6 m
- 11 Connection cable extension - length 3 m / 6 m
- 12 Sensor extension cable - length 3 m / 5 m
- 13 Pressure sensor
- 14 RPM sensor
- 15 Filling flowmeter
- 16 Level sensor
- 17 IBX100 Hydraulic ISOBUS control unit
- 18 Connection cable for hydraulic valves 7 / 9 oil functions - length 3 m
- 19 Connection cable for IBX100 control unit (hydraulic function) - length 1 m
- 20 Hydraulic control unit
- 21 Seletron for Fence / Buffer end nozzles
- 22 Boom lighting / flasher

Without Battery Booster, correct operation cannot be ensured, because the features of the power source to the ISOBUS socket are unknown.

Maximum number of Seletron units that can be connected with Battery Booster:

Single / Twin Seletron units: 128

Fourfold Seletron units: 72

To connect all parts of the system correctly, make sure to use the proper connection cables. Consider any variants depending on system type.

**INSTALLATION DIAGRAM
VERSION FOR SECTION VALVES AND HYDRAULIC CONTROLS**

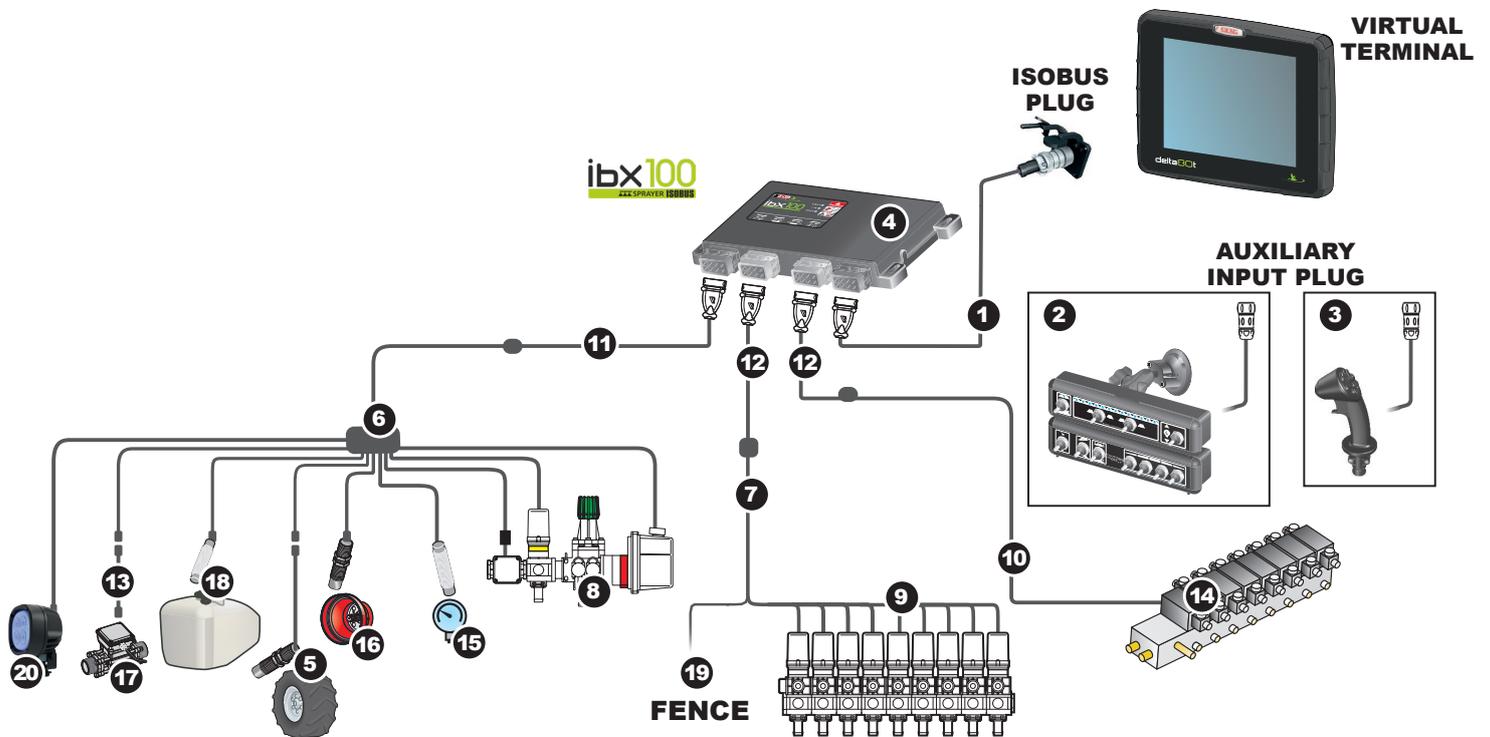


Fig. 3

Legend:

- 1 Standard ISOBUS connector (ISOBUS PLUG) - length 3 m / 6 m / 10 m / 14 m
- 2 Switch boxes with cable - length 0.8 m
- 3 Joystick Explorer with cable - length 0.8 m
- 4 IBX100 Sprayer ISOBUS control unit
- 5 Inductive speed sensor with cable - length 5 m
- 6 Sensor cable 3 m long + main valve + regulating valve
- 7 Water valve connection cable - length 3 m
- 8 Control unit with flowmeter
- 9 Control unit (section valves)
- 10 Connection cable for hydraulic valves 7 / 9 oil functions - length 3 m
- 11 Connection cable extension - length 3 m / 6 m
- 12 Connection cable extension - length 3 m / 6 m
- 13 Sensor extension cable - length 3 m / 5 m
- 14 Hydraulic control unit
- 15 Pressure sensor
- 16 RPM sensor
- 17 Filling flowmeter
- 18 Level sensor
- 19 Seletron Custom Connector for Fence End Nozzles
- 20 Boom lighting / flasher

5.2 Control unit fixing

Secure the control units on the back of the machine, close to the control unit and the hydraulic unit.

 Consider all necessary connections of the device (par. 5.3), the cable length, and make sure there is enough space for connectors and cables.
For any reference to the system configuration, read par. 5.1.

Respect the mounting direction of the control units, as specified in Fig. 4 (connectors shall be facing down).
Fix the ECU using the 4 bolts fitted into their slots (A, Fig. 4).

 No other type of assembly is allowed.

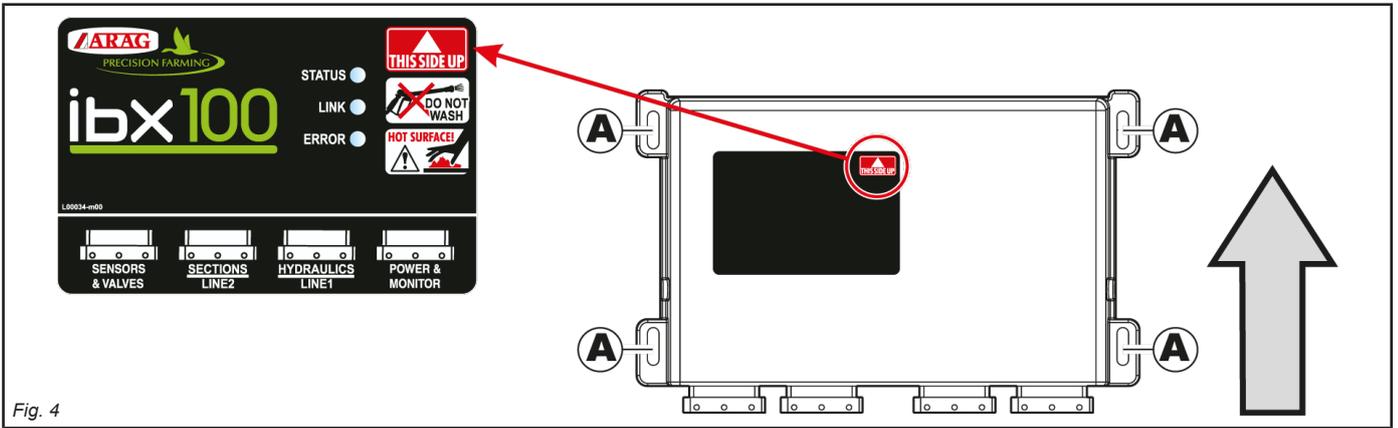


Fig. 4

OVERALL DIMENSIONS

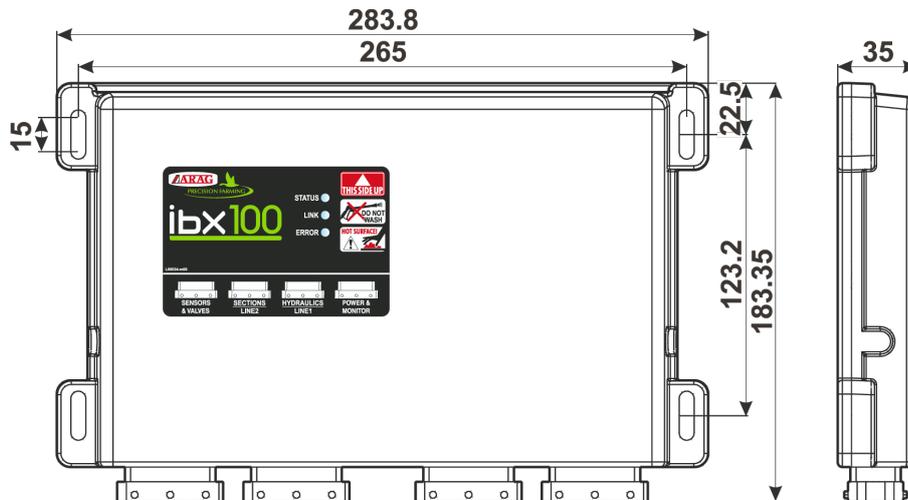


Fig. 5

Unit of measurement: mm

5.3 Wiring harness connection

IBX100 SPRAYER

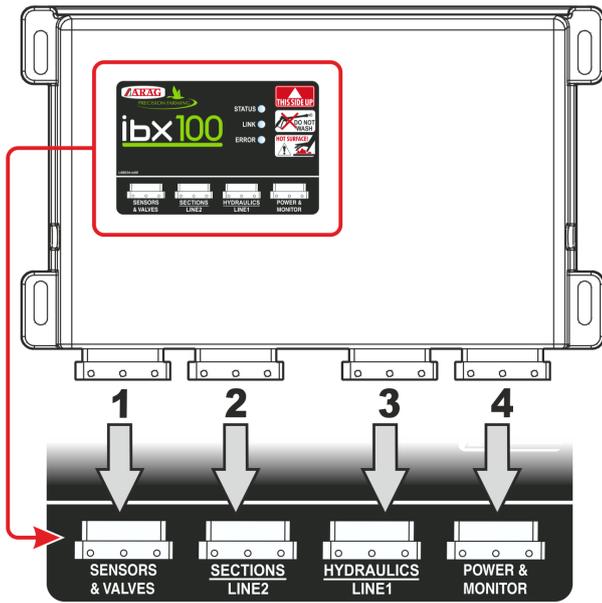


Fig. 6

NO.	CONNECTION POINTS	
1	Control unit (G + P) + Sensors	
2	Control unit (section valves)	SYSTEM WITH SECTION VALVES
3	Hydraulic unit	
2	Seletron - Line 2	SYSTEM WITH SELETRON
3	Seletron - Line 1	
4	Standard ISOBUS connector (ISOBUS PLUG)	

**IBX100 HYDRAULIC
(FOR SELETRON SYSTEM, ONLY)**

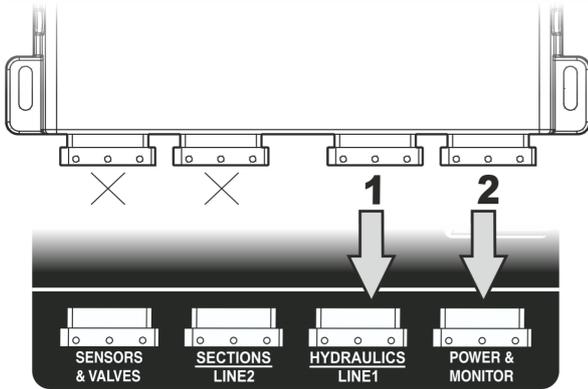


Fig. 7


NO.	CONNECTION POINTS
1	Hydraulic unit
2	ECU IBX100 Sprayer

6 WIRING CONNECTIONS

- ⚠ • Use original ARAG harnesses only.
- Take care not to break, pull, tear or cut the cables.
- Use of unsuitable cables not provided by ARAG automatically voids the warranty.
- ARAG is not liable for any damage to the equipment, persons or animals caused by failure to observe the above instructions.

6.1 General precautions for a correct harness position

- **Securing the cables:**
 - secure the harness so that it does not interfere with moving parts;
 - route the harnesses so that they cannot be damaged or broken by machine movements or twisting.
- **Routing the cables to protect against water infiltrations:**
 - the cable branches must ALWAYS be facing down (Fig. 8).

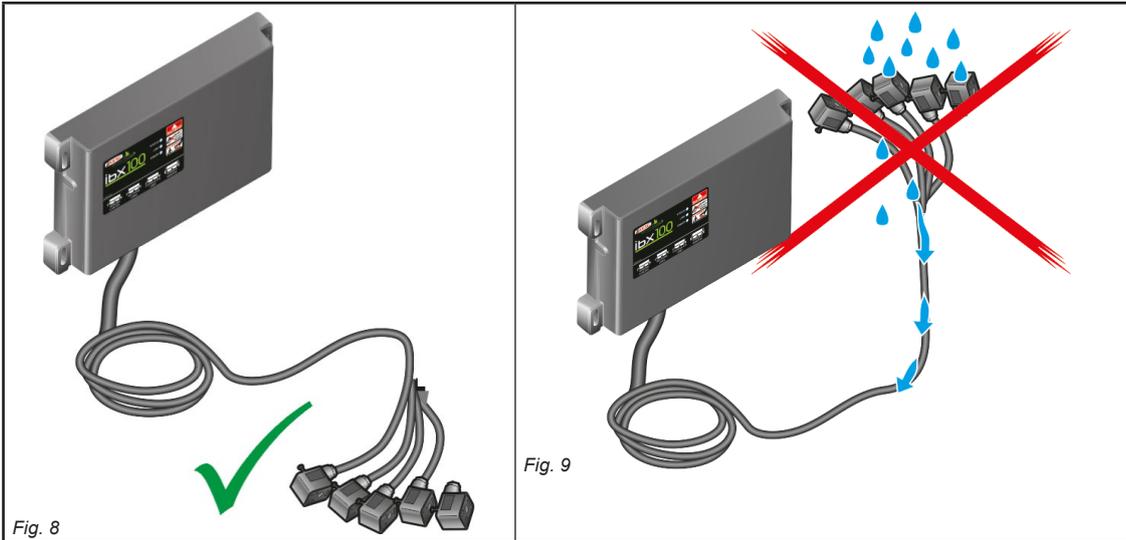

- **Fitting the cables to the connection points:**
 - Do not force the connectors by pushing too hard or bending them: the contacts may be damaged and system operation may be compromised.


🖐 Use ONLY the cables and accessories indicated in the catalog, having technical features suitable for the use to be made of them.

6.2 Control unit (ECU) connection

⚠ **CAUTION: DO NOT CONNECT ISOBUS CONNECTOR (Fig. 6 on page 8). THIS CONNECTION MUST BE CARRIED OUT LATER, ONLY AFTER INSTALLING ALL THE COMPONENTS (Chap. 7 ISOBUS system cable connection).**

Connect harnesses as specified in par. 5.3; each one of them shall be connected to the corresponding socket on the offset unit. Close the unused connectors with the relevant caps supplied in the package.

🖐 If they prove hard to insert, do not force them, but check the shown position.

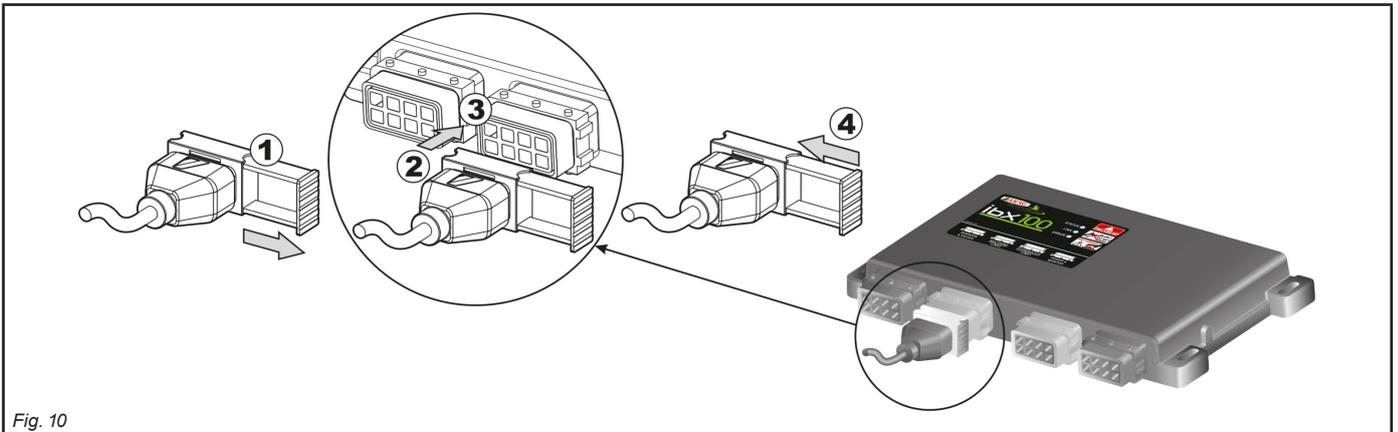

🖐 Some connectors are supplied with separated slide. Manually insert the slide in the most convenient position for connector insertion and removal.

- Open connector slide (1, Fig. 10).
- To position connector (2), insert it inside socket (3), then press: during this operation, take care not to bend the electric contacts.
- Close slide (4) until it locks in place.

6.3 Securing the Seletron cables

CAUTION: DO NOT CONNECT THE CONNECTORS TO THE SELETRON NOZZLE HOLDERS. THE SELETRON ELECTRIC CONNECTORS MUST BE CONNECTED AT A LATER TIME, DURING THE PAIRING PROCEDURE (chap. "13 Seletron connection" on page 53).

Route the cable following these rules:

1 The Seletron units are connected to the ECU (Fig. 11) via two main wiring harnesses (**1** and **2**), each made up of three types of cables: head-end cable (**3**), extension cable (**4**) and termination cable (**5**); ; the termination cable is indispensable in order to close circuit. **The system will not operate without a termination cable.**

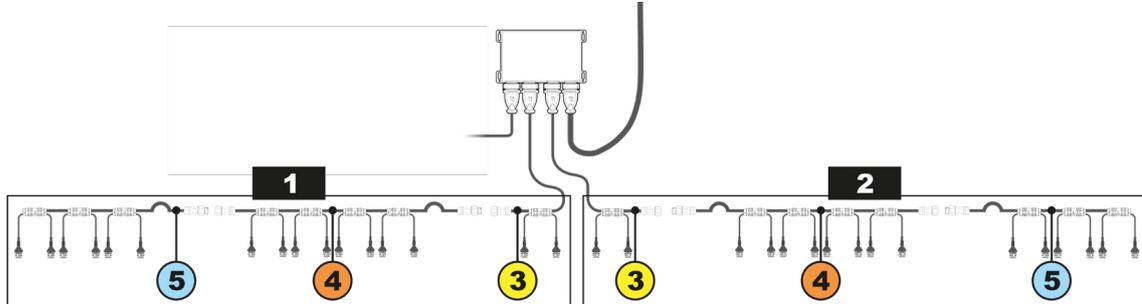


Fig. 11

Consider all necessary connections of the Seletron system, the cable length, and make sure there is enough space for connectors and cables. Secure the cables with ties to protect them from damage.

Thanks to the modular concept of the system, additional **EXTENSION** cables can be added to the circuit to connect additional nozzle holders and obtain the desired boom length.

To ensure proper operation of the system, observe the wiring diagram and use **ONLY** dedicated cables for the type of Seletron installed.

CAUTION: THE CABLES DESIGNED FOR CONNECTING TWIN SELETRON UNITS ON BOOMS UP TO 24 M LONG SHOULD NEVER BE USED ON LONGER BOOMS.

2 ECUs, main control valve, flowmeter and pressure sensor must be installed in the front section of the machine; if needed, **ONLY** the sensors may be moved to a different position and connected using the extensions listed in the catalog.

Never use an extension for any other components unless you have so agreed with the ARAG Assistance Center.

3 Choose and install the cables so that they retain some freedom of movement at boom joints.

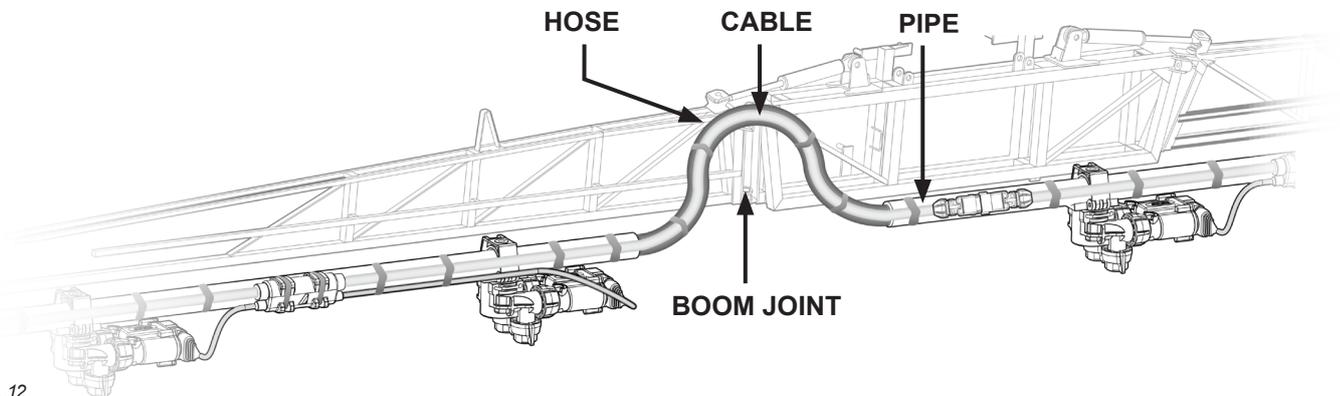


Fig. 12

4 ALWAYS secure the main cable connections (**3**, **4** and **5**) to a stationary section of the boom; the head-end cable is longer than the termination to facilitate this.

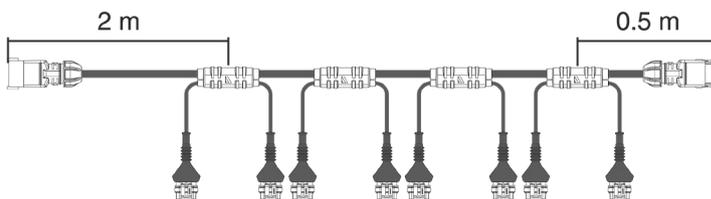


Fig. 13

5 Account for any possible boom movement when positioning and fixing the cables.

6 Connections between main cables (**3**, **4** and **5**). Observe connector position and do not force fitting: position is correct when **A** guides (Fig. 17) fit guiding connection to the complementary part.

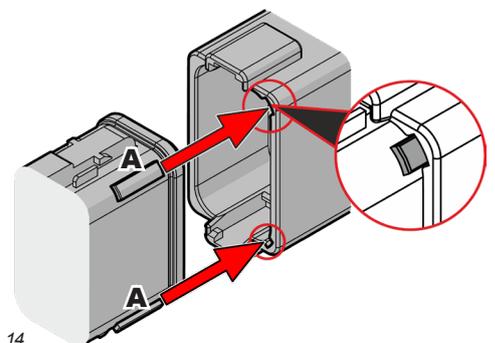


Fig. 14

7 Carefully check that no connections or branches are positioned near moving parts and high enough to clear possible obstacles on the ground. Ensure that the Seletron nozzle holders do not become jammed with one another or touch any cables or delicate system areas when the boom is closed or folded away.

8 If space is limited and you need to bend a cable, be sure not to bend it too tight or it may get damaged.

OK


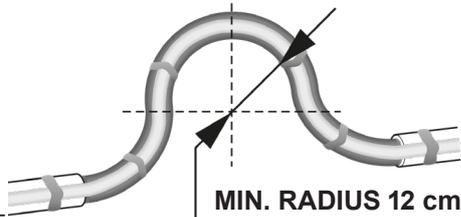


Fig. 15

NO!

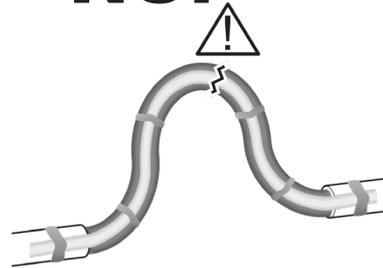

9 Position the cable so that branches **A** are equally spaced from Seletron connectors **B**.

NO!


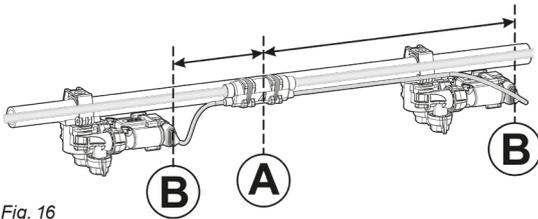


Fig. 16

OK

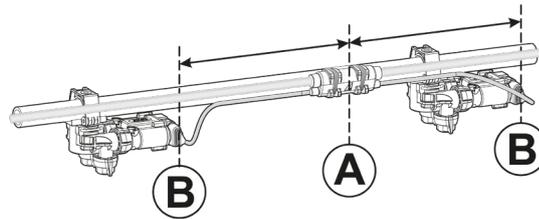

10 Secure the branches to the boom threading the ties through the suitable recesses.

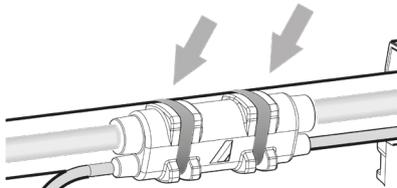


Fig. 17

11 When installing a twin or fourfold nozzle holder, make sure that all connectors are facing the same direction, or the computer might select the wrong nozzle.

OK


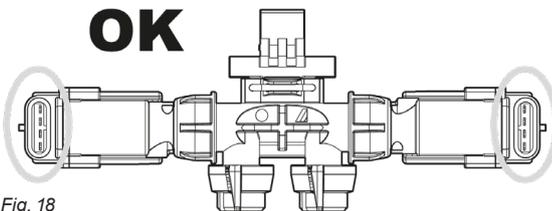



Fig. 18

NO!

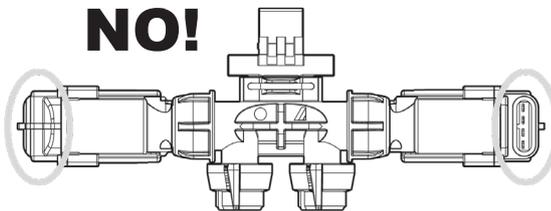


For special needs it is possible to install two nozzles on boom ends that can work instead of the standard outer nozzles.

12 Any Seletron connectors left unused must be closed using the suitable plugs (code ECS0075). The plugs must be ordered separately. When the connectors are plugged off, the Seletron is sealed. To avoid damaging the internal components, make sure that when using or cleaning the system the plugs and the connectors are not bare or inserted incorrectly.

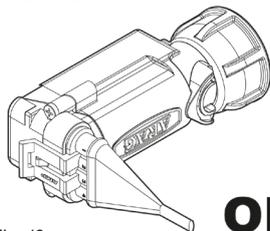

OK

Fig. 19

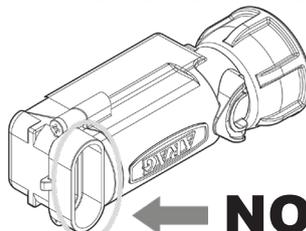

NO!

WARNING!
DO NOT CONNECT THE SELETRON UNITS.
THE SELETRON ELECTRIC CONNECTORS MUST BE CONNECTED AT A LATER TIME, DURING THE PAIRING PROCEDURE (chap. "13 Seletron connection" on page 53).

CAUTION: TO AVOID DAMAGING ONE OR MORE DEVICES, MAKE SURE THAT NONE OF THE PARTS OF EACH SINGLE SELETRON (BODY, HARNESSSES, ETC.) COME INTO CONTACT WITH MOVING PARTS AT ANY TIME WHEN THE SYSTEM IS IN USE (INSTALLATION, COMMISSIONING, USE AND SHUTDOWN OF THE FARMING MACHINE).

Arag will not be held responsible for any damage to the system, people, animals or objects caused by failure to follow the guidelines outlined above.

6.4 Control unit valve connection



- The system only works if assembled with 3-wire type valves.
- Use ARAG valves: use of unsuitable valves not provided by ARAG automatically voids the warranty. ARAG is not liable for damage to the equipment, persons or animals caused by failure to observe the above instructions.
- All valve connectors must be provided with seals before being connected (Fig. 20).
- Make sure the seals are correctly fitted to avoid water infiltration when using the control unit.

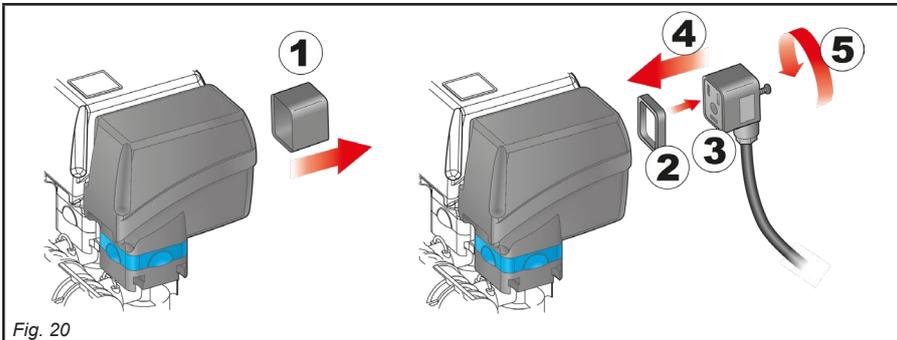


Fig. 20

Fix the connectors to the relevant valves according to the initials indicated in your assembly general diagram (par. 5.1 System recommended composition)

- Remove the protection cap (1, Fig. 20) from the electric valve.
- Place the seal (2) onto the connector (3), and push the connector fully on (4): **be careful not to bend the contacts upon insertion on the valve.**
- Tighten the screw (5) fully home.

SECTION VALVES WITH CLASSIC INSTALLATION

Connector 1 shall control the valve, which in turn is connected to the boom section 1, and so on with the other valves. Connect "connector 1" to "valve 1", and then the other connectors with increasing numbers from left to right: **the boom section 1 is the furthest from the machine on the left, looking at the machine from the rear side** (Fig. 21).

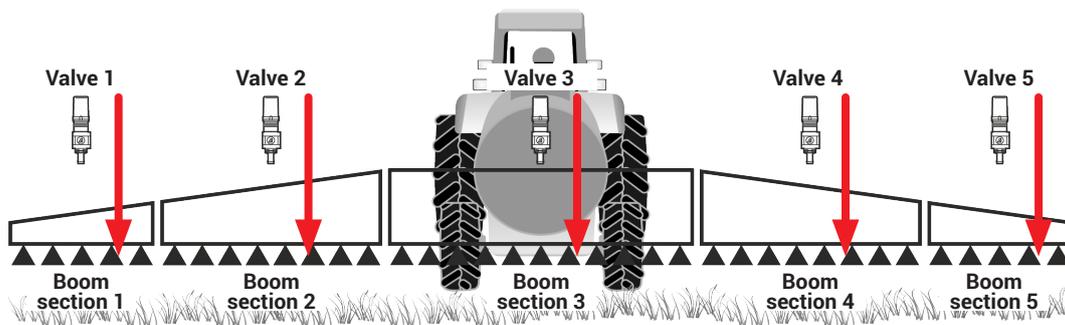


Fig. 21

SECTION VALVES WITH DOUBLE BOOM

This installation allows to pilot independently 2 booms with different nozzles and to choose automatically the nozzle or the combination of nozzles (A, B, A+B) according to the set pressure and application rate parameters.

Connectors 1 to 7 must be connected to the section valves of the first nozzle holder boom (A), while connectors 8 to 14 must be connected to the section valves of the second boom (B).

For all booms with a number of sections lower than 7, Fig. 22) connector 8 must ALWAYS pilot the valve connected to section 1 of the second boom (B): boom section 1 is the leftmost one when looking at the machine from behind.

The maximum number of section valves supported for nozzle holder boom A is 7.

The maximum number of section valves supported for nozzle holder boom B is 7.

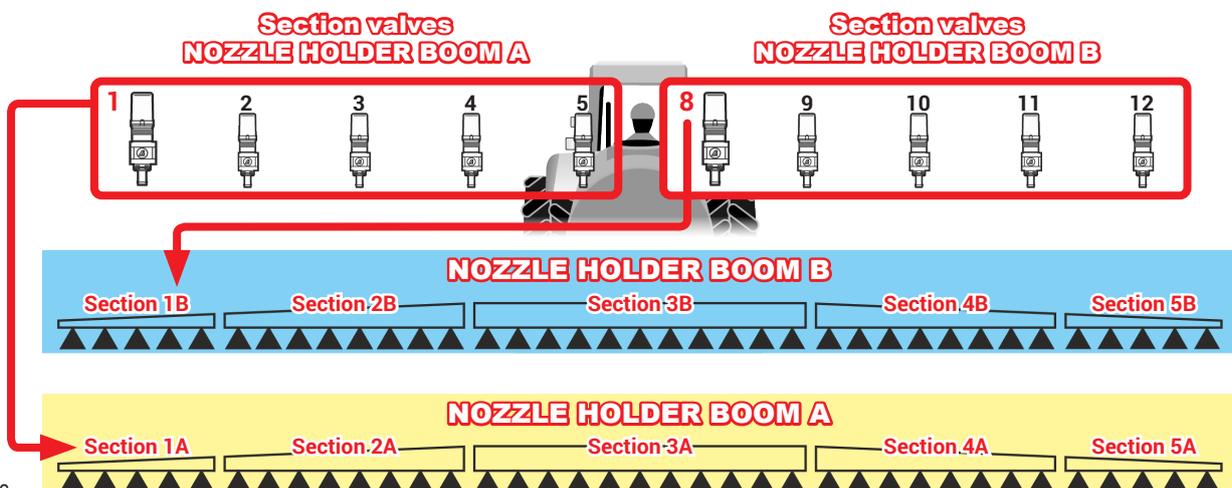


Fig. 22

6.5 FENCE NOZZLE CONNECTION - Installation with section valves - Fig. 3

The system allows two Seletron type valves to be connected to handle "Fence" type nozzles. The valves must be connected by means of an adapter cable.

6.6 FENCE / BUFFER NOZZLE connection - Installation with Seletron system - Fig. 2

The system allows two supplementary Seletron type valves to be connected to handle "Fence" or "Buffer" type nozzles.

• FENCE NOZZLE:

The Seletron installed must be a single type, regardless of what is mounted on the rest of the boom.

• BUFFER NOZZLE:

The Seletron and the nozzles installed must be of the same type as those mounted on the rest of the boom;

in particular, the end nozzles must be installed in the same position as the other nozzles and use the same flowrates.

Connect the Seletron nozzle holders to the ends of the boom using the appropriate splitter cable (21 Fig. 2), using the last connectors on the right and left of the main harness.

6.7 Hydraulic valve connection

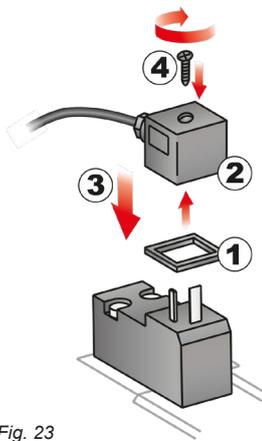


Fig. 23

The system can control up to 9 hydraulic functions through double action valves.

Fix the connectors to the relevant valves according to the initials indicated in your assembly general diagram (par. 5.1).

• Position seal (1) onto connector (2), then connect the latter pressing it fully home (3):

during this operation, take special care not to bend valve electric contacts.

• Insert screw inside connector, and screw it (4) until it is tightened.

The function of each switch on the hydraulic function control panel is described below.

• Connect the connector marked with "DD" to the pilot valve, and then the other connectors, as specified on the table:

CONTROL	MOVEMENT	CONNECTOR
Section movement 	Opening	1 ÷ 6 A
	Closing	1 ÷ 6 C
Boom height 	Opening	AA
	Closing	AC
Boom lock 	Opening	BA
	Closing	BC
Boom leveling 	Opening	CA
	Closing	CC

6.8 Sensor connection

Fix the connectors to the relevant functions according to the initials indicated in your assembly general diagram (par. 5.1).

Harness cables are marked with a symbol denoting their functions: please see the table for correct harness connection.



Use ARAG sensors: use of unsuitable sensors not provided by ARAG automatically voids the warranty. ARAG is not liable for damage to the equipment, persons or animals caused by failure to observe the above instructions.

ITEM	CONNECTION
F	Flowmeter
L	Level sensor
M	Pressure sensor
S	Speed sensor
T	Filling flowmeter
X	RPM sensor
LIGHT	Boom lighting / flashing

- The products are supplied with the sensor installation instructions.

The following speed sensors can also be used as RPM sensors:

- inductive speed sensor (**code 467100.086**);
- magnetic speed sensor (**code 467100.100**).

- Connection of:

- flowmeter;
- pressure sensor;
- level sensor;
- filling flowmeter;
- RPM sensor.

All ARAG sensors use the same type of connector. Connect the sensor connector to the relevant harness; make sure it is correctly fitted and push it until locking it.



Fig. 24



Fig. 25

7 ISOBUS SYSTEM CABLE CONNECTION

1. Connect the ISOBUS and IN-CAB cables.
2. Turn the VT on.
3. Wait for the OP complete loading (par. 8.1).

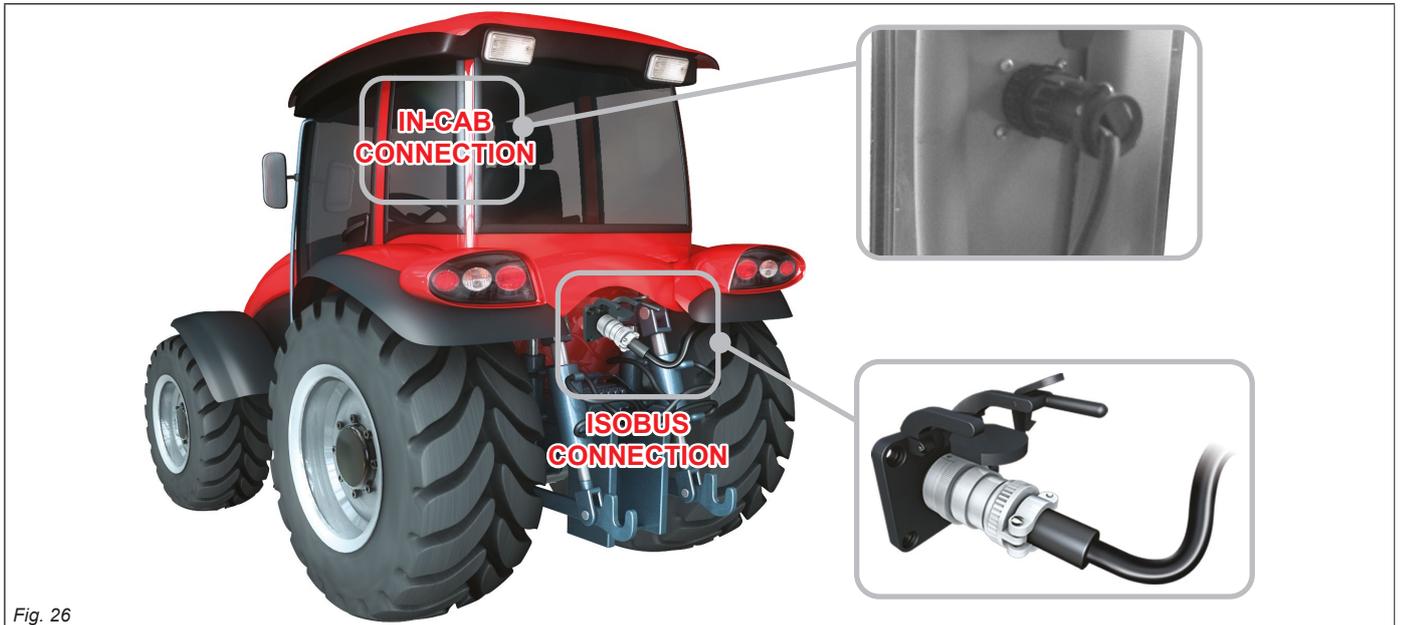


Fig. 26

7.1 Connection of in-cab cable

Use the cable supplied in the auxiliary input package*.

Connection: Fit the connectors (**in-cab connection** in Fig. 26), ensure they are correctly in place and turn the ring nut clockwise until blocking them.

**ARAG Auxiliary Input control system is not compulsory on all systems, and must thus be ordered separately.
Some VTs allow controlling section valves directly from monitor touch-screen panel.*

7.2 Connection of ISOBUS cable


Use cable **1** (Fig. 2 / Fig. 3, par. 5.1 System recommended composition).

Connections: fix the connectors (**ISOBUS connection** in Fig. 26); make sure they are correctly fitted and push until locking them.


8 FOREWORD

 Images and the relevant description texts contained in this manual are given as a reference as they can vary depending on the VT used. If the descriptions do not correspond to the text displayed in your VT, refer to the manual attached to the latter.

8.1 "OBJECT POOL" loading

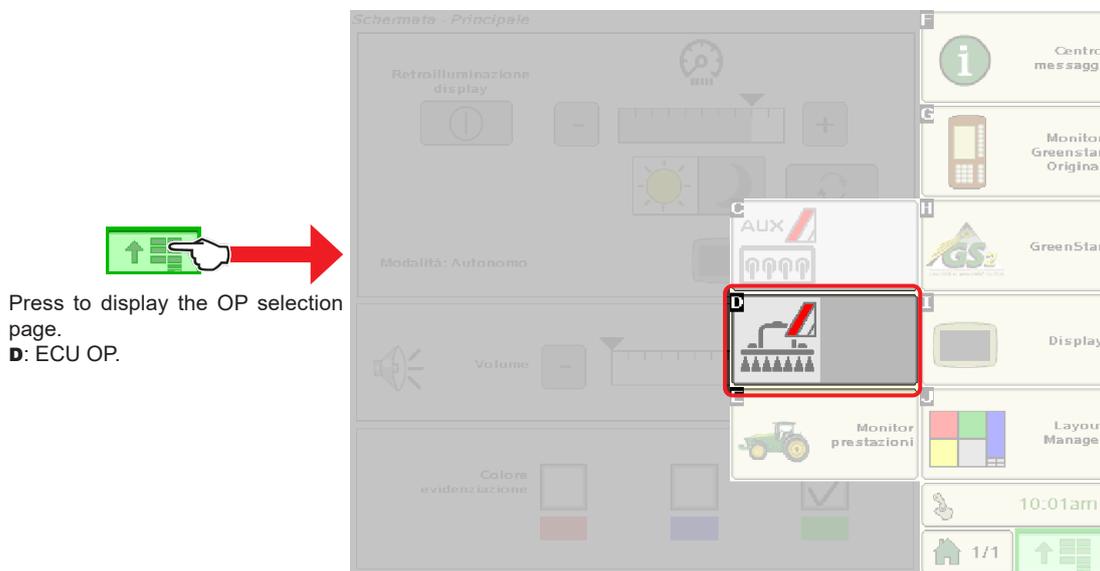

Press to display the OP selection page.
D: ECU OP.

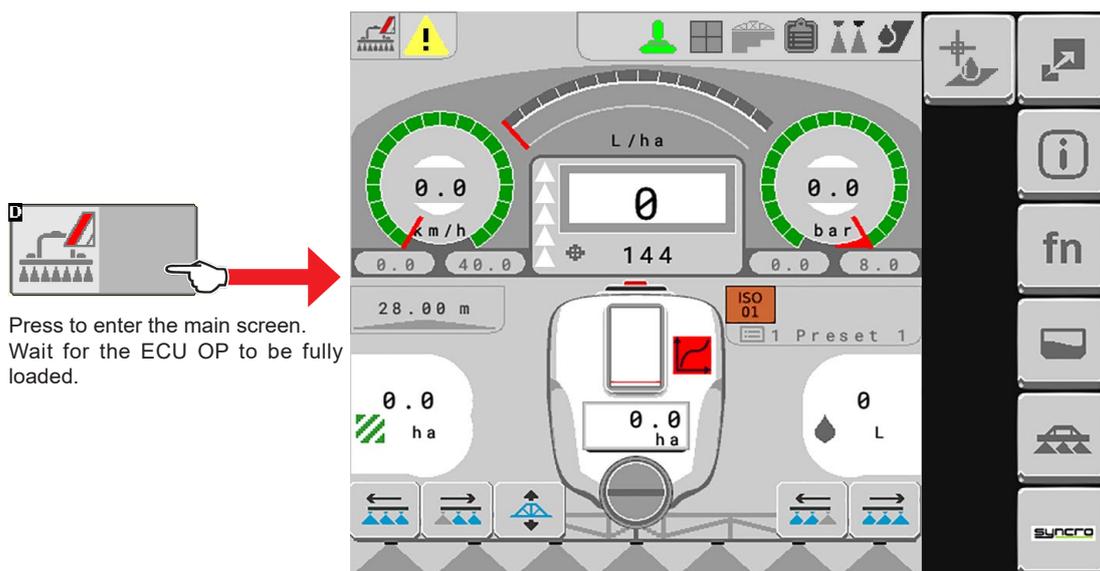

Press to enter the main screen.
 Wait for the ECU OP to be fully loaded.

8.2 Loading of "Second Sprayer OBJECT POOL"

The OBJECT POOL indexed with the number **2** for the second IBX100 Sprayer control unit will be loaded.



This icon will allow managing the OP and therefore the second Sprayer control unit independently from the first one.

This new function meets the need of managing two IBX devices of the same type on the same tool. To connect the second IBX100 Sprayer2 to the system, please contact Arag Technical Assistance.

9 SETTING

9.1 Tests and checks before setting

Before setup, check:

- that all components are correctly installed;
- the correct connection to the power source;
- the component connection.



Failure to correctly connect system components or to use specified components might damage the device or its components.

9.2 Control layout

MENU / DATA SELECTION

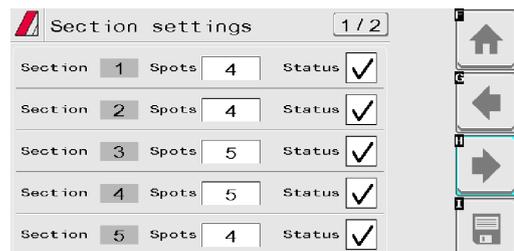


Fig. 27



Goes back to main screen



Goes back to previous menu, or scrolls the pages of a menu (previous page)



Scrolls the pages of a menu (next page)



Saves the changes to current page



Fig. 28



Quits without confirming the changes



Saves the changes

ENTERING A NUMERICAL VALUE

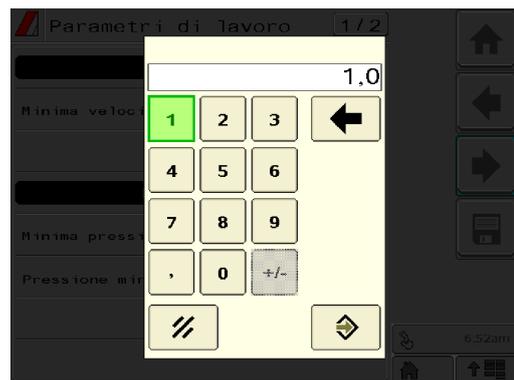


Fig. 29



Cancel



Exits



Confirm

10 IMPLEMENT SETTINGS > BASIC SETTINGS



Upon first switching on, enter the device basic settings.
For a correct use of the keys during setting, refer to par. 9.2.

Fig. 30



Fig. 31



Fig. 32



Fig. 33

BASIC SETTING PROCEDURE START

- VT will guide you during the configuration: follow the steps and select the desired options.
- ◀ previous step; ▶ next step
- When the message **Confirm change to settings** appears, the configuration is complete. Press .

BASIC SETTINGS MENU

• **Sprayer technology**

Valves: system with electrically operated valves - with gearmotor / **Seletron:** system with Seletron valves.

• **Main valve type:** type of main control valve installed on the control unit.

None, 2 ways (drain valve), **3 ways** (main valve).

• **Regulating valve type:** type of regulating valve installed on the control unit.

Standard (7s) / Fast (3.5s) / Ultra fast (2s).

• **Boom settings:** nozzle holder boom type (system with section valves).

Single (single boom) / **Dual** (dual boom).

• **Spraying spot type:** type of Seletron (system with Seletron).

1 single / **2** twin / **4** fourfold.

• **Flowrate reference sensor:** device used to calculate flowrate.

Flowmeter: the measured flowrate is used for the application rate regulation.

Pressure sensor: the measured pressure is used for application rate regulation.

Both: the application rate is regulated using the flowmeter, when the working flowrate is within its reading range; outside the range the system uses the installed pressure sensor.

• **Terminal nozzle type**

None

Buffer zone: allows enabling the use of nozzles at the "Buffer zone" see par. 16.1 (ONLY FOR SELETRON SYSTEM)

"Fence": allows using the "Fence" nozzles, see par. 16.1

• **Tank level source:** device used to read tank level.

Manual: no device connected;

Filling Flowmeter

Single tank level: by selecting this option in the HOME page, this icon will be displayed on the tank.

The icon with red background indicates that NO calibration curve is present.

Par. 11.10.3 on page 29 includes the instructions to create it; when the calibration curve is present, the red icon will disappear.

Dual tank level: selecting this option will display another tank alongside the first one with this icon .

The icon with red background indicates that NO calibration curve is present.

It is not possible to create a calibration curve for Tank 2, you can only transfer the calibration curve via VT with FileServer (par. 11.10.5 on page 31) or Visio Isobus functions. If the calibration curve is present the red icon will disappear.

BASIC SETUP PROCEDURE IS NOW COMPLETE: WHEN RETURNING TO THE HOME PAGE, THE SYSTEM RESTARTS AUTOMATICALLY. NOW IT IS POSSIBLE TO START THE ADVANCED SETUP PROCEDURE, DESCRIBED IN CHAP. 11.

11 IMPLEMENT SETTINGS > ADVANCED SETUP

The computer can be set-up with all the data required to ensure a correct distribution of the treatment product.

THE BASIC SETTINGS (CHAP. 10) AFFECT WHICH AND HOW MENU ITEMS ARE DISPLAYED, HENCE WHICH ADVANCED SETTING IT IS POSSIBLE TO CONTROL. A NAVIGATION SUMMARY IS AVAILABLE IN Fig. 35.

This operation must be done once only, when installing the computer.

ACCESS TO IMPLEMENT SETTINGS MENU

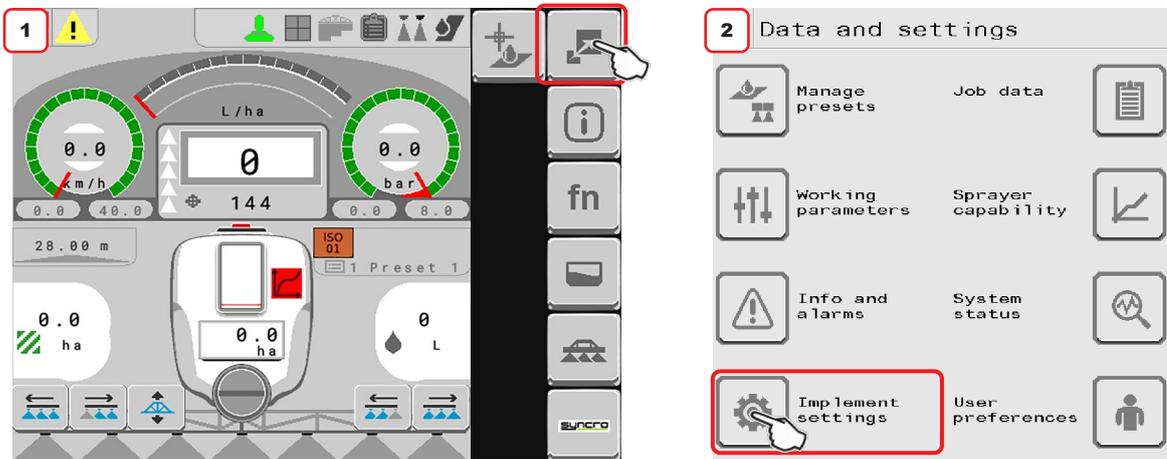


Fig. 34

STRUCTURE OF THE IMPLEMENT SETTINGS MENU

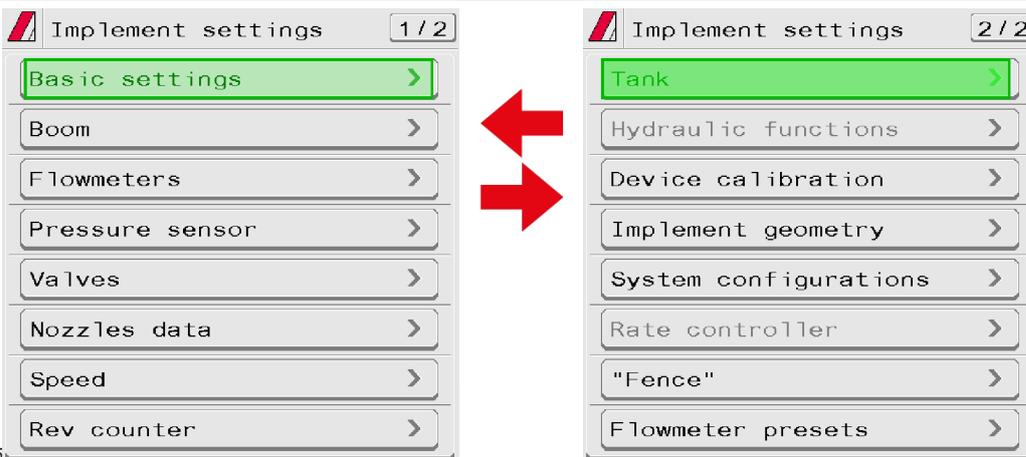


Fig. 35
Fig. 36

The gray items cannot be edited.
For a correct use of the keys during setting, refer to par. 9.2.

	Goes back to main screen		Goes back to previous menu, or scrolls the pages of a menu (previous page)		Quits without confirming the changes		Cancel
	Saves the changes to current page		Scrolls the pages of a menu (next page)		Saves the changes		Exits
							Confirm

11.1 Home > data and settings > implement settings > Boom

- 1 Indicate the number of boom sections.
- 2 Indicate the distance between spraying points (nozzle holders).
- 3 Indicate the number of spraying points (nozzle holders) installed on each boom section.
 - 3a Repeat the setup for each section (Fig. 38).
 - 3b It allows to enable/disable specific boom sections. Repeat the setup for each section, by disabling the disconnected outputs.
- 4 The displayed number of valves / Seletron that can be managed depends on the type of VT connected to the system. The VT could be able to manage just a limited number of sections, therefore, should it not be possible to manage all nozzle holders individually, the VT will group them so as to fully exploit the number of permitted sections.
- 5 Displays the terminal nozzle type (basic settings, chap. 10).

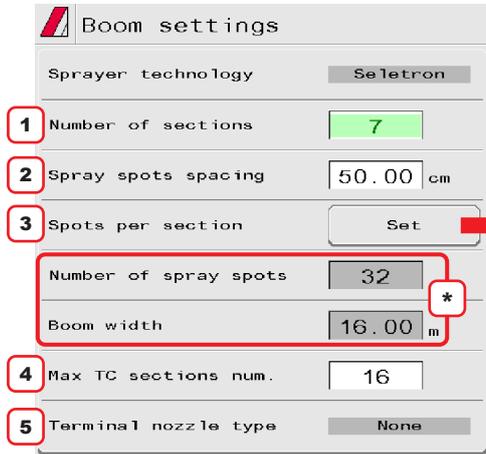


Fig. 37

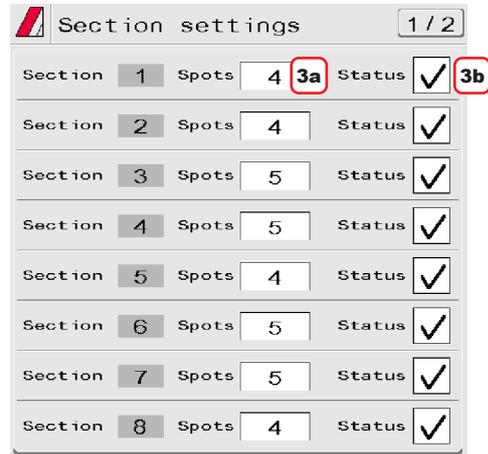


Fig. 38

* Depending on your programming, both the total number of spraying points and the boom width value will change, displayed in Fig. 37.

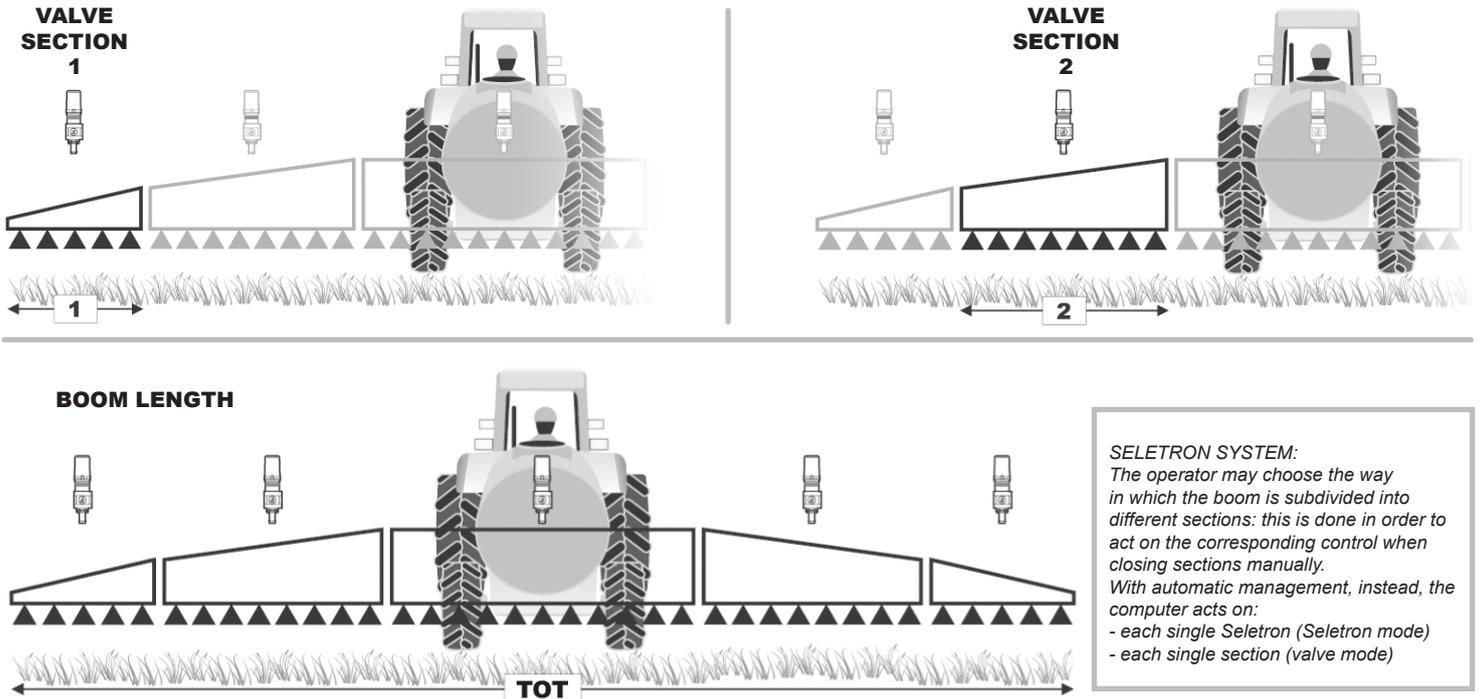


Fig. 39

	Goes back to main screen		Goes back to previous menu, or scrolls the pages of a menu (previous page)		Quits without confirming the changes		Cancel
	Saves the changes to current page		Scrolls the pages of a menu (next page)		Saves the changes		Exits
							Confirm

11.2 Home > data and settings > implement settings > Flowmeters

This menu allows setting both flowmeter and filling flowmeter (if set).

- 1 Set installed flowmeter by selecting it from the list in Fig. 41 (use keys 2 to scroll items, and key 3 to confirm).
- 4 Set the Constant.

 The items Minimum flowrate and Maximum flowrate can be modified only when the option Other is enabled.

* Use keys H and G to move between the pages Flowmeter (Fig. 40) and Filling flowmeter (Fig. 42).

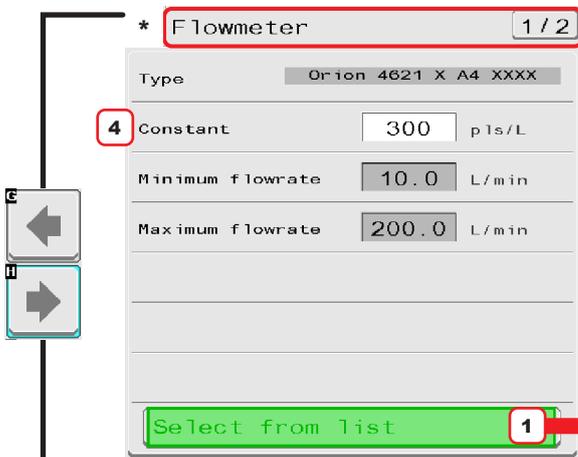


Fig. 40

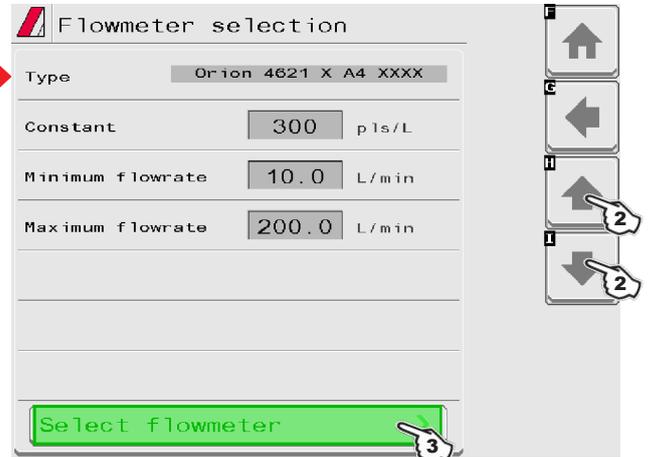


Fig. 41

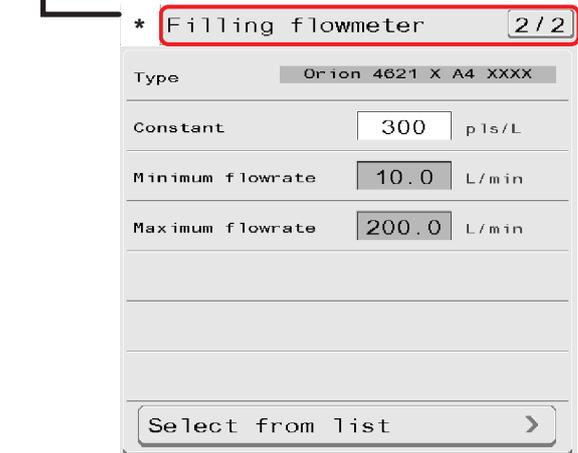


Fig. 42

List of available flowmeters and preset data:

ORION FLOWMETERS

Type	Constant		Minimum flowrate		Maximum flowrate	
	pls/l	pls/gal	l/min	GPM	l/min	GPM
4621 x A0 xxxx	6000	22710	0.5	0.10	10	2.6
4621 x A1 xxxx	3000	11355	1	0.30	20	5.3
4621 x A2 xxxx	1200	4542	2.5	0.70	50	13.2
4621 x A3 xxxx	600	2271	5	1.30	100	26.4
462x x A4 xxxx	300	1135	10	2.60	200	52.8
4622 x A5 xxxx	150	568	20	5.30	400	105.7
4622 x A6 xxxx	100	378	30	7.90	600	158.5
Other	625	2366	10	2.60	200	52.8

WOLF FLOWMETERS

Type	Constant		Minimum flowrate		Maximum flowrate	
	pls/l	pls/gal	l/min	GPM	l/min	GPM
462 x 2 xxx	1025	3880	2.5	0.7	50	13.2
462 x 3 xxx	625	2366	5.0	1.3	100	26.4
462 x 4 xxx	250	946	10.0	2.6	200	52.8
462 x 5 xxx	132	500	20.0	5.3	400	105.7
462 x 7 xxx	60	227	40.0	10.6	800	211.3

 Goes back to main screen	 Goes back to previous menu, or scrolls the pages of a menu (previous page)	 Quits without confirming the changes	 Cancel
 Saves the changes to current page	 Scrolls the pages of a menu (next page)	 Saves the changes	 Exits
			 Confirm

11.3 Home > data and settings > implement settings > Pressure sensor

- 1 Set installed pressure sensor by selecting it from the list in Fig. 44 (use keys 2 to scroll items, and key 3 to confirm).
- The relevant configuration data will be automatically loaded (Fig. 43).
- 4 Activate pressure sensor.



Item Maximum pressure can be edited only when option USER is enabled.

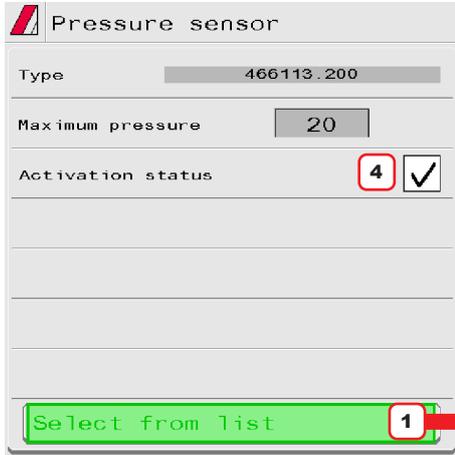


Fig. 43

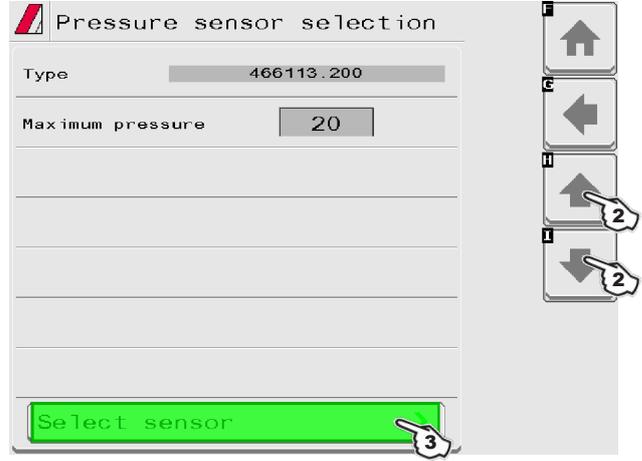


Fig. 44

Depending on the basic settings (**Flowrate reference sensor**, par. 10), the pressure sensor, once properly set up, can perform different functions:

- **Pressure sensor**: the pressure measured by the sensor is used to calculate the spray rate.
- **Flowmeter**: the pressure sensor displays ONLY the job pressure.
- **Both**: the pressure sensor displays the job pressure when the machine works within the flowmeter limits. When the flowmeter operates outside the limits the pressure measured by the sensor is used to calculate the spray rate.

The table below indicates the values that are automatically set selecting the sensor code. If the installed sensor is not displayed, select **USER** and enter the relevant values.

ARAG PRESSURE SENSOR		
Type	Maximum pressure	
	bar	PSI
466113.200	20.0	290
466113.500	50.0	725
USER	50.0	725

	Goes back to main screen		Goes back to previous menu, or scrolls the pages of a menu (previous page)		Quits without confirming the changes		Cancel
	Saves the changes to current page		Scrolls the pages of a menu (next page)		Saves the changes		Exits
							Confirm

11.4 Home > data and settings > implement settings > Valves

It allows configuring the main valve, the pressure control valve and the section valves:

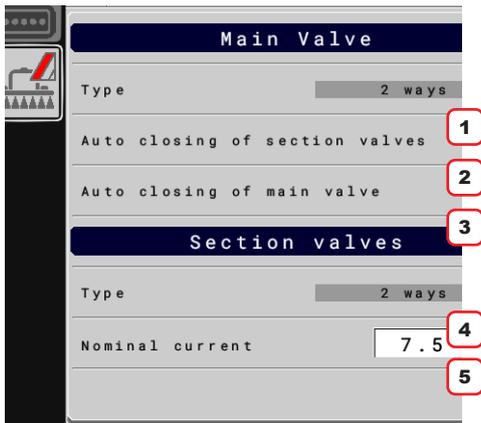


Fig. 45



Fig. 46

1 Main Valve > Type

Main control valve installed. Available options are: **None**, **2 ways** (drain valve), **3 ways** (main valve).
 Item **Main valve > Type** is shown as a **REMINDER**: it is activated during the guided setup (par. 10).
 It can not therefore be modified on this screen.

2 Main Valve > Auto closing of section valves

Allows to enable/disable the section automatic closing when the main control valve is closed.
 On a Seletron system, auto closing of section valves is active by default ("**M**" type).

- "**M**" operating mode (option):

the section valves are closed or opened by operating the main control valve based on the settings of the controls relating to the single section valves, namely:

- if section controls are set to OFF, when main control is operated, the sections will stay closed;
- if the control of one or more section valves is set to ON, when main valve is closed or opened, the section valves will be closed or opened as well.



ENABLED MODE CAN NOT BE MODIFIED:

this condition occurs when no main valve is installed on the system or the installed one is a 2-way valve.

- "**P**" operating mode (option):

the section valves are controlled independently.

Main valve control functions do not affect section valve opening or closing.

3 Main Valve > auto closing of main valve

When all section valves are closed and this option is enabled, the main valve is automatically closed as well.

- Main valve automatic closure enabled / Main valve automatic closure disabled).



ENABLED MODE CAN NOT BE MODIFIED:

this condition occurs when no main valve is installed on the system.

4 Section valves > Type

Indicate the type of installed section valves. Available options are:

- **2 ways** (valves without metered by-pass)
- **3 ways** (valves with metered by-passes)

On a Seletron system, section valves are of the **2 ways** type (without metered by-passes) and are automatically set.

5 Section valves > Nominal current

FOR SELETRON SYSTEMS, ONLY


Enter the maximum operating current value for all section valves.

6 Pressure regulating valve > Reverse direction


Indicate the type of installed control valve. Available options are:



Reverse direction enabled =

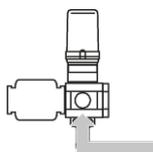

Reverse direction disabled =

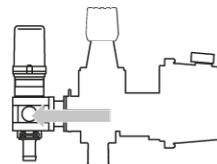

7 Pressure regulating valve > Close valve when not spraying

It allows controlling a regulating valve, which is closed by stopping the product output.

8 Pressure regulating valve > Valve speed

Standard 7s / Fast 3.5s / Ultra-fast 2s.

11.5 Home > data and settings > implement settings > Nozzle data

It allows setting the characteristic data of 12 ISO and 6 "User" (A + F) nozzle types.



Fig. 47

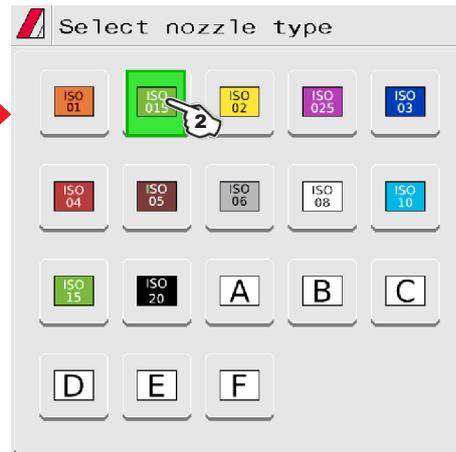


Fig. 48

- 1 - 2 Select the nozzle to be set (Fig. 47 / Fig. 48); enter the characteristics (Fig. 47).
If necessary, repeat the setup for each nozzle.
- 3 - 4 Set the reference flowrate and pressure for the selected nozzle.
The flowrate of the nozzle being used allows IBX100 to calculate the pressure without a pressure sensor.
*The values for **Flowrate** and **Pressure** can be modified for "User" nozzles ONLY, not for ISO nozzles.*
- 5 - 6 Set the pressure limits for the selected nozzle.
Enable the proper function in the menu **Info and alarms** (par. 12.3) if you want the computer to trigger an alarm when the nozzle is outside the set range.
For the procedure to be followed when an alarm occurs, please refer to par. 17.3.

When using an implement with or twin or fourfold Seletron technology or a sprayer with dual boom valve technology, it is possible to customize the selection of the pressure at which to change nozzle or nozzle combination based on the pressure values for the selected nozzles.

When setting a spraying, make sure to couple compatible nozzles.

For example:

- Compatible nozzles: the flowrate at 1 bar of the ISO025 nozzle is LOWER than the flowrate at 5 bars of the ISO02 nozzle (Fig. 133).
 - NON-compatible nozzles: the flowrate at 1 bar of the ISO05 nozzle is HIGHER than the flowrate at 5 bars of the ISO02 nozzle (Fig. 134).
- In the same way, the overall flowrate of both nozzles at MINIMUM pressure shall be LOWER than the flowrate of the high flowrate nozzle at MAXIMUM pressure.

E.g. Fig. 133 and Fig. 134

The **Sprayer capability > Nozzles configuration** menu allows verifying that the settings for the selected nozzle have been made correctly . If there are errors in the configuration the device shows this symbol .

	Goes back to main screen		Goes back to previous menu, or scrolls the pages of a menu (previous page)		Quits without confirming the changes		Cancel
	Saves the changes to current page		Scrolls the pages of a menu (next page)		Saves the changes		Exits
							Confirm

11.6 Home > data and settings > implement settings > Speed

Speed settings: allows setting the speed data.

1 It allows selecting the source for speed calculation.

Available options:

- **Wheel sensor (ECU):** when this option is enabled, speed is calculated through the pulses coming from the speed sensor, installed on the wheel and connected to the ECU through proper harness. The wheel constant must be entered during the setup procedure.

- ***Tractor wheel** [PGN65096]: the IBX100 control unit receives the vehicle driving speed via the ISOBUS line. The speed value is provided by the Tractor-ECU according to the rotation speed of the wheel or a mechanical part of the tractor.

NOTE: Tractor-ECU can be a standard ECU in the ISOBUS tractor, installed by after-sales service (ARAG IBX20 TECU) or emulated by the VT in the cabin.

- ***Tractor radar** [PGN65097]: the IBX100 control unit receives the vehicle driving speed via the ISOBUS line. The speed value is provided by the Tractor-ECU that detects the data sent by the radar installed on the tractor.

NOTE: Tractor-ECU can be a standard ECU in the ISOBUS tractor, installed by the after-sales service (ARAG IBX20 TECU) or emulated by the VT in the cabin.

- **Simulated speed:** allows enabling speed simulation in order to carry out adjustment tests even when the machine is stationary.

- **GPS NMEA2000** [PGN129026]: the speed value is provided, via the ISOBUS communication line, in GPS NMEA2000 data format.

- **Tractor GNSS** [PGN65256]: the IBX100 control unit receives the vehicle driving speed via the ISOBUS line. The speed value is provided by a GNSS device.

 *** several systems use these messages to transmit the speed data of the vehicle detected by the GPS receiver installed in the system to all devices connected on the ISOBUS line.**

2 Enter the wheel constant value calculated with the suitable formula.

3 Enter the simulated speed value.

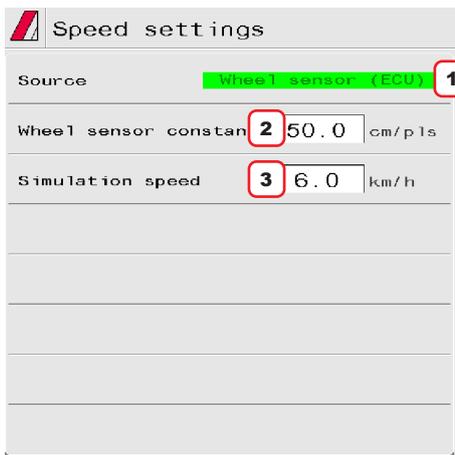


Fig. 49

Wheel sensor (ECU)
Wheel sensor (ECU)
Tractor wheel
Tractor radar
Simulated speed

The wheel constant can be calculated with a good approximation by detecting the distance traveled by the wheel with the speed sensor. The longer the distance traveled, the more accurate the wheel constant calculation.

$$K_{wheel} = \frac{\text{distance traveled (cm)}}{\text{no. of detection points} \times \text{wheel rpm}}$$

<distance traveled> distance expressed in cm covered by the wheel along measurement travel.

<no. of measurement points> number of measurement points (e.g., magnets, bolts, etc.), mounted on wheel.

<no. of wheel revolutions> number of wheel revolutions required to travel measurement distance.



Take measurements with tires at the operating pressure. This test must be performed on medium-hard terrain; for application to very soft or very hard terrain, rolling diameter may vary, leading to inaccurate output calculation; when this is the case, repeat the procedure. During the test, cover the distance with the tank filled up to half capacity with water.

11.7 Home > data and settings > implement settings > Rev counter

1 It allows enabling/disabling the rev counter status (rev counter enabled / rev counter disabled).

2 Indicate the constant of the installed rev counter.

3 - 4 Enable the appropriate function of the **Info and alarms** menu (par. 12.3) if you want the VT to generate an alarm when, during spraying, the measured RPM are outside the set range. For minimum speed, the control is active only when the spraying is active (**main switch ON**).

For the procedure to be followed when an alarm occurs, please refer to par. 17.3.

5 Real-time displaying of the actual datum.

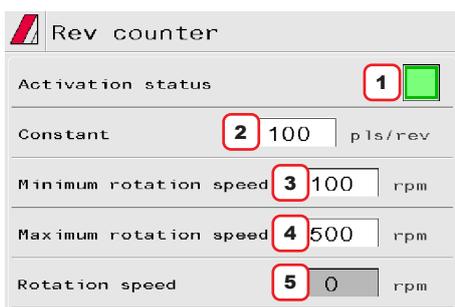


Fig. 50

11.8 Home > data and settings > implement settings > Tank

Allows setting the tank values:

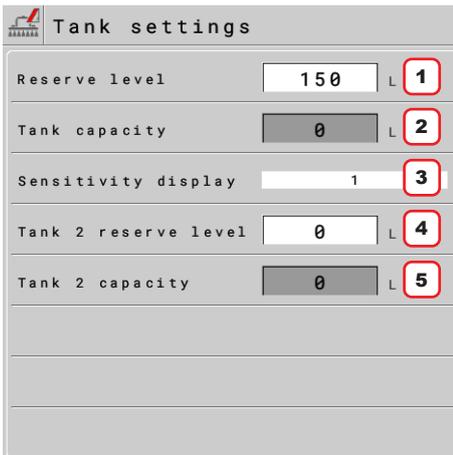


Fig. 51

- 1** Indicate the reserve value under which the alarm is triggered.
The tank alarm is triggered when, during spraying, the tank level falls below the set value (enable the appropriate function in the **Info and alarms** menu, par. 12.3).
For the procedure to be followed when an alarm occurs, please refer to par. 17.3.
- 2** Indicate tank capacity.
WHEN THE VALUE IS ON GRAY BACKGROUND, IT CANNOT BE CHANGED. In this case the level sensor is installed and a tank profile is present in the IBX100 or a tank calibration is required.
- 3** Select the tank volume display step from those proposed: **1 / 5 / 10 / 25 / 50 / 100**.
The **Sensitivity display** is **ONLY** present when entering in **Home > Data and settings > Implement settings > Basic settings > Tank level source > Single tank level**
- 4** Indicate the tank 2 reserve value under which the alarm is triggered.
The tank alarm 2 is triggered when, during spraying, the tank level falls below the set value (enable the appropriate function in the **Info and alarms** menu, par. 12.3).
For the procedure to be followed when an alarm occurs, please refer to par. 17.3.
- 5** Indicate tank 2 capacity.
WHEN THE VALUE IS ON GRAY BACKGROUND, IT CANNOT BE CHANGED. In this case the level sensor is installed and a tank profile is present in the IBX100.
The system allows displaying the status of another tank if another level sensor is installed (par. 18.4).

11.9 Home > Data and settings > Implement settings > Hydraulic functions

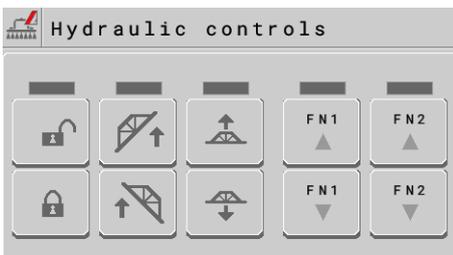
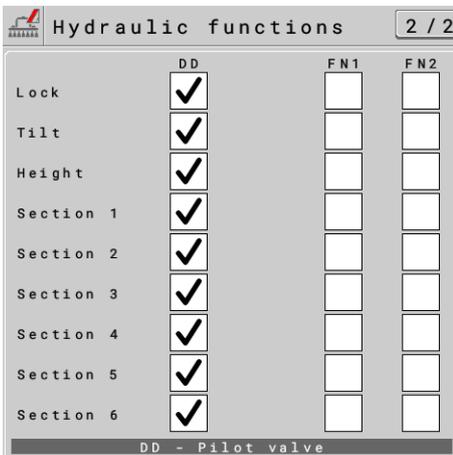
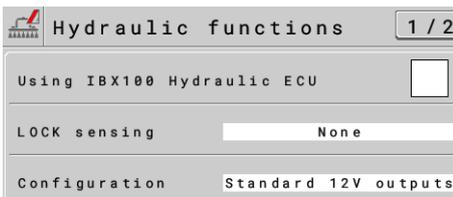


Fig. 52

- 1** It allows:
 - transferring treatment status information to the IBX100 Hydraulic Isobus.
 - transferring boom locking cylinder status information to the IBX100 Hydraulic Isobus.
- 2** It allows indicating the presence and logic of the sensor detecting the presence of boom locking cylinder status (**None / LOCK = Switch open / LOCK = Switch closed**).
CAUTION:
 - **Function available on IBX100 Hydraulic Isobus Arag from SW versions newer than 1.3.X;**
 - **The lock sensor must be installed (par. 18.4 on page 76).**
- 3** Select the control mode of the hydraulic outputs installed on the farming machine:
 - **Standard 12V outputs:** ON/OFF motion control of the DD valve.
 - **PWM flow control:** PWM control of an hydraulic output.
 - **Quad PWM output:** PWM control of four hydraulic outputs.

 **Function ONLY available with the system configured in mode "Section valves" and System configurations > Auxiliary inputs > Hyd 7 / 9 (par. 15.5).**
- 4** It allows multiple boom movements to be grouped into two touch buttons named FN1 and FN2.

 **Function ONLY available with the system configured in mode "Section valves" and System configurations > Auxiliary inputs > Hyd 7 / 9 (par. 15.5).**

	Goes back to main screen		Goes back to previous menu, or scrolls the pages of a menu (previous page)		Quits without confirming the changes		Cancel
	Saves the changes to current page		Scrolls the pages of a menu (next page)		Saves the changes		Exits
							Confirm

11.10 Home > data and settings > implement settings > Device calibration

Allows starting calibration for the devices connected to the VT.

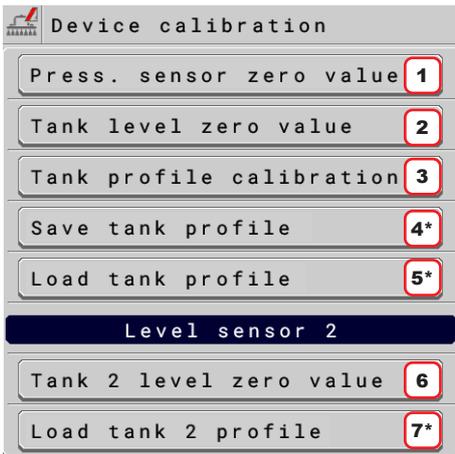


Fig. 53

1 allows performing the zero calibration of the pressure sensor (par. 11.10.1) if enabled in **Home > Data and settings > Implement settings > Basic settings > Tank level source > Single tank level**.

2 allows performing the zero calibration of the level sensor (par. 11.10.2).

3 allows performing the calibration of the tank profile(par. 11.10.3).

4* allows saving the calibration curve of the tank profile on the File server (par. 11.10.4).

5* allows loading on IBX100 the calibration curve of the tank profile on the File server (par. 11.10.5).



to view the curve just loaded, it is necessary to restart the IBX100 as described in the paragraph 12.7.

6 allows performing the zero calibration of the level sensor 2 (par. 11.10.2).

7* allows loading on IBX100 the calibration curve of the tank 2 profile on the File server (par. 11.10.5).




to view the curve just loaded, it is necessary to restart the IBX100 as described in the paragraph 12.7.



***The button is visible only if the VT supports the ISOBUS File server feature.**

CONTINUES

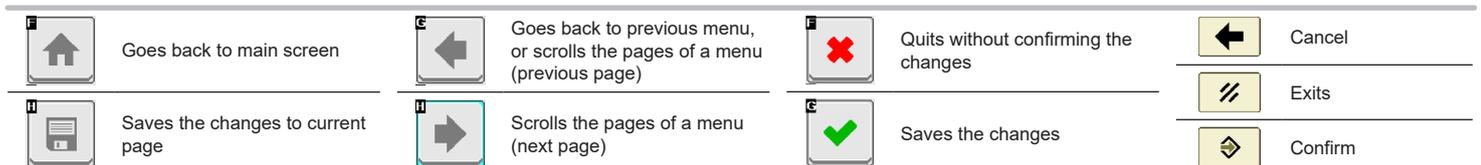

11.10.1 Home > Data and settings > Implement settings > Device calibration > Press. sensor zero value

In case a pressure value other than zero is displayed **despite the absence of pressure inside the circuit**, it is necessary to perform zero calibration of the sensor.

⚠ Before carrying out any operation disable the pump by disconnecting it from the power supply. Make sure that the pump is correctly disabled, then open the main valve and all section valves.

- 1 Start the procedure by pressing **Start**.
- 2 Press **Confirm** to reset the pressure sensor residual signal.

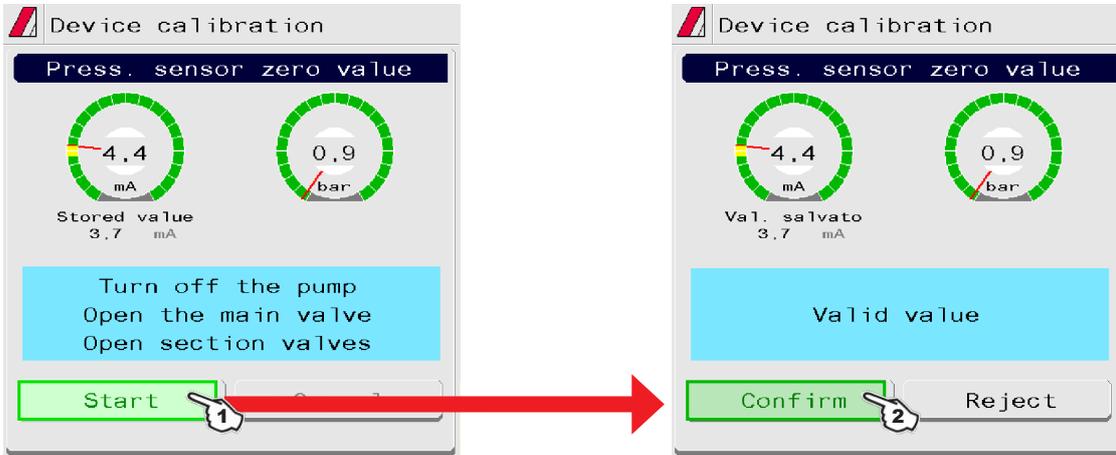


Fig. 54

**Value too low!
Value too high!
Unstable signal!**
If this alarm is displayed, anomalous pressure values have been detected: check the conditions described at the beginning of the paragraph (absence of residual pressure, pump disabled). If the problem persists, check the correct sensor connection and operation.

11.10.2 Home > Data and settings > implement settings > Device calibration > Tank level zero value / Tank 2 level zero value

👤 ALWAYS PERFORM THIS OPERATION WHEN A LEVEL SENSOR OF THE SYSTEM IS REPLACED.

If the VT detects the presence of fluid inside tank, **even if empty**, set the level sensor to zero;

👤 To use this menu the level sensor must be active (basic settings, chap. 10). PERFORM THE ADJUSTMENT WITH EMPTY TANK.

- 1 Start the procedure by pressing **Start**.
- 2 Press **Confirm** to reset the level sensor residual signal.

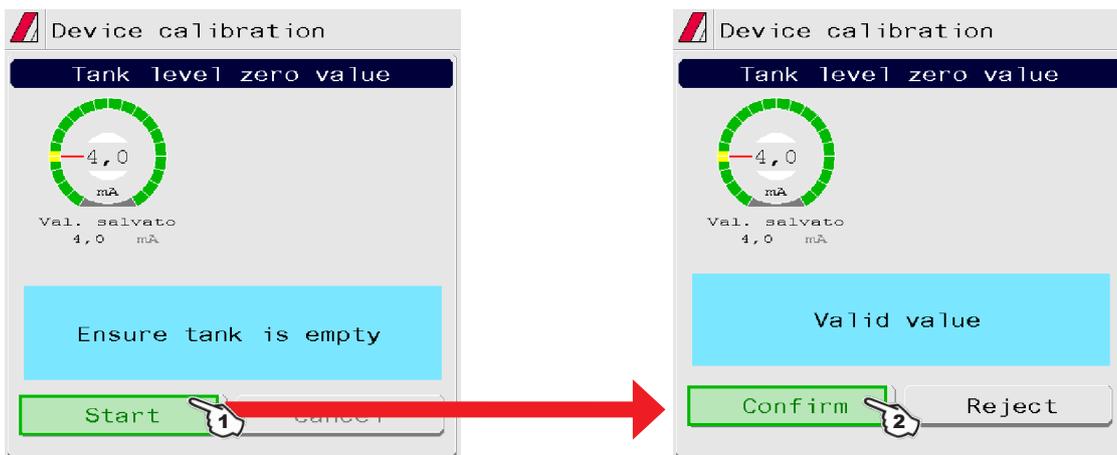


Fig. 55

**Value too low!
Value too high!
Unstable signal!**
If this alarm is displayed, anomalous values have been detected: check the conditions described at the beginning of the paragraph (absence of residual fluid, level sensor enabled). If the problem persists, check the correct sensor connection and operation.

11.10.3 Home > data and settings > implement settings > Device calibration > Tank profile calibration

The calibration of the tank profile is ONLY possible if a flowmeter is installed on the system.

! Before starting the procedure carry out the following operations:

- 1 Make sure the main control is in OFF position.
- 2 From the "Home" page, press **fn** (Functions) and disable menu **Automatic application rate**.
- 3 Fill the tank with clean water WITHOUT ADDING CHEMICAL SUBSTANCES. The tank must be full.
Visually check the reached level.
- 4 Set the output to the maximum value by operating the regulating valve switch (nearly 7 s).
THE FLOWRATE MUST BE WITHIN THE FLOWMETER OPERATING RANGE.
- 5 Start the procedure by pressing **Start**.
- 6 Start the spraying system: open, in succession, all section valves and the main control (**ON**).
The display will show in real time the quantity of sprayed water and the calibration status.
- 7 When the tank is empty press **Confirm** to end the procedure:
the value read by the level sensor must be lower than 5.0 mA and at least 10 liters must have been sprayed.

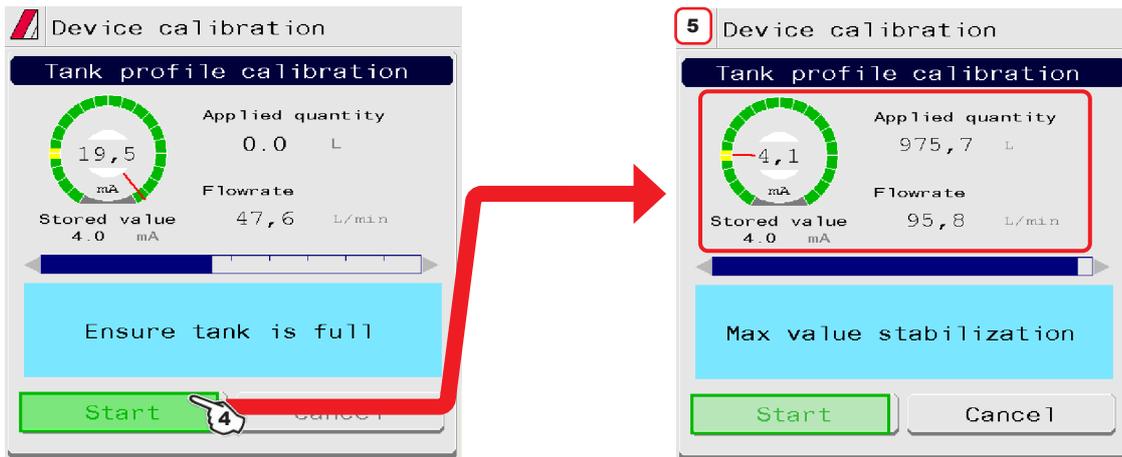


Fig. 56

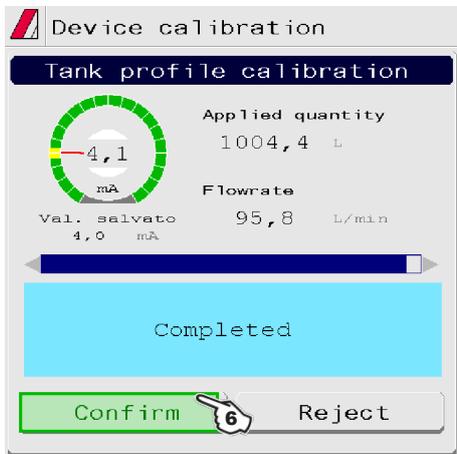


Fig. 57

In the HOME page, the icon with red background  indicates that there is NO calibration curve. When the calibration curve is present, the icon with the red background will disappear.

	Goes back to main screen		Goes back to previous menu, or scrolls the pages of a menu (previous page)		Quits without confirming the changes		Cancel
	Saves the changes to current page		Scrolls the pages of a menu (next page)		Saves the changes		Exits
							Confirm

11.10.4 Home > data and settings > implement settings > Device calibration > Save tank profile

Saves the tank profile calibration file in the IBX100 internal memory.



Press **Save tank profile** to enter the File server management menu from which you can select the folder to which to export the tank profile file (e.g. to a USB pendrive).



The button is visible only if the VT supports the ISOBUS File server feature.

1 Current folder path.
MCMC0258 is the initial folder automatically created by the client file server and refers to ARAG because 0258 is the code that identifies ARAG as the ISOBUS component manufacturer.

- 2** BACK. Goes back to the previous folder.
- 3** HOME. Returns directly to the home folder (MCMC0258) - This function may not be available in all Virtual Terminals.
- 4** SAVE. Selects the current path and accesses the file saving page.

An existing file can be overwritten by selecting it from those listed.
A blue rectangle will indicate the selected file

1 Type the name you want to assign to the tank profile file to save.
DO NOT CHANGE THE FILE EXTENSION. FILE EXTENSION MUST ALWAYS BE .pro
If the name assigned to the backup file to be saved is the same as that of a file already present in the selected folder, **the latter will be overwritten and permanently lost.**

2 Save file: Saves the file to the external memory connected to the VT.

Fig. 58


	Goes back to main screen		Goes back to previous menu, or scrolls the pages of a menu (previous page)		Quits without confirming the changes		Cancel
	Saves the changes to current page		Scrolls the pages of a menu (next page)		Saves the changes		Exits
							Confirm

11.10.5 Home > Data and settings > Implement settings > Device calibration > Load tank profile / Load tank 2 profile

Allows importing a tank profile calibration file present in an external memory connected to the Virtual Terminal.

Press **Load tank profile / Load tank 2 profile** to enter the File server management menu from which you can select the folder from which to import the Tank profile file.

 **Buttons Load tank profile and Load tank 2 profile are visible only if the VT supports the ISOBUS File server feature. Calibration curve for Tank 2 can only and exclusively be loaded by means of Visio Isobus (from sw 1.2.x version).**

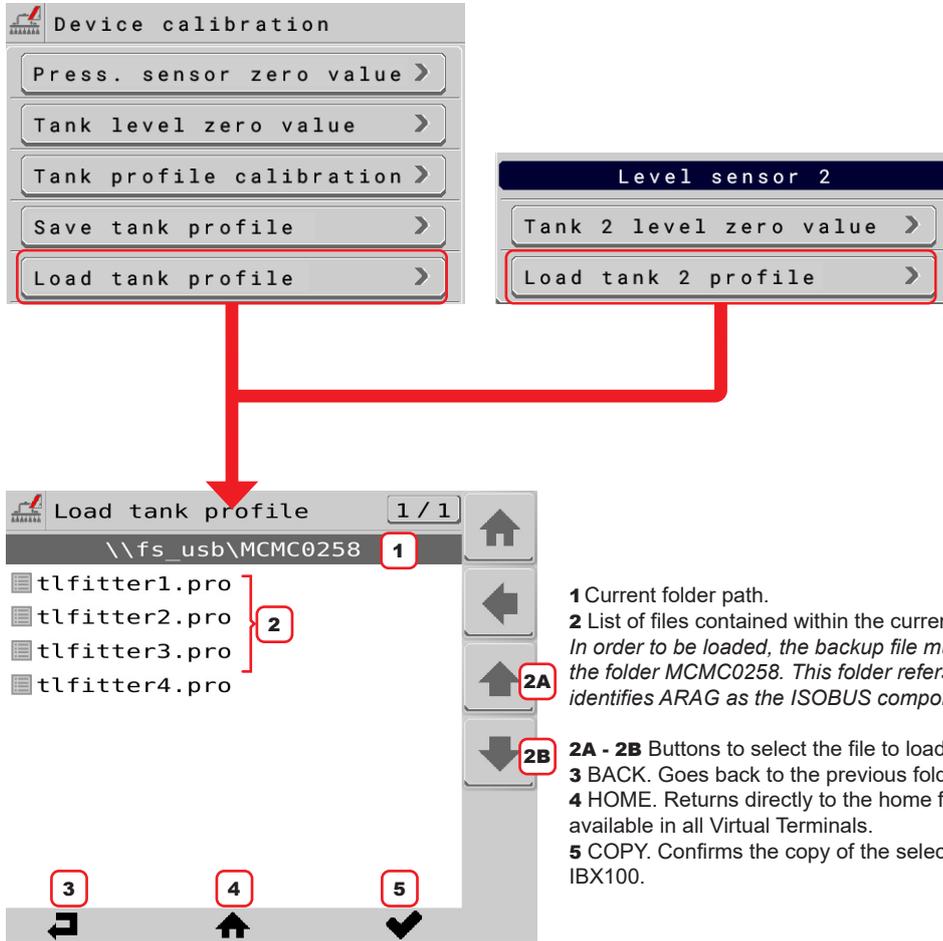

- 1** Current folder path.
- 2** List of files contained within the current folder.
In order to be loaded, the backup file must have the extension .pro and must be inside the folder MCMC0258. This folder refers to ARAG because 0258 is the code that identifies ARAG as the ISOBUS component manufacturer.
- 2A - 2B** Buttons to select the file to load.
- 3** BACK. Goes back to the previous folder.
- 4** HOME. Returns directly to the home folder (MCMC0258) - This function may not be available in all Virtual Terminals.
- 5** COPY. Confirms the copy of the selected tank profile file to the internal memory of IBX100.

Fig. 59

	Goes back to main screen		Goes back to previous menu, or scrolls the pages of a menu (previous page)		Quits without confirming the changes		Cancel
	Saves the changes to current page		Scrolls the pages of a menu (next page)		Saves the changes		Exits
							Confirm

11.11 Home > Data and settings > implement settings > Implement geometry

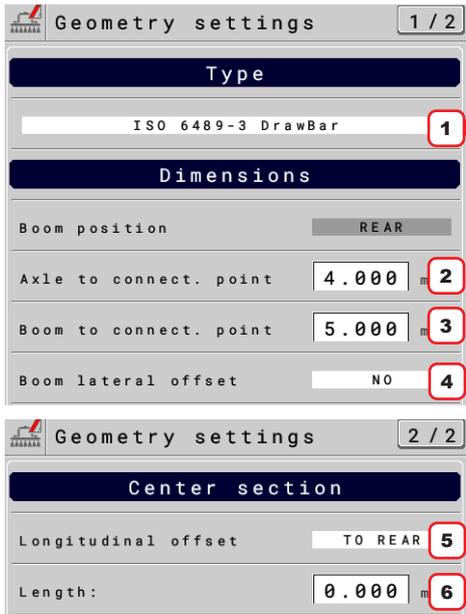


Fig. 60



Check Virtual Terminal settings: if a specific menu is available (varying based on your VT) to program machine geometry, it has the priority over the ECU menu.

1 Select the type of implement connection.

ISO 6489-3 DrawBar
Unknown
ISO 6489-3 DrawBar
ISO730 3 point semi-mount
ISO730 3 point mounted
ISO6489-1 Hitch hook
ISO6489-2 Clevis coupl. 40
ISO6489-4 Piton coupling
ISO6489-5 CUNA coupling
ISO 24347 Ball type hitch

2 - 3 Enter the selected implement dimensions.

4 Available options **NO / LEFT / RIGHT**:

setting **LEFT / RIGHT** enables item **Boom lateral offset**, where the actual value in m of the boom lateral offset can be entered.

5 Allows entering the distance of the central boom offset with respect to the wing fitting point, available options: **NO / TO REAR / TO FRONT**.

6 Setting **TO REAR / TO FRONT** in item 5 enables item **Length**, where the value in m of the actual longitudinal offset with respect to the wing fitting point can be entered.

Axle to connect. point

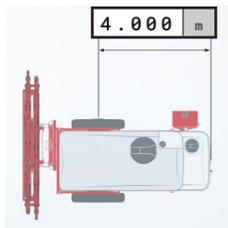


Fig. 61

Boom to connect. point

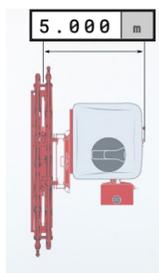


Fig. 62

Boom lateral offset


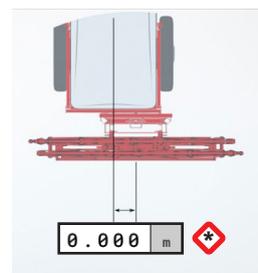



Fig. 63

Boom lateral offset

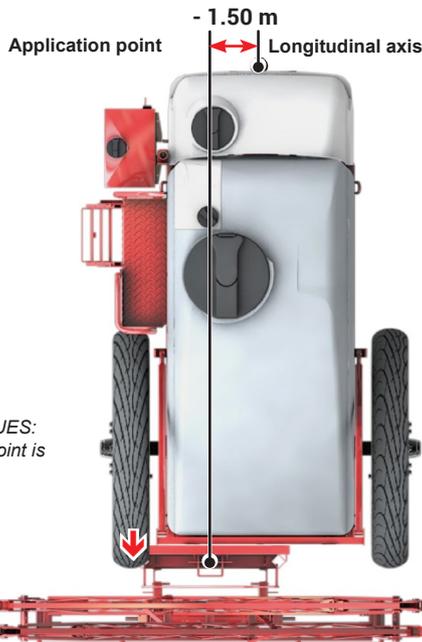

NEGATIVE VALUES:
the application point is to the left of the longitudinal axis

Fig. 64

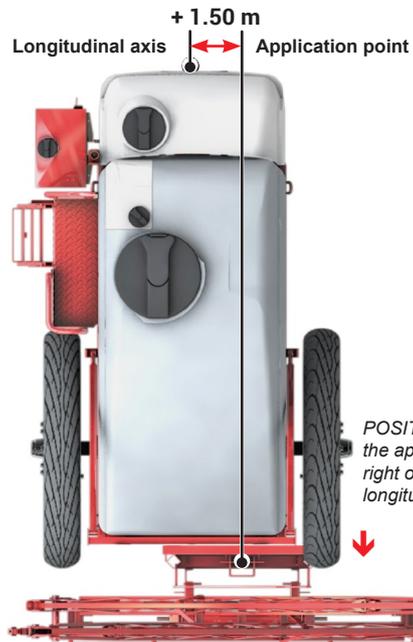

POSITIVE VALUES:
the application point is to the right of the longitudinal axis

Fig. 65

Longitudinal offset



Fig. 66

11.12 Home > data and settings > implement settings > System configurations

Set the device system options.

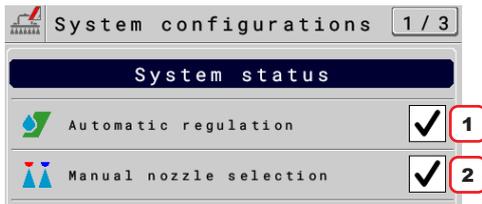


Fig. 67

SYSTEM STATUS

1 The setup of this item makes **visible / invisible** the **Application rate regulation** function of the **Automatic functions** menu (par. 15.3.1).

2 The setup of this item enables nozzle manual selection.

The item is present only if

- in **Basic settings** the **Sprayer technology > Valves, Boom settings > Dual** options are active and in active **Preset** two nozzles are selected.
- in **Basic settings** the **Sprayer technology > Seletron** options are active,

Spraying point type > 2 or 4.

Manual nozzle selection

Automatic nozzle selection

Nozzle selection modes are described in par. 15.3.2 Home > Automatic functions > Nozzles selection.

SPRAYING REMOTE CONTROL

3 Select the type of spraying remote control connected to the VT.

None (DEFAULT)

Spraying disabled (ECU)

Allows managing the external general control connected to the IBX100.

- MAIN CONTROL ON: Open contact
- MAIN CONTROL OFF: Closed contact

Spraying enabled (ECU)

Allows managing the external general control connected to the IBX100.

- MAIN CONTROL ON: Closed contact
- MAIN CONTROL OFF: Open contact

Spraying enabled (Tecu)

allows managing the external general control through a Tecu device (ref. to relevant instruction manual).

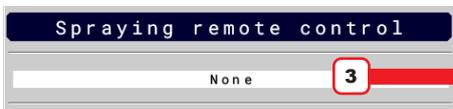 


Fig. 68

REMOTE DEVICES

4 The VT can access the functions of the connected device (ref. to relevant instruction manual).

None (DEFAULT)

Visio-Isobus

The VT displays in real time the tank filling (par. 15.4) carried out with the connected Visio ISOBUS.

Vision functions available:

- Filling check with flowmeter.
- Filling check with level sensor.

It allows the transfer of a system backup and of the tank profile between IBX100 and a USB pendrive or vice versa.

Syncro-Isobus

From the dedicated page, the user can remotely manage the functions of Syncro (par. 16.2).



Fig. 69

CONTINUES

	Goes back to main screen		Goes back to previous menu, or scrolls the pages of a menu (previous page)		Quits without confirming the changes		Cancel
	Saves the changes to current page		Scrolls the pages of a menu (next page)		Saves the changes		Exits
							Confirm

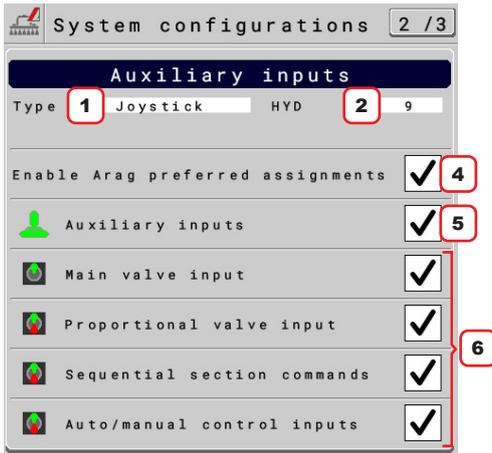


Fig. 70

AUXILIARY INPUTS

1 Select the type of auxiliary input:

Direct / Sequential / Joystick / Tractor joystick / Hydraulic only.

2 Select the number of hydraulic controls of the Auxiliary Input connected to the VT: **0 / 7 / 9.**
If the hydraulic valve management is handled by IBX100 Hydraulic Isobus, select zero as HYD value.



3A Available ONLY if Sequential is selected in the previous item.

If the sequential panel has the control of the center section (total number of sequential switches 2 + 1 direct) choose **Yes**.

If it does not have it (total number of sequential switches 2) choose **No**.



3B Available ONLY if the Direct option is selected in the previous item.

Indicate the number of section switches. Available options: **0 / 4 / 5 / 6 / 7 / 9 / 11 / 13.**



Tractor joystick: this is used in case of Isobus Auxiliary Input with single inputs (default auxiliary inputs disappear).



Hydraulic only: select this function to connect a panel with hydraulic functions.

4 Enable / Disable automatic function assignment for the connected Auxiliary Input (NOT available for the Tractor joystick auxiliary input).

Option disabled : button allows removing customized auxiliary functions.

5 Enable / disable the auxiliary input selected in point 1.

6 Enable / Disable the displayed inputs, linked to the selected Auxiliary Input type.

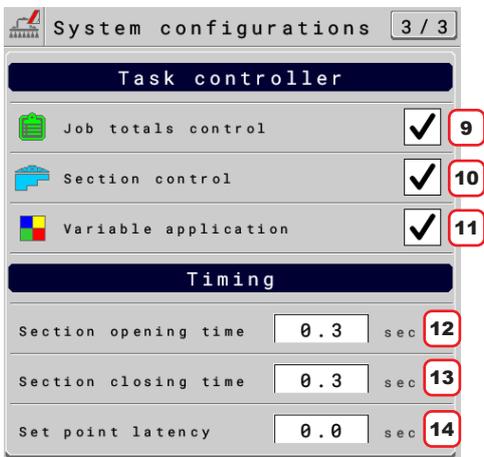


Fig. 71

TASK CONTROLLER

The VT can make some functions through the TC, ONLY IF THEY ARE enabled in this screen:

9 Enable / disable the job total counter control.

10 Enable / Disable the automatic section control.

11 Enable / disable the use of prescription maps for treatments with variable application.


TIMING

The correct management of valve timing, set on implement OP (IBX100), may vary based on the connected VT.

12 Indicate the time between the moment when the command is sent to the valves and the actual moment in which product output starts.

13 Indicate the time between the moment when the command is sent to the valves and the actual moment in which product output stops.

14 Adjustment parameter for variable applications (with the use of prescription maps): this datum is used to indicate the advance time of application rate adjustment when the machine approaches the area changeover of the prescription map.

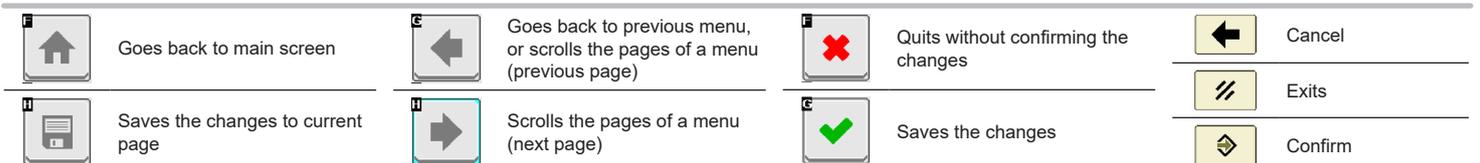

11.13 Home > data and settings > implement settings > Rate controller

Allows configuring the activation of the alarms relating to application rate display and regulation:

1 / 2

Rate regulation cutoff:

- **Regulation cutoff:** Indicate the percentage of tolerance relative to the application rate target beyond which the control valve no longer regulates because it considers it to have been reached.

Rate display cutoff:

- **Display cutoff:** Indicate the rate display tolerance percentage beyond which the alarm is triggered and the system displays the actual rate value. Within the set percentage, the system continues displaying the preset rate even if different from the actual one.

2 / 2

Regulation settings:

- **Valve:** displays the type of selected control valve.
- **Aggressiveness:** Checks the power applied by the selected valve to regulate the system flow.
- It reduces aggressiveness. / It increases aggressiveness.

The ideal calibration is achieved when the application rate remains constant even with minor variations in driving speed.

11.14 Home > data and settings > implement settings > "Fence"

Allows setting the characteristic data of the "Fence" nozzle.



Fig. 72

1 - 2 Set the reference flowrate and pressure for the "Fence" nozzle. These data allow the correct adjustment of the application rate when "Fence" nozzles are enabled.

11.15 Home > Data and settings > Implement settings > Flowmeter presets

Allows setting flowmeter data.

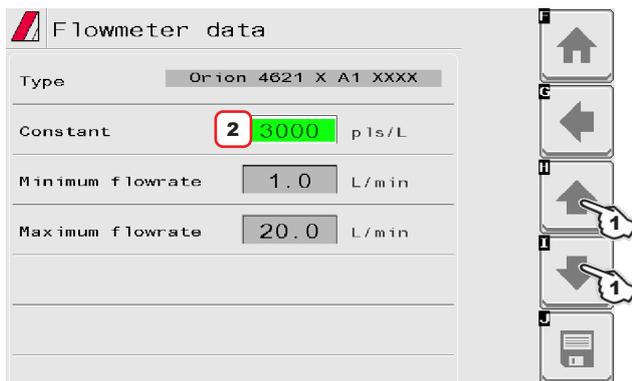


Fig. 73

- 1** Select the flowmeter to be set with keys.
- 2** Set the **Constant**.

The items **Minimum flowrate** and **Maximum flowrate** can be modified only when the option **Other** is enabled.

List of available flowmeters and preset data:

ORION FLOWMETERS

Type	Constant		Minimum flowrate		Maximum flowrate	
	pls/l	pls/gal	l/min	GPM	l/min	GPM
4621 x A0 xxxx	6000	22710	0.5	0.10	10	2.6
4621 x A1 xxxx	3000	11355	1	0.30	20	5.3
4621 x A2 xxxx	1200	4542	2.5	0.70	50	13.2
4621 x A3 xxxx	600	2271	5	1.30	100	26.4
462x A4 xxxx	300	1135	10	2.60	200	52.8
4622 x A5 xxxx	150	568	20	5.30	400	105.7
4622 x A6 xxxx	100	378	30	7.90	600	158.5
Other	625	2366	10	2.60	200	52.8

WOLF FLOWMETERS

Type	Constant		Minimum flowrate		Maximum flowrate	
	pls/l	pls/gal	l/min	GPM	l/min	GPM
462 x 2 xxx	1025	3880	2.5	0.7	50	13.2
462 x 3 xxx	625	2366	5.0	1.3	100	26.4
462 x 4 xxx	250	946	10.0	2.6	200	52.8
462 x 5 xxx	132	500	20.0	5.3	400	105.7
462 x 7 xxx	60	227	40.0	10.6	800	211.3

Goes back to main screen	Goes back to previous menu, or scrolls the pages of a menu (previous page)	Quits without confirming the changes	Cancel
Saves the changes to current page	Scrolls the pages of a menu (next page)	Saves the changes	Exits
			Confirm

12 DATA AND SETTINGS

12.1 Data and settings > Manage presets

From this menu:

- Set 8 different spraying configurations: PRESET SETTING, Fig. 74.
- Set 2 different nozzle configurations depending on the type of valves installed:
 - VALVES WITH GEARMOTOR (SINGLE BOOM) OR SINGLE SELETRON, Fig. 76.
 - VALVES WITH DUAL BOOM GEARMOTOR OR WITH TWIN OR FOURFOLD SELETRON VALVES on page 37.
- Activate one configuration among the preset ones: PRESET ACTIVATION on page 38.
- Consult job data of the spraying selected: Totals - Averages on page 38.

PRESET SETTING

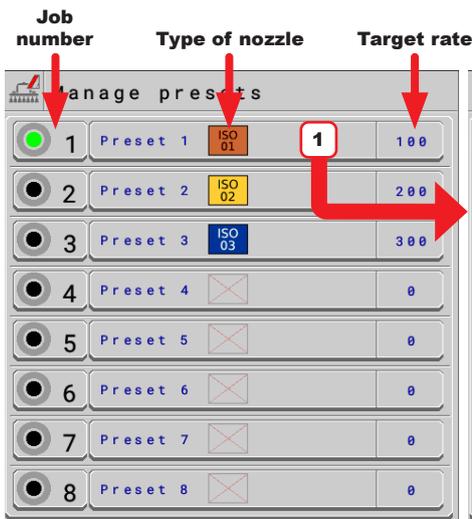


Fig. 74

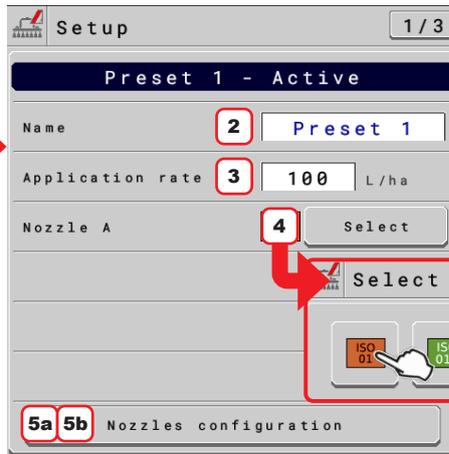


Fig. 75

Features to set for each **Preset**:

- 1 Select the **Preset** to be set.
- 2 Type in the name.
- 3 Enter the application rate value (L/Ha).
- 4 Select the type of nozzle among the suggested ones:
12 types of ISO nozzles and 6 customized nozzles.

Nozzle type: thanks to multiple nozzle holders (twin or fourfold Seletron units), it changes the number of nozzles to be programmed (2 or 4).

5a Data and settings > Manage presets > Setup > Nozzles configuration:
VALVES WITH GEARMOTOR (SINGLE BOOM) OR SINGLE SELETRON



Fig. 76

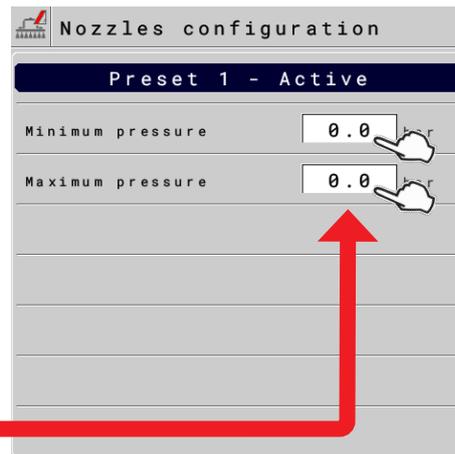


Fig. 77

This menu has two purposes:

- Setting the function range of the control valve
If you set pressure values, the control valve operates **ONLY** in that pressure range. Below the minimum value and above the maximum value it no longer regulates. The corresponding symbols are displayed on the job page (figure a on page 58):

Minimum pressure not reached

Maximum pressure exceeded

This function can be activated even if the pressure sensor is not set.

- Generating an alarm
Set the pressure limits for the selected nozzle and enable the appropriate function of the **Alarms** menu (ref. **3** Fig. 89 on page 40) if you want the system to generate an alarm when the nozzle is outside the set limits.

CONTINUES **5b**

	Goes back to main screen		Goes back to previous menu, or scrolls the pages of a menu (previous page)		Quits without confirming the changes		Cancel
	Saves the changes to current page		Scrolls the pages of a menu (next page)		Saves the changes		Exits
							Confirm

5b Data and settings > Manage presets > Setup > Nozzles configuration:
VALVES WITH DUAL OR SINGLE BOOM GEARMOTOR WITH TWIN OR FOURFOLD SELETRON VALVES



Fig. 78

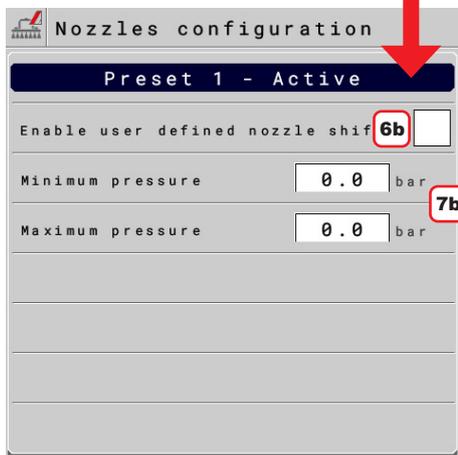


Fig. 79

6b Disabling the menu:

Menu disabled for Preset 1

7b Set the minimum and maximum control PRESSURE of the system.

This menu has two purposes:

- Setting the function range of the control valve
- If you set pressure values, the control valve operates ONLY in that pressure range. Below the minimum value and above the maximum value it no longer regulates. The corresponding symbols are displayed on the job page (figure a on page 58):

Minimum pressure not reached

Maximum pressure exceeded

This function can be activated even if the pressure sensor is not set.

- Generating an alarm

Set the pressure limits for the selected nozzle and enable the appropriate function of the **Alarms** menu (ref. **3-4** Fig. 89 on page 40) if you want the system to generate an alarm when the nozzle is outside the set limits.

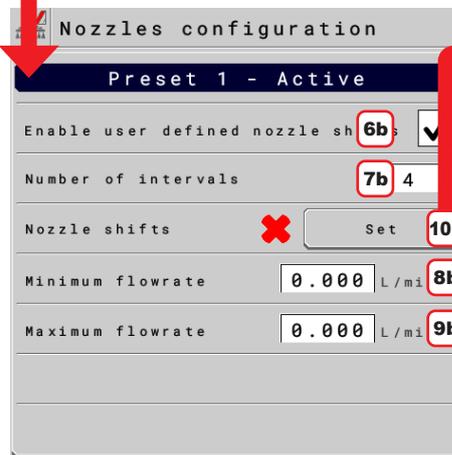


Fig. 80

6b Make the menu active for configuration:

Menu enabled for Preset 1

7b Indicate the number of customized ranges.

8b Set the FLOWRATE of the regulating valve operating range for your system. You must enter the flowrate value of the nozzle you are using (par. 11.5 Home > data and settings > implement settings > Nozzle data).

In order to obtain a more reactive system, it is possible to enter a flowrate value slightly lower than the nominal one of the nozzle.

Below the minimum flowrate entered, the system will not regulate.

9b Set the maximum FLOWRATE of the regulating valve operating range for your system.

You must enter the sum of the minimum flowrate (par. 11.5 Home > data and settings > implement settings > Nozzle data) and the flowrates of the selected nozzles (Fig. 81) (ref. **3** Fig. 47 on page 24). Above the maximum flowrate the system does not regulate.

The reference value can be found in the ISO standard nozzle tables and is relative to a pressure of 3 bar.

10b Select the **Nozzle shifts** menu to program nozzle combinations.

Nozzle shifts

Optimizes nozzle automatic selection: it allows setting up one nozzle combination, using ONLY SOME in relation to a flowrate range.

Each range has a specific nozzle combination and an exchange flowrate that, once exceeded, will make the computer use the combination of the next range:

11b Select the nozzles to be used among the suggested ones for each range: should you disable one or more nozzles, select them using arrow keys (one at a time)

12b Program the flowrate limit of the corresponding range. Set all ranges.

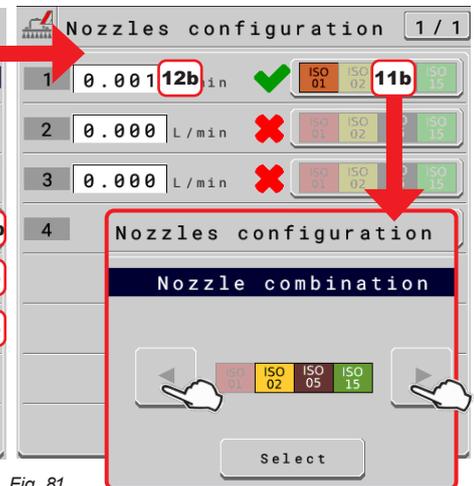


Fig. 81

PRESET ACTIVATION

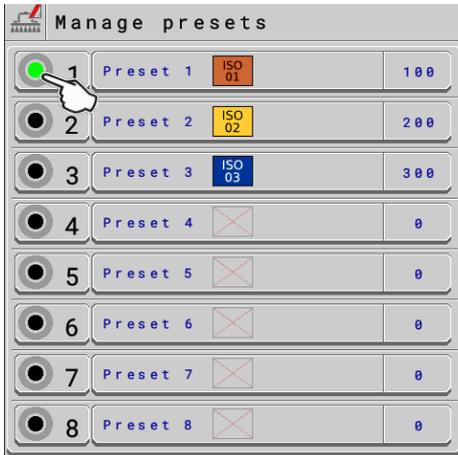


Fig. 82

CONSULTATION OF JOB DATA OF THE SELECTED PRESET

- Select the **Preset**.
- Use key **1** to scroll pages and key **2** to delete the job data;
- WARNING: total counters and average values are simultaneously deleted.**

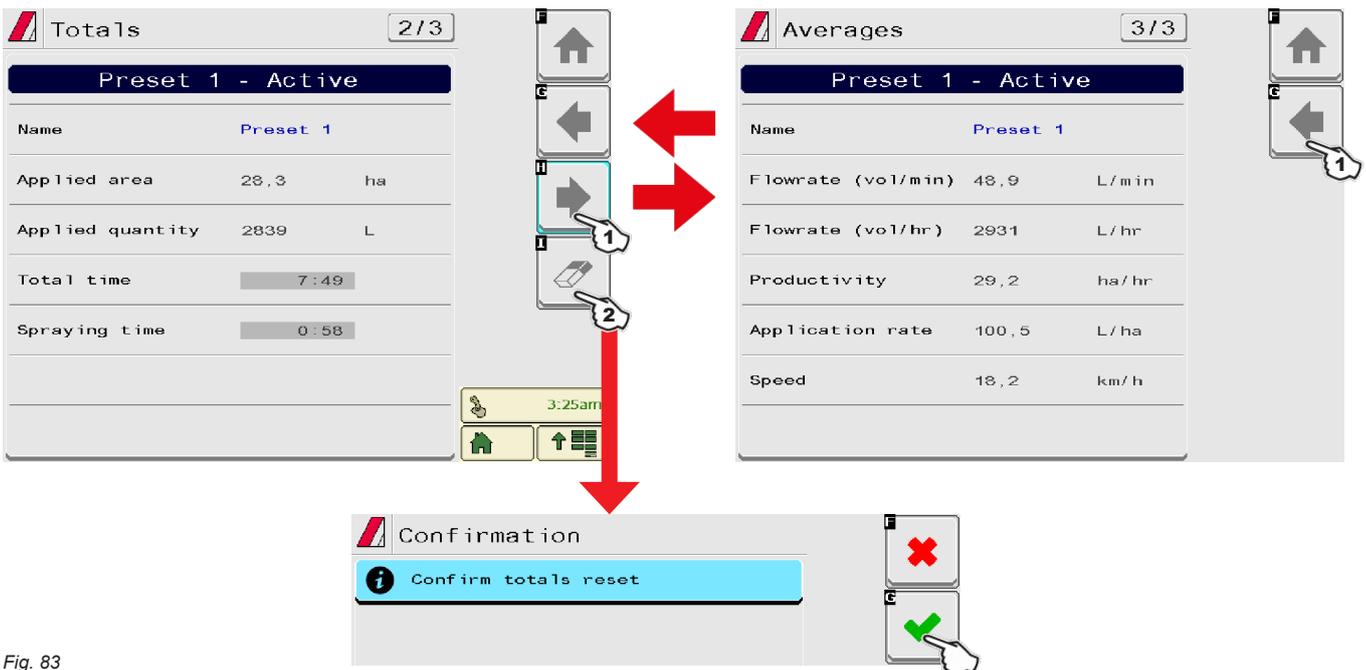


Fig. 83

	Goes back to main screen		Goes back to previous menu, or scrolls the pages of a menu (previous page)		Quits without confirming the changes		Cancel
	Saves the changes to current page		Scrolls the pages of a menu (next page)		Saves the changes		Exits
							Confirm

12.2 Data and settings > Working parameters

Set the farming machine job limits.

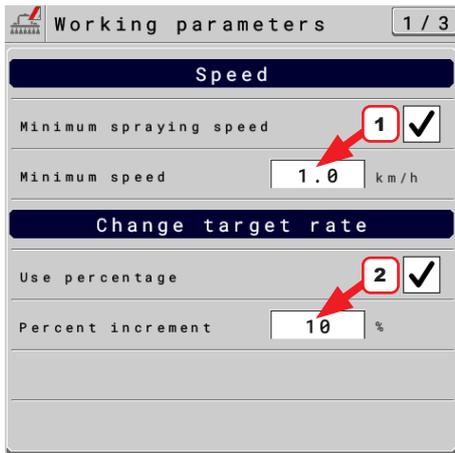


Fig. 84

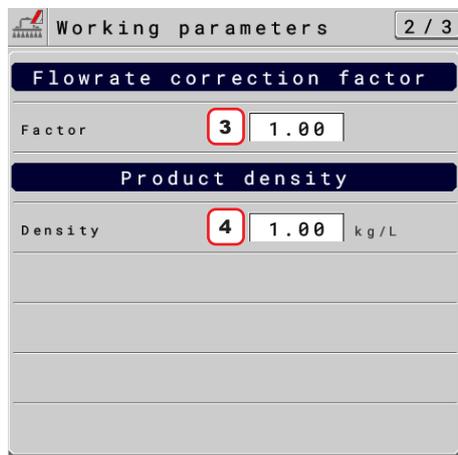


Fig. 85

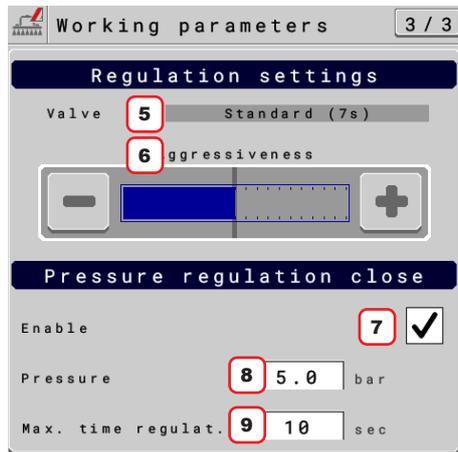


Fig. 86

SPEED

1 To configure the items on this menu, you must enable the speed limit. Set the minimum spraying speed: IBX100 Sprayer closes the main valve when the tractor speed is lower than the set value.

CHANGE TARGET RATE

2 Set the target rate change mode and increment value.

ENABLED: percentage increment

DISABLED: rate increment in l/ha

The target rate change is carried out with the job function described in par. 15.1.

FLOWRATE CORRECTION FACTOR

3 When using a paddle flowmeter and the sprayed fluid has a different viscosity than that of water, the VT could display wrong measurements; to correct them change the flowrate correction factor:

- if at the end of the spraying the tank still contains fluid, reduce the factor;
- if the fluid finishes before the job has ended, increase the factor.

Flowmeters of the ORION series (code 462xxx) are not affected by the viscosity difference of the fluids: set the factor to 1.00.

PRODUCT DENSITY

4 If the sprayed fluid is lighter than water, the device may indicate wrong measurements; to correct this measurement, edit the sprayed liquid weight, referred to 1 liter of product. **A tank level sensor must be installed.**

REGULATION SETTINGS

5 Displays the type of selected regulation valve.

6 Checks the power applied by the selected valve to regulate the system flow.

- It reduces aggressiveness.
- + It increases aggressiveness.

The ideal calibration is achieved when the application rate remains constant even with minor variations in driving speed.

PRESSURE REGULATION CLOSE

7 Function of the regulating valve during closing


ENABLED: The system tries to reach the set pressure acting on the regulating valve (AUTO mode enabled with main valve closed) ONLY for the time entered (**9**), after which the system does not intervene on the valve anymore.

DISABLED

8 Set the pressure value to be reached when the sections are closed.

9 Maximum time needed by the regulating valve to bring the boom to the set pressure.

This function can be activated only if the pressure sensor is set in the basic settings and installed on the implement.

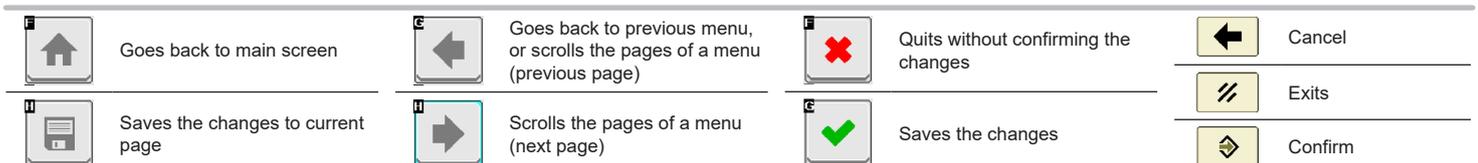

12.3 Data and settings > Info and alarms

From this menu you can enable alarm visual and acoustic notifications when the related event occurs.

Alarm enabled / Alarm disabled.

For the procedure to be followed when an alarm occurs, please refer to par. 17.3 Error messages.



APPLICATION RATE ALARM

1 Alarm active when user changes the application rate during treatment (par. 15.1).

TANK ALARMS

2 One of the two alarms is enabled if the (minimum or maximum) tank level exceeds the set values (par. 11.8).

NOZZLE FLOWRATE

3 Outside the range set in the menus **Minimum flowrate / Maximum flowrate** (Fig. 80 on page 37), the VT triggers an alarm.

The items are only present if the following options are active in Basic settings:

- **Sprayer technology > Seletron together with Spraying point type > 2 / 4**
- **Sprayer technology > Valves together with Boom settings > Dual (dual bar).**

Fig. 87



FLOWMETER ALARMS

1 Outside the range set in the **Minimum flowrate / Maximum flowrate** menus (par. 11.2 Home > data and settings > implement settings > Flowmeters), the VT triggers an alarm.

It is essential that in the **Implement settings > Basic settings > Flowrate reference sensor** menu, the item **Flowmeter** is selected.

NOZZLE ALARMS

2 Outside the range set in the **Minimum pressure / Maximum pressure** menus related to each **single nozzle** (par. 11.5 Home > data and settings > implement settings > Nozzle data), the VT triggers an alarm.

3* Enable/disable nozzle wear check and set the tolerance threshold in point 6*.

4* Set the threshold: the VT compares the effective flowrate read by the flowmeter and the one calculated by the pressure sensor.

When the difference between the two flowrate values exceeds the set percentage, the alarm is triggered.

* the items are available ONLY if the pressure sensor is present.

Fig. 88



ADJUSTMENT ALARMS

1 Alarm is enabled with main control ON but flowrate at zero.

2 Alarm is enabled with main control ON with machine stopped.

3 Alarms are activated if the system does not reach the set pressure limits. (Fig. 77 on page 36 and Fig. 79 on page 37).

4 Alarms are enabled if the speed does not reach the set limit values (par. 12.2).

5 Alarm is activated if the output (l/ha or GPM) is different from the set application rate (par. 12.1).

Fig. 89

CONTINUES

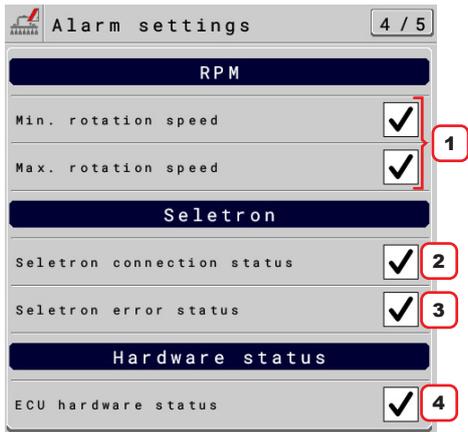


Fig. 90

RPM ALARMS

1 Outside the range set in the menus

Minimum rotation speed / Maximum rotation speed

(par. 11.7 Home > data and settings > implement settings > Rev counter), the VT triggers an alarm.

SELETRON ALARMS

Alarms relating to Seletron valves (Basic settings, chap. 10):

2 Alarm is activated when (one or more) spraying points do not respond.

3 Alarm is activated when the input voltage on one or more spraying points is too low.

HARDWARE ALARMS

4 Enable / disable ECU hardware status alarm.

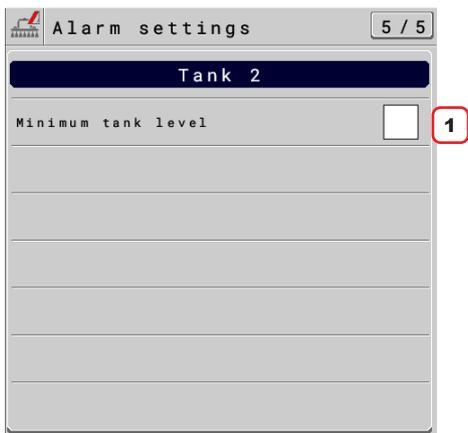


Fig. 91

TANK 2 ALARM

1 The alarm is enabled if the minimum tank 2 level exceeds the set values (par. 11.8).

12.4 Data and settings > implement settings

Consult chap. 11 Implement settings > Advanced Setup.

12.5 Data and settings > Job data

Allows consulting the spraying total data relating to applied area and job time

Job data		
User controlled job		
Name	Preset 1	
Applied area	76,8	ha
Applied quantity	14271	L
Total time	27:08	
Spraying time	2:41	
Spray efficiency	22,2	ha/hr
Flowrate	110,1	L/min
Calculated area	0,0	ha
Productivity	0,2	ha/hr

Fig. 92

12.6 Data and settings > Sprayer capability

Allows checking treatment performance based on speed, configurations and nozzles installed on the machine.

WARNING: guidance information and all accessory functions are disabled.
 Displayed items are READ-ONLY.

Fig. 93

Legend:

- The datum meets the specified criteria.
- The datum does NOT meet the specified criteria.


	Goes back to main screen		Goes back to previous menu, or scrolls the pages of a menu (previous page)		Quits without confirming the changes		Cancel
	Saves the changes to current page		Scrolls the pages of a menu (next page)		Saves the changes		Exits
							Confirm

12.7 Data and settings > System status

Allows checking the correct operation of the system. Groups several categories.



Displayed items are READ-ONLY.

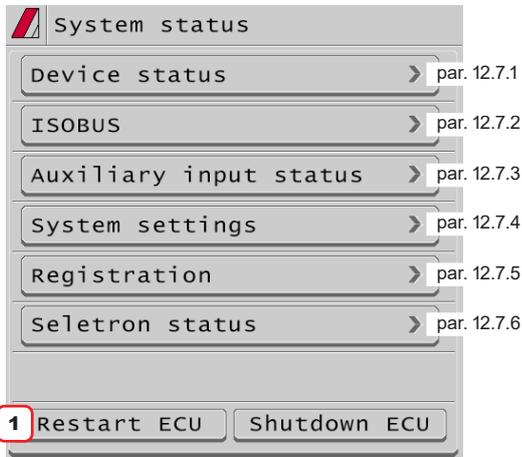


1 Press **Restart ECU** button to restart IBX100 and confirm.

Fig. 94

12.7.1 Data and settings > System status > Devices status

Displays system information.

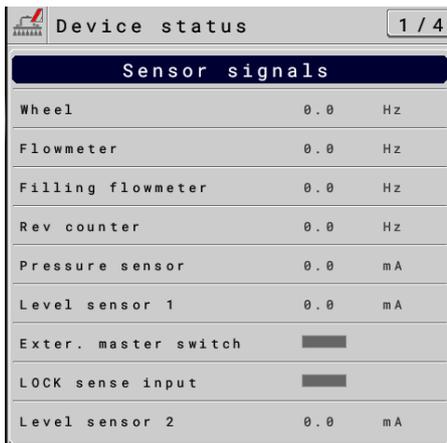

- █ Correct operation
- █ Malfunction
- █ Missing connection


Fig. 95



Fig. 96

	Goes back to main screen		Goes back to previous menu, or scrolls the pages of a menu (previous page)		Quits without confirming the changes		Cancel
	Saves the changes to current page		Scrolls the pages of a menu (next page)		Saves the changes		Exits
							Confirm

12.7.2 Data and settings > System status > ISOBUS

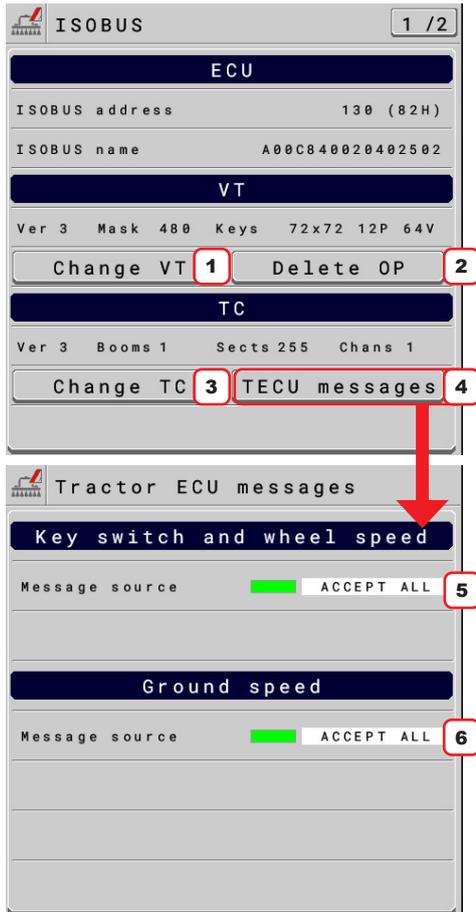

Displays information on ISOBUS protocol.

- 1 Allows changing the VT on which the OP is displayed in case more terminals are connected.
- 2 Allows deleting and reloading the ECU OP.
- 3 Allows changing the VT with which data can be exchanged through the TC in case more terminals are connected.
- 4 Allows accessing the menu for the selection of the source from which the data provided by the Tractor ECU present in the system will be received.

5 Select the source from which you wish to receive ISOBUS messages relating to system shutdown (Maintain Power) and vehicle driving speed if the latter is transmitted on the message relating to the speed of rotation of the wheel or a mechanical part of the tractor. (Home > Data and settings > Implement settings > Speed > Tractor wheel Par. 11.6).

6 Select the source from which you want to receive the ISOBUS message relevant to the vehicle driving speed if the latter is transmitted on the message relevant to the radar installed on the tractor (Home > Data and settings > Implement settings > Speed > Tractor radar Par. 11.6).


Available speed sources:

Accept all: IBX100 will use the data contained in the relevant messages, regardless of the source they come from.

TECU: IBX100 will only use the message coming from the Tractor ECU present in the system.

VT: IBX100 will only use the message coming from the Virtual Terminal present in the system.


Fig. 97

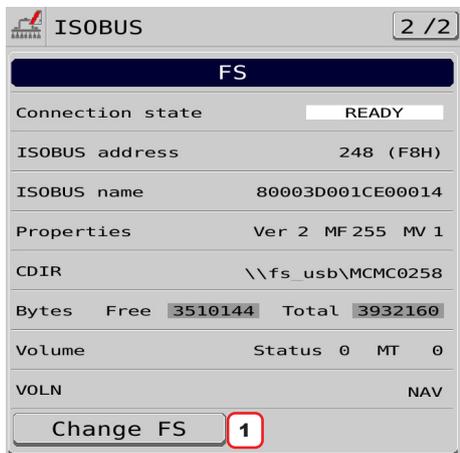


It displays information about the File Server function if it is also available in the connected Virtual Terminal.

- 1 Allows changing the File Server in case more VTs are connected.

Fig. 98

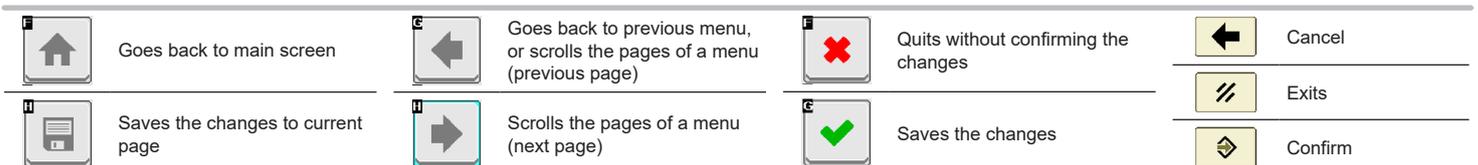


12.7.3 Data and settings > System status > Auxiliary input status

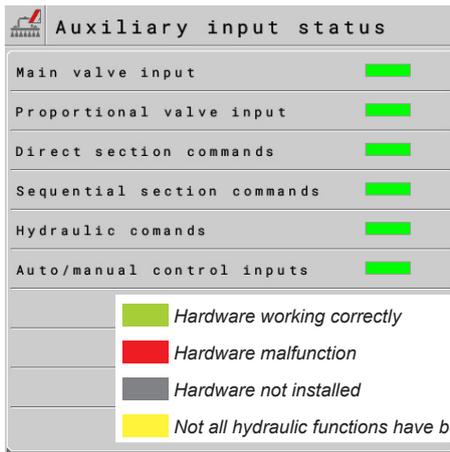


Checks the connection of the Auxiliary Input.

Fig. 99

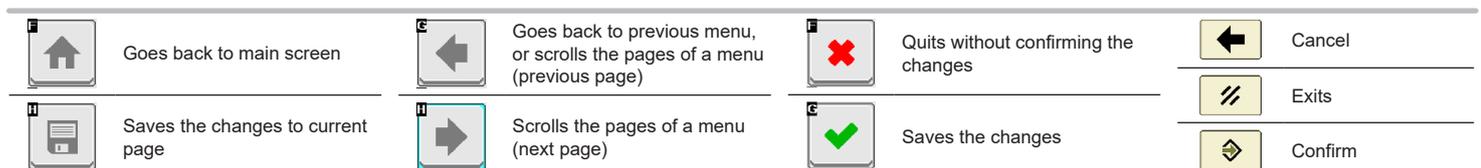

12.7.4 Data and settings > System status > System settings

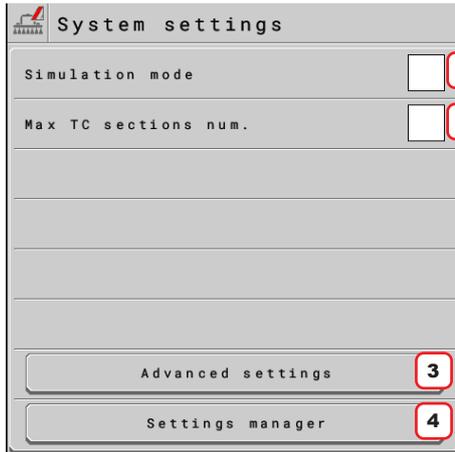


- 1 Enables/disables simulation mode (mainly used for demonstrative purposes, training, etc.)
- 2 Sets the maximum number of sections of the IBX100 that can be automatically controlled by the TC server (VT).
- 3 Allows accessing the System advanced settings (see next sub-paragraph).
- 4 Allows accessing the Settings manager page (see next sub-paragraph).

Fig. 100

Data and settings > System status > System settings> Advanced settings



- 1 Allows setting a section opening and closing delay. Available options: **Not used** / **Compensation (1a)** / **Center delay (1b)**.

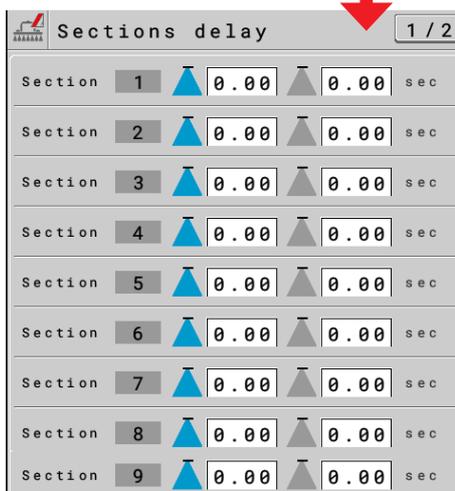

- 1a Compensation:** allows an opening and closing delay to be set individually for each section.

Fig. 101



- 1b Center delay:** allows an opening and closing delay to be set only for center section. The option is active only if your VT does not manage the boom center section Longitudinal offset geometry (set option: NO, par. 11.11 at point 5).

Fig. 102



- 2 By enabling this function (in **Technician** mode), the application rate and the nozzles of the presets can be changed in **Operator** mode.

Fig. 103

CONTINUES

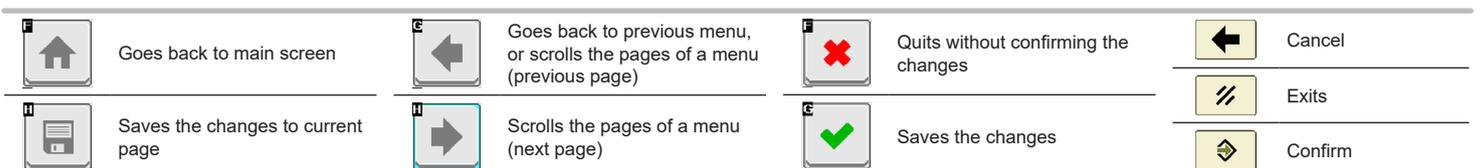




Fig. 104

Press **Save active config [ECU]** to create a backup file of the settings in use and save it to the internal memory of IBX100.



The internal memory of IBX100 CANNOT contain more than one backup file. Press Save active config [ECU] TO OVERWRITE THE PREVIOUSLY SAVED FILE WHICH WILL BE PERMANENTLY DELETED.



Fig. 105

Allows restoring the settings contained in the last saved backup file.

Press **Restore saved configuration [ECU]** to restore all settings in the previously saved backup file using the **Save active config [ECU]** button.

The IBX100 will restart.



The button is only visible if a backup file was previously created and saved to the internal memory of IBX100 using the button Save active config [ECU].



All settings in the application menu at the time of reset WILL BE PERMANENTLY LOST.

The backup file IS NOT DELETED after the reset.

CONTINUES

	Goes back to main screen		Goes back to previous menu, or scrolls the pages of a menu (previous page)		Quits without confirming the changes		Cancel
	Saves the changes to current page		Scrolls the pages of a menu (next page)		Saves the changes		Exits
							Confirm

Data and settings > System status > System settings > Settings manager > Export saved configuration [ECU]

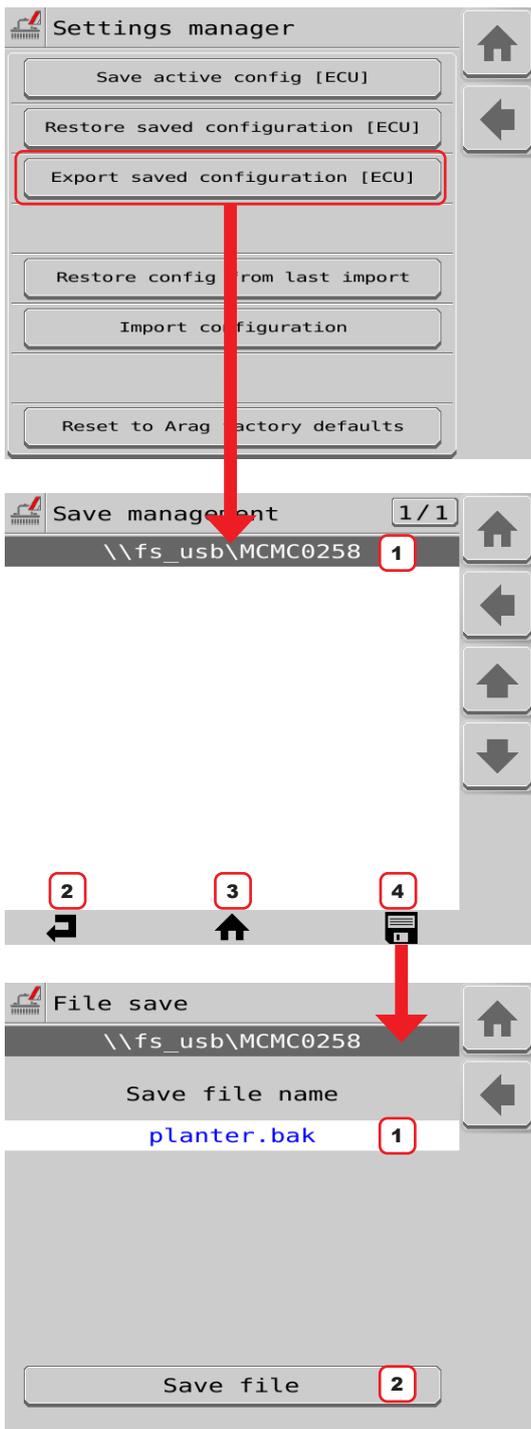


Fig. 106

Press **Export saved configuration [ECU]** to enter the File server management menu from which you can select the folder where to export the backup file (e.g. on a USB pendrive).

 **The button is visible only if the VT supports the ISOBUS File server feature.**

1 Current folder path.
MCMC0258 is the initial folder automatically created by the client file server and refers to ARAG because 0258 is the code that identifies ARAG as the ISOBUS component manufacturer.

2 BACK. Goes back to the previous folder.

3 HOME. Returns directly to the home folder (MCMC0258) - This function may not be available in all Virtual Terminals.

4 SAVE. Selects the current path and accesses the file saving page.

An existing file can be overwritten by selecting it from those listed. A blue rectangle will indicate the selected file


1 Type the name you want to assign to the backup file to save.
DO NOT CHANGE THE FILE EXTENSION. FILE EXTENSION MUST ALWAYS BE .bak
If the name assigned to the backup file to be saved is the same as that of a file already present in the selected folder, the latter will be overwritten and permanently lost.

2 Save file: Saves the file to the external memory connected to the VT.

	Goes back to main screen		Goes back to previous menu, or scrolls the pages of a menu (previous page)		Quits without confirming the changes		Cancel
	Saves the changes to current page		Scrolls the pages of a menu (next page)		Saves the changes		Exits
							Confirm

Data and settings > System status > System settings > Settings manager > Import configuration

Allows importing a backup file from an external memory connected to the Virtual Terminal.

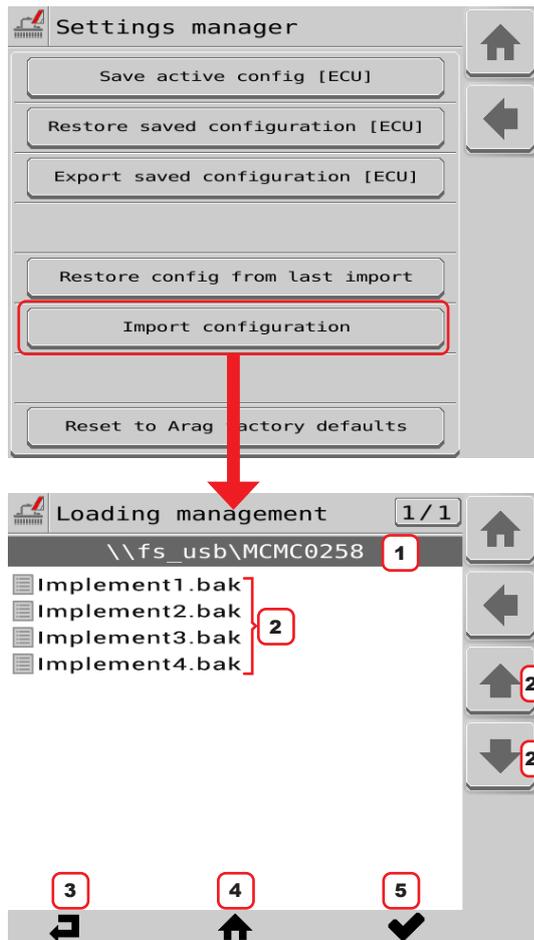

Press **Import configuration** to enter the File server management menu from which you can select the folder from which to import the backup file.

The button is visible only if the VT supports the ISOBUS File server feature.

- 1** Current folder path.
- 2** List of files contained within the current folder.
In order to be loaded, the backup file must have the extension .bak and must be inside the folder MCMC0258. This folder refers to ARAG because 0258 is the code that identifies ARAG as the ISOBUS component manufacturer.
- 2A - 2B** Buttons to select the file to load.
- 3** BACK. Goes back to the previous folder.
- 4** HOME. Returns directly to the home folder (MCMC0258) - This function may not be available in all Virtual Terminals.
- 5** COPY. Confirms the copy of the selected backup file to the internal memory of IBX100.

Fig. 107

Data and settings > System status > System settings > Settings manager > Restore config from last import.

Allows restoring the settings contained in the last imported backup file.



Press **Restore config from last import** to restore all settings in the previously imported backup file using the **Import configuration** button or through the relevant function available on VISIO ISOBUS.

All settings in the application menu at the time of reset WILL BE PERMANENTLY LOST.

The backup file IS NOT DELETED after the reset.

The button is visible only if a backup file has been previously imported via the Import configuration button (see previous paragraph) or via the appropriate function available on VISIO ISOBUS

Fig. 108

	Goes back to main screen		Goes back to previous menu, or scrolls the pages of a menu (previous page)		Quits without confirming the changes		Cancel
	Saves the changes to current page		Scrolls the pages of a menu (next page)		Saves the changes		Exits
							Confirm

Data and settings > System status > System settings > Settings manager > Reset to Arag factory defaults

Allows resetting the factory settings in the IBX100 menu.



Fig. 109

Press **Reset to Arag factory defaults** to reset the IBX100 configuration to factory settings.

 **All settings in the application menu at the time of reset WILL BE PERMANENTLY LOST.**

Any backup file previously saved via the Save active config [ECU] button or imported via the Import configuration button will not be deleted.

	Goes back to main screen		Goes back to previous menu, or scrolls the pages of a menu (previous page)		Quits without confirming the changes		Cancel
	Saves the changes to current page		Scrolls the pages of a menu (next page)		Saves the changes		Exits
							Confirm

12.7.5 Data and settings > System status > Registration

Should it be necessary to re-enter the registration code supplied with the ECU, proceed as follows.

REGISTRATION

- 1 Press to enter registration code.
- 2 Type in the code and confirm with key 3.

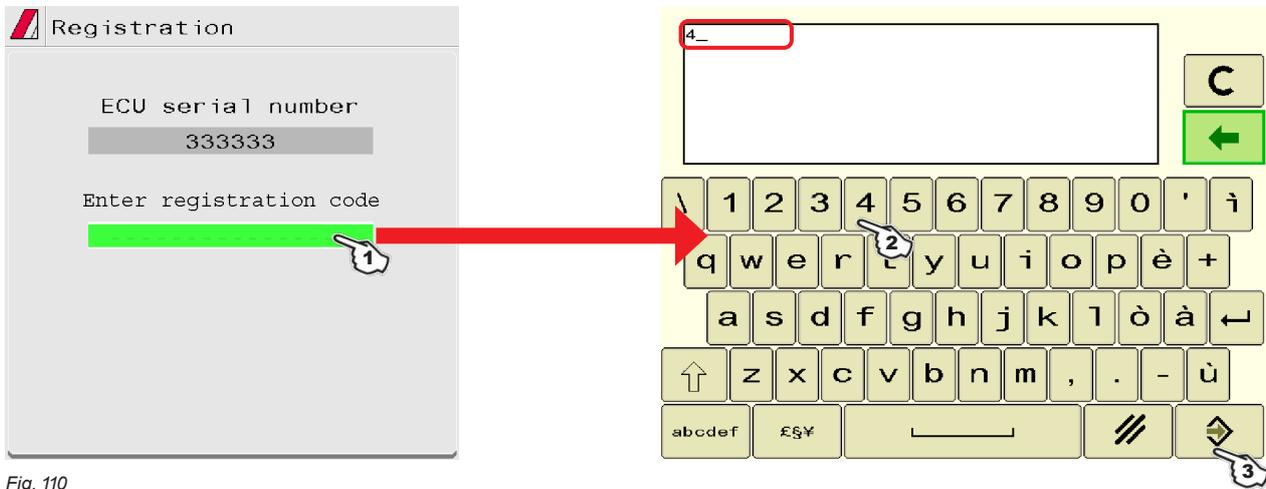


Fig. 110

12.7.6 Seletron status

This menu has two main functions:

- **INSTALLATION**
Allows to display the progress during Seletron's pairing procedure (chap. 13 Seletron connection).
- **DIAGNOSTICS**
Allows to check the connection of each single Seletron.



CARRY OUT BOTH PROCEDURES WITH RUNNING ENGINE.

SELETRON CONNECTION DIAGNOSTICS

Color legend:

- Correct operation.
- Seletron does not respond.
- Power supply error on Seletron devices: power voltage lower than the allowed value.

From screen Fig. 111 it is possible to display the relevant number.

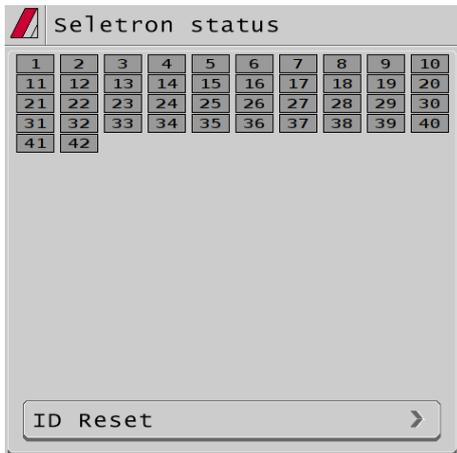


Fig. 111

If necessary, you can and repeat the pairing procedure for each Seletron device: BEFORE STARTING A NEW PAIRING PROCEDURE, YOU MUST RESET THE PREVIOUSLY ALLOCATED IDENTIFICATION NUMBERS. Use function ID Reset (par. 13.2).

	Goes back to main screen		Goes back to previous menu, or scrolls the pages of a menu (previous page)		Quits without confirming the changes		Cancel
	Saves the changes to current page		Scrolls the pages of a menu (next page)		Saves the changes		Exits
							Confirm

12.8 Data and settings > User preferences

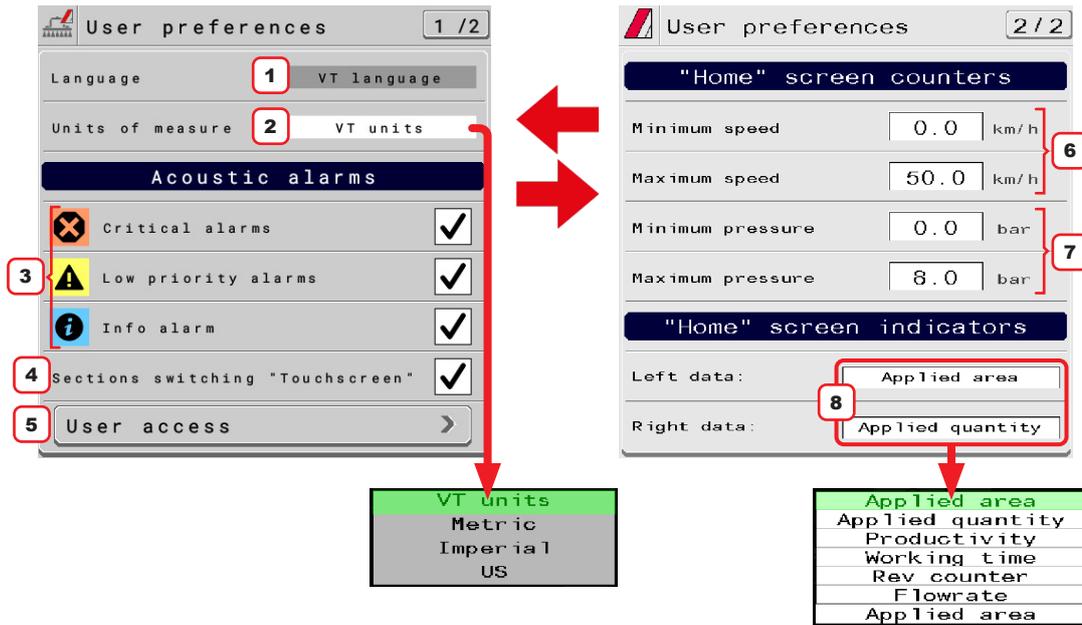


Fig. 112

1 Displays the OP use language source. To change language, edit the VT settings.

2 Set OP units of measurement.

You can select the measurement system or infer it from the VT settings.

ACOUSTIC ALARMS

3 The OP has an **Info and alarms** menu, which summarizes the active notifications for the operator (par. 12.3).

These notifications are rated by importance as **Critical alarms**, **Low priority alarms** and **Info**.

From this screen you can enable/disable audible alerts for each notification.

4 This item is only present if in the menu **Implement settings > System configurations > Auxiliary inputs > Type** an auxiliary input of the **Joystick** or **Sequential** type is selected.

- By activating this item, on the HOME job screen, the device makes available the icon for accessing the section control menu (par. 15.5.2).

- If in the **Implement settings > System configurations > Auxiliary inputs > Type** menu an auxiliary input of the **Direct** type is selected and a direct switch box is connected, the menu item is not present.

- If in the **Implement settings > System configurations > Auxiliary inputs > Type** menu an auxiliary input of the **Direct** type is selected and NO auxiliary input is connected or the auxiliary input is connected but not all its auxiliary functions are assigned, in the HOME job screen, the device makes available the icon to access the section control menu (par. 15.5.2).

USER ACCESS

5 Set OP access level.

- **Operator**: the use at this level inhibits any kind of setting. The operator only carries out the treatment.

- **Manager**: the use at this level inhibits machine feature setting, but allows treatment configuration.

You can set an access PIN code.

- **Technician**: the use at this level allows the configuration of both machine features and treatment.

You can set an access PIN code.

- **Arag-Tech**: for ARAG staff, only.

"HOME" SCREEN COUNTERS

6 Set speed range end-value ("**HOME**" screen, par. 14.1).

7 Set pressure range end-value ("**HOME**" screen, par. 14.1).

"HOME" SCREEN INDICATORS

8 Selects the job data displayed on the RIGHT / LEFT side ("**HOME**" screen, par. 14.1)

	Goes back to main screen		Goes back to previous menu, or scrolls the pages of a menu (previous page)		Quits without confirming the changes		Cancel
	Saves the changes to current page		Scrolls the pages of a menu (next page)		Saves the changes		Exits
							Confirm

13 SELETRON CONNECTION

PLEASE CAREFULLY FOLLOW THE INSTRUCTIONS PROVIDED IN THIS CHAPTER. ANY MISTAKE DURING SELETRON PAIRING/REPLACEMENT MAY LEAD TO SYSTEM OPERATION FAILURE.

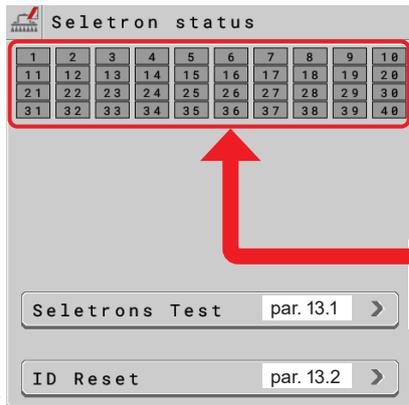


Fig. 113



BEFORE PROCEEDING, MAKE SURE YOU ARE ABLE TO HEAR THE ACOUSTIC SIGNALS COMING FROM THE MONITOR LOCATED IN THE CABIN (DOORS OPEN, ETC.).

• Access the menu (par. 12.7.6)
Data and settings > System status > Seletron status

• Make sure that ALL SELETRON DEVICES ARE DISCONNECTED: they must be shown on the display only with the symbols , as shown in Fig. 113.

-  Seletron does not respond.
-  Power supply error on Seletron devices: power voltage lower than the allowed value.
-  Correct operation.

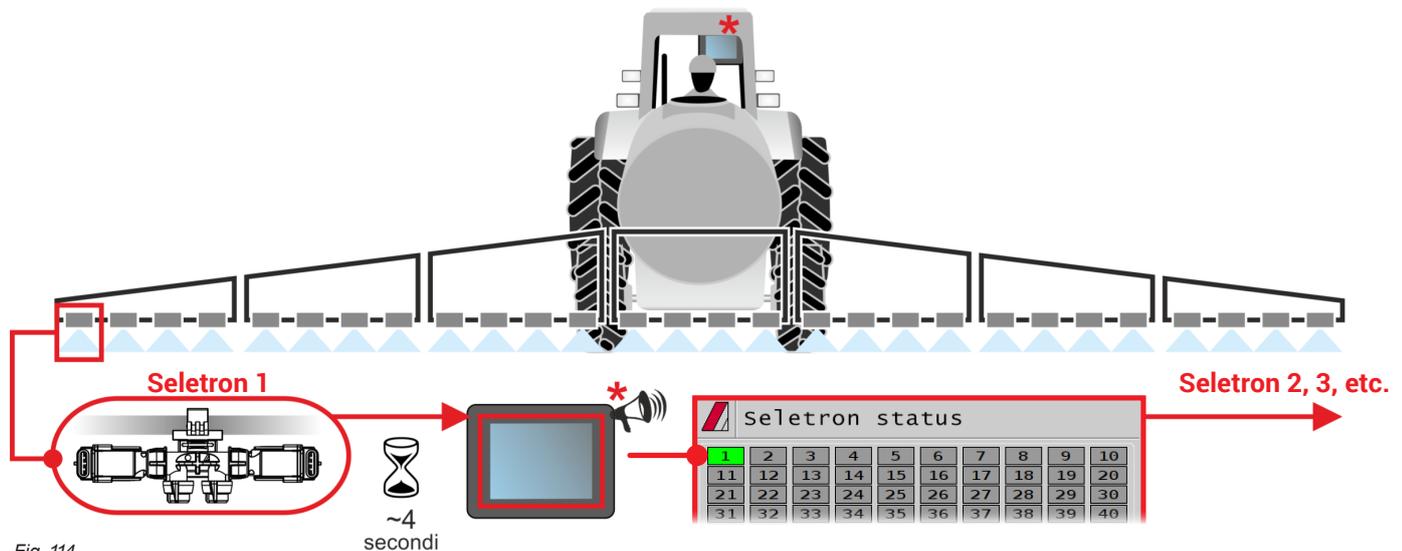


Fig. 114



BEFORE CONNECTING A NEW SELETRON, MAKE SURE THAT THE PREVIOUS ONE HAS BEEN PAIRED, that the acoustic signal has been made and that the relevant green symbol has been displayed.

In case of errors during the pairing procedure, (the display shows the symbol ) reset all identification numbers and repeat the procedure from the start (ID Reset, par. 13.2).

• Connect the first Seletron.

Seletron no. 1 is the first on the left, when looking at the boom from behind (Fig. 114).



WAIT FOR THE ACOUSTIC SIGNAL BY THE MONITOR. WAIT FOR THE MONITOR TO DISPLAY THE GREEN SYMBOL FOR THE CONNECTED SELETRON (FIG. 114).

• **ONLY NOW** is it possible to proceed with the installation of the following Seletron.



WARNING: ALL SELETRON DEVICES MUST BE INSTALLED IN A SEQUENCE FROM LEFT TO RIGHT (when looking at the boom from behind).



- Repeat the above steps, connecting all remaining Seletron devices from left to right until the end of the boom.
- Connection sequence in presence of end nozzles (par. 16.1):

"BUFFER ZONE" NOZZLES

start by connecting the "Buffer zone" Seletron, which is located on boom left end, then connect all the "standard" Seletrons in their correct order from left to right and, at last, connect the "Buffer Zone" Seletron located on boom right end.

"FENCE" NOZZLES

start by connecting all "standard" Seletrons in their correct order from left to right, then connect the "Fence" Seletron located on boom left end and, at last, connect the "Fence" Seletron located on boom right end.

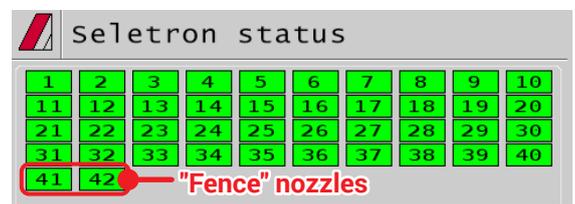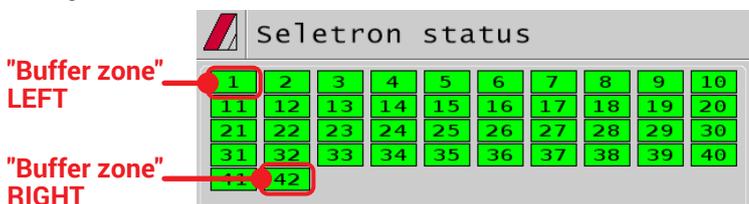

CONTINUES >>>


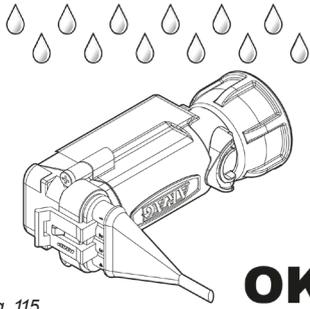


Fig. 115

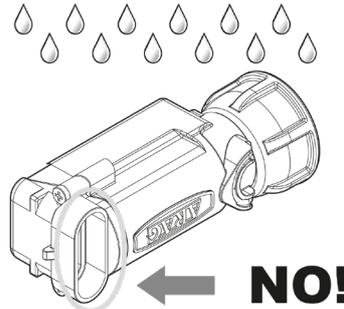

The products are supplied with valve installation instructions.
 Make sure the device is correctly fitted and push it until locking it. When the cable is inserted in the connector, the Seletron is sealed.
 To avoid damaging the internal components, make sure that when using or cleaning the system the connectors are not bare or inserted incorrectly.

CONNECTION SEQUENCE FOR SINGLE AND TWIN SELETRON DEVICES

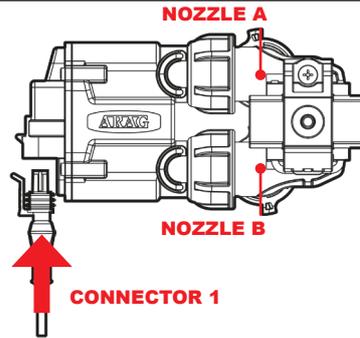


Fig. 116

Connect all Seletron devices in sequence, from left to right until the end of the boom.

CONNECTION SEQUENCE FOR FOURFOLD SELETRON DEVICES

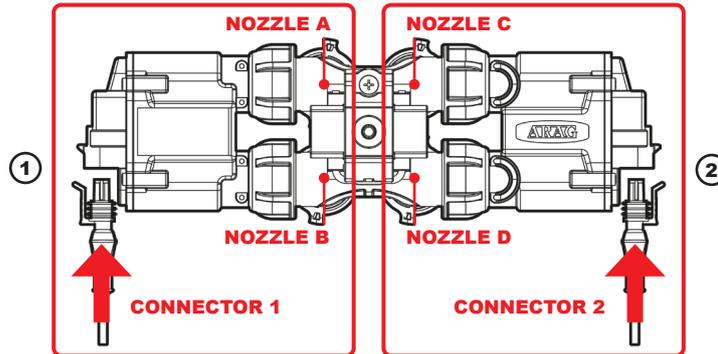


Fig. 117

- 1 Connect in sequence **ONLY SELETRON NOZZLE HOLDERS A AND B**, from left to right until the end of the boom (**connector 1** in Fig. 117).
- 2 Start again from the beginning: this time connect **SELETRON NOZZLE HOLDERS C AND D**, from left to right until the end of the boom (**connector 2**).

13.1 Seletrons Test

Test page to check the operation of the Seletrons. The menu allows choosing the mode **Automatic: Off / Fast / Medium / Slow**.

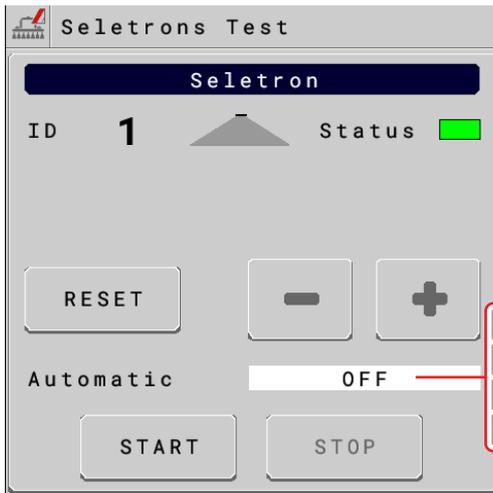


Fig. 118

By pressing **START** the system allows the single selected Seletron spraying. Use buttons **+** and **-** to select the Seletron to be tested

(**-** previous Seletron, **+** next Seletron)

RESET

It restores selection: it starts again from Seletron with ID1.

There are two testing modes:

- **Automatic > OFF**: by pressing button **Start** the system allows the single selected Seletron spraying.
- **Automatic > Fast / Medium / Slow**: by pressing **Start** the system allows all Seletrons installed on the boom to spray, one at a time.



- The pump must be running to perform the test.
- The test can also be performed with Task Controller or Section Control activated.

13.2 ID Reset

Allows to reset the identification numbers of all saved Seletrons, before repeating the pairing procedure (chap. 13).

TO PREVENT SYSTEM MALFUNCTIONS, THIS OPERATION MUST BE CARRIED OUT ONLY IF STRICTLY NECESSARY

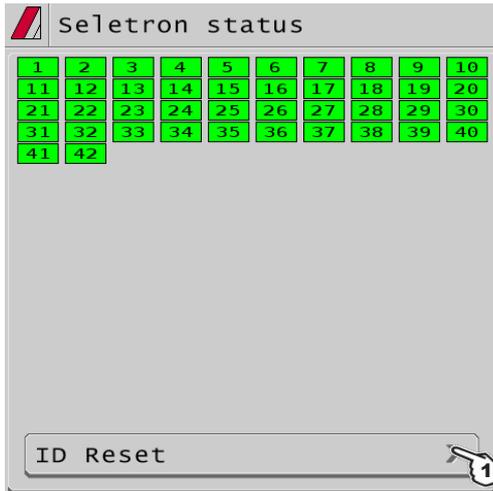


Fig. 119

Press key **1** to delete identification numbers.

Press key **2** to confirm.

At the end of the reset procedure, DISCONNECT ALL SELETRON DEVICES and start a new pairing procedure (chap. 13).



13.3 SELETRON REPLACEMENT

13.3.1 Preliminary Operations

⚠ TO AVOID ACCIDENTS, EMPTY THE TANK AND MAKE SURE THAT THE ENTIRE SYSTEM IS COMPLETELY FREE FROM CHEMICALS.

IMPORTANT

Operate main valve and section controls (ON position) and carry out the indicated settings:

General control ON + Open sections + Active nozzles + **MANUAL** nozzle selection + **MANUAL** section management

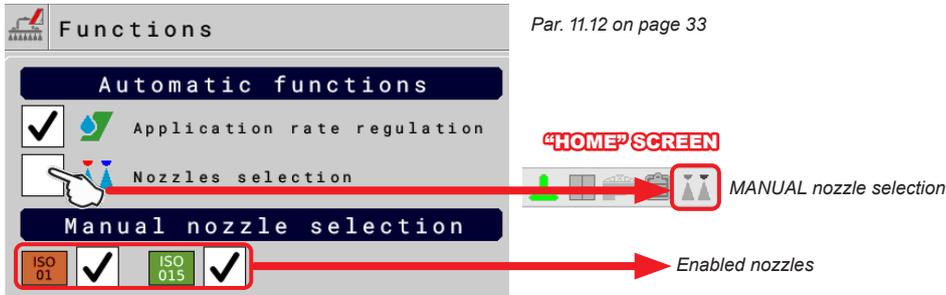


Fig. 120

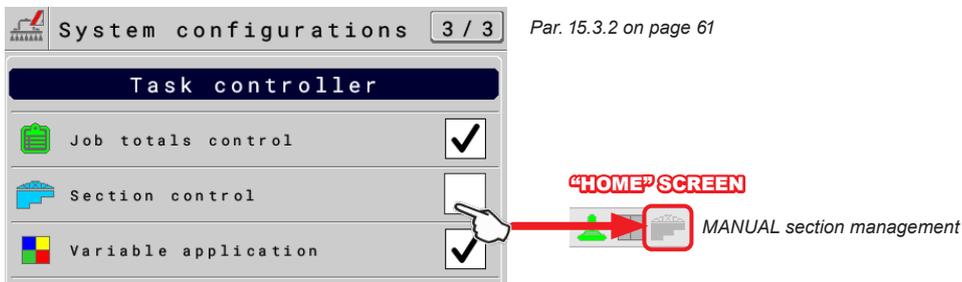


Fig. 121

13.3.2 Replacement procedure


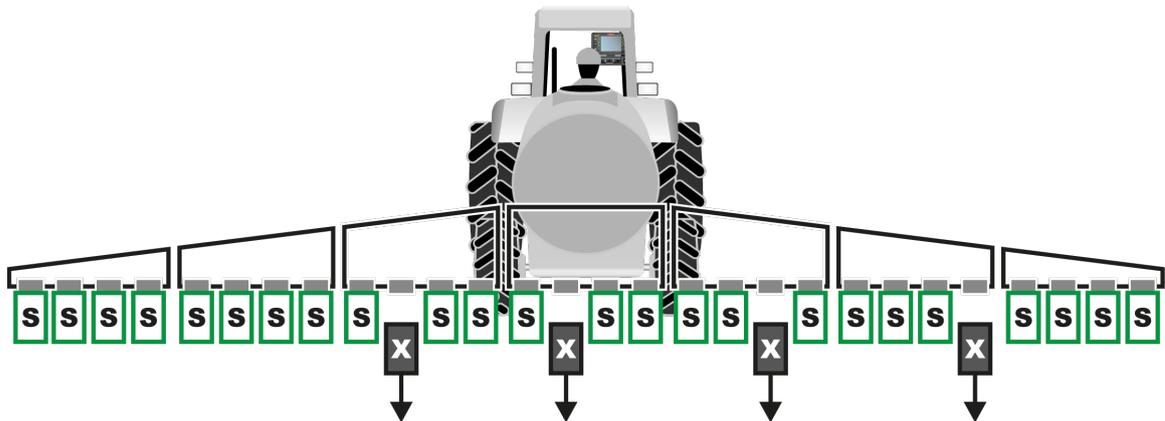


Fig. 122

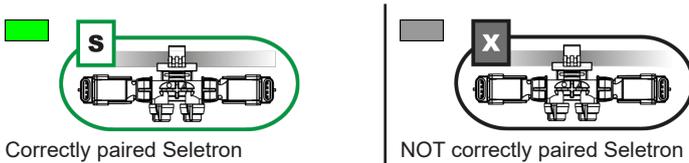

- ONLY DISCONNECT THE SELETRON DEVICES THAT WERE NOT CORRECTLY PAIRED ( Fig. 122).


CONTINUES >>>

Connect the new Seletron devices: * Fig. 123, IN A SEQUENCE FROM LEFT TO RIGHT (when looking at the boom from behind).

 AFTER CONNECTING THE SELETRON, WAIT FOR APPROX. 4 SECONDS, THE MONITOR MAKES AN ACOUSTIC SIGNAL AND DISPLAYS THE GREEN SYMBOL OF THE CONNECTED SELETRON. **ONLY NOW IS IT POSSIBLE TO PROCEED WITH THE INSTALLATION OF THE FOLLOWING SELETRON.**

Tighten each Seletron onto the relevant nozzle holder, using a torque wrench and a tightening torque of 4.5 Nm / 40 Inch/lbs. Alternatively, if you do not have a torque wrench, tighten the Seletron devices by hand and make sure there are no leaks.

 ARAG IS NOT LIABLE FOR ANY DAMAGE OR MALFUNCTION CAUSED BY THE USE OF TOOLS DIFFERENT FROM THE ONES INDICATED ABOVE.

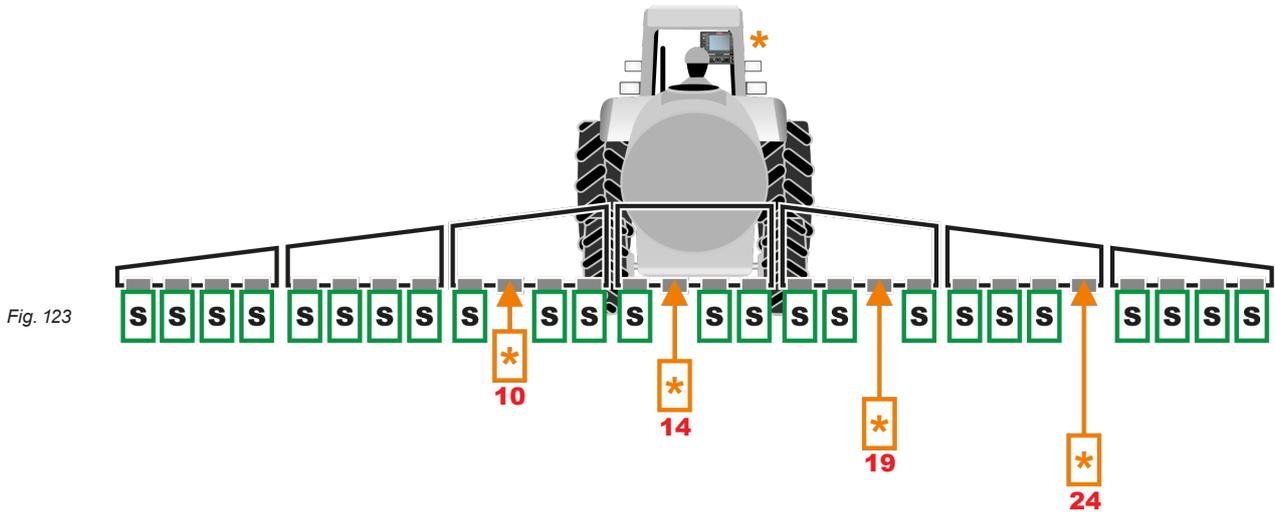

SELETRON CONNECTION SEQUENCE: 10, 14, 19 AND 24


Seletron status									
1	2	3	4	5	6	7	8	9	10
11	12	13	14	15	16	17	18	19	20
21	22	23	24	25	26	27	28	29	30
31	32	33	34	35	36	37	38	39	40
41	42								

ID Reset >

14 USE


14.1 "HOME" main screen

MENU SELECTION BUTTONS

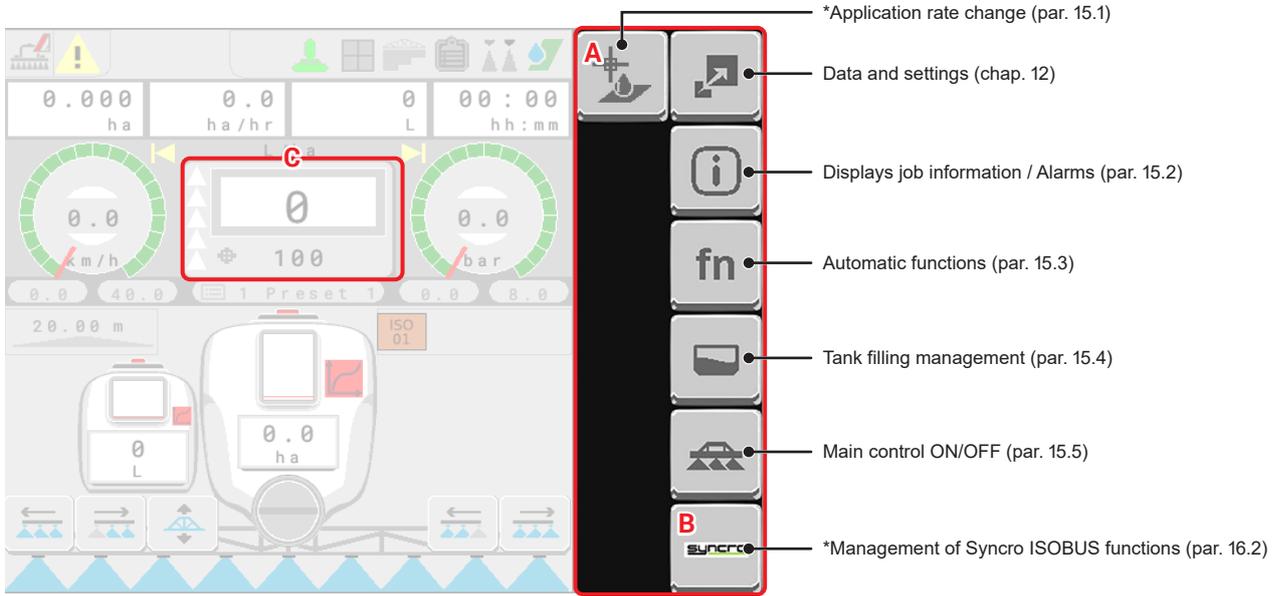

***This figure differs from what is actually displayed on the device:**
 When the button related to the Syncro **B** function is present, the button to modify the application rate **A** is **NOT** present.
 To modify the application rate with the Syncro function active, press area **C** and follow the instructions in par. 15.1.

DISPLAY ITEMS

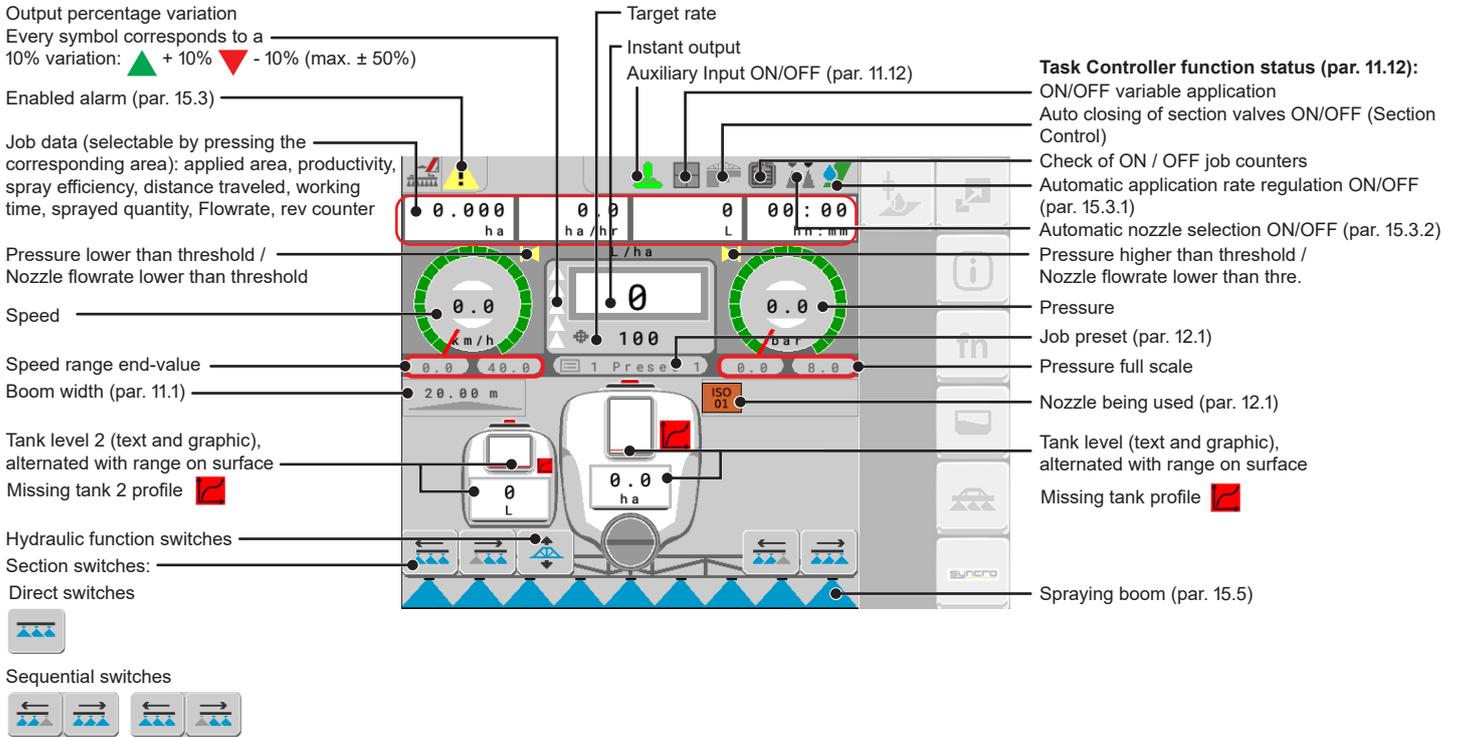

15 JOB FUNCTIONS

15.1 Output temporary increase and decrease - Home page > Change target rate

From "Home" screen, press .

WARNING! This button is NOT present if the Syncro function is enabled.

Change the target rate value for the job.

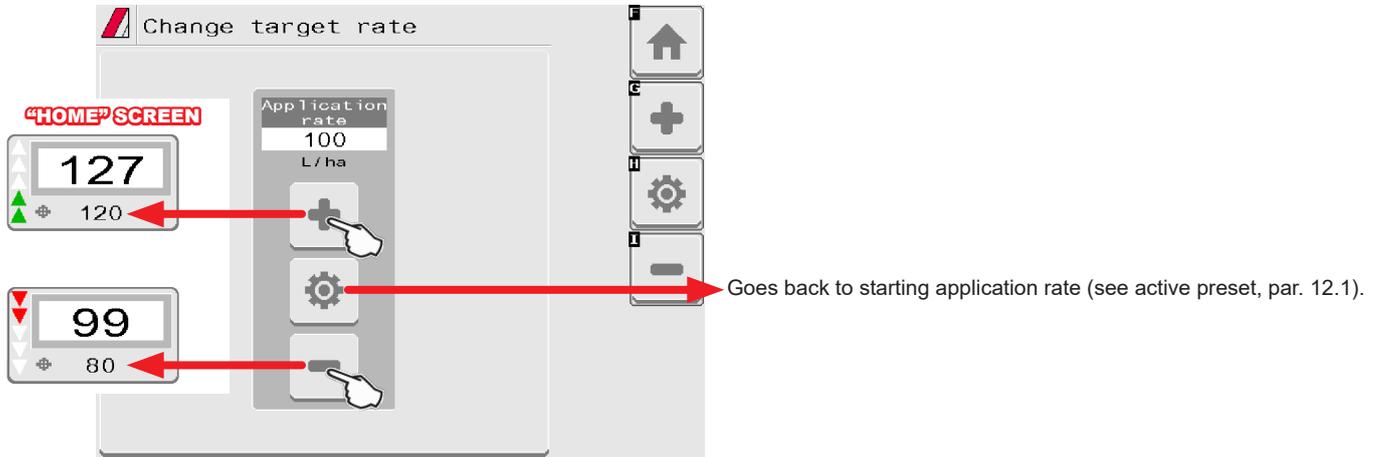


Fig. 124

15.2 Home > Alarms

From "Home" screen, press .

This screen summarizes the alarm notifications active for the operators or the just-solved alarms.

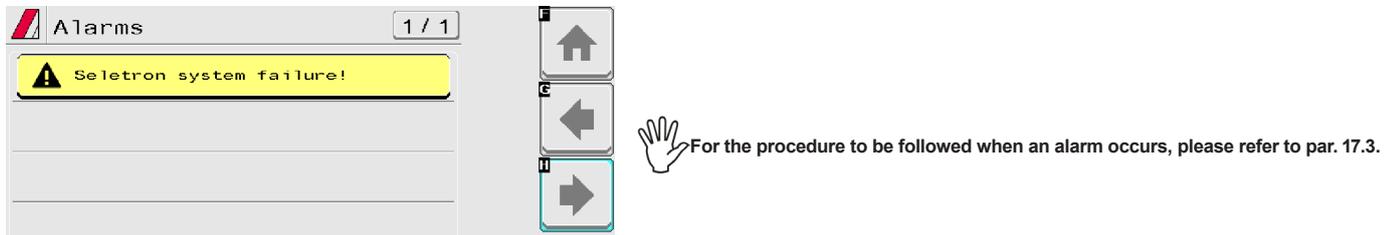


Fig. 125

	Goes back to main screen		Goes back to previous menu, or scrolls the pages of a menu (previous page)		Quits without confirming the changes		Cancel
	Saves the changes to current page		Scrolls the pages of a menu (next page)		Saves the changes		Exits
							Confirm

15.3 Home > Automatic functions

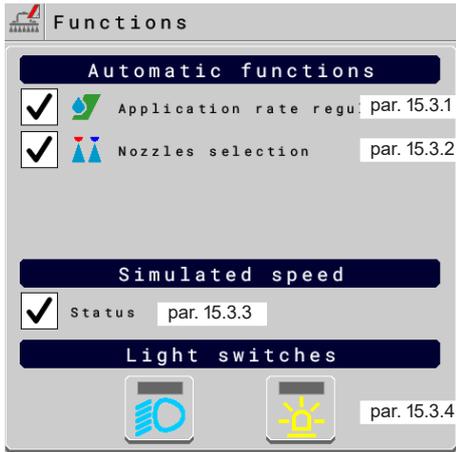


Fig. 126

From "Home" screen, press



15.3.1 Home > Automatic functions > Application rate regulation

Enables / disables automatic output adjustment (DEFAULT: ON).


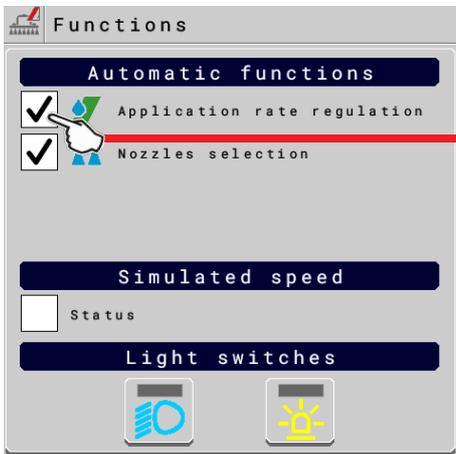


Fig. 127

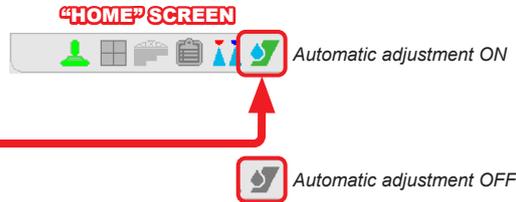

AUTOMATIC ADJUSTMENT ON
 IBX100 keeps the set application rate constant regardless of the changes in speed and boom section status.
 In this case the application rate can be set with the proper functions **Manage presets** (par. 12.1) - **Change target rate** (par. 15.1), or by loading a prescription map from TC.

If necessary, during spraying, it is possible to intervene on output control (Auxiliary Input) to adjust output to crop conditions, increasing or decreasing momentarily the application rate up to $\pm 50\%$.

AUTOMATIC ADJUSTMENT OFF (MANUAL)
 Rate manual regulation shall be carried out with the suitable command (Auxiliary Input).

	Goes back to main screen		Goes back to previous menu, or scrolls the pages of a menu (previous page)		Quits without confirming the changes		Cancel
	Saves the changes to current page		Scrolls the pages of a menu (next page)		Saves the changes		Exits
							Confirm

15.3.2 Home > Automatic functions > Nozzles selection

Enables / disables automatic nozzle selection on all spraying points (DEFAULT: ON).

AUTOMATIC NOZZLE SELECTION

When spraying starts (general command ON), VT automatically checks the flowrates: if the necessary conditions are not met, VT signals this with the screen of Fig. 130.

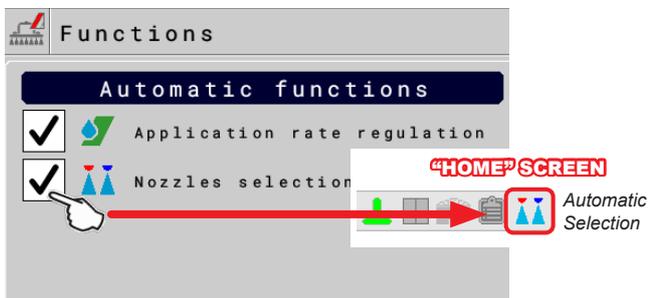


Fig. 128

MANUAL NOZZLE SELECTION

Allows to select manually nozzles in use on the spraying points. The number of nozzles displayed will vary according to the spraying point setting (par. 10). Press the button next to the nozzle to enable or disable the corresponding nozzle.

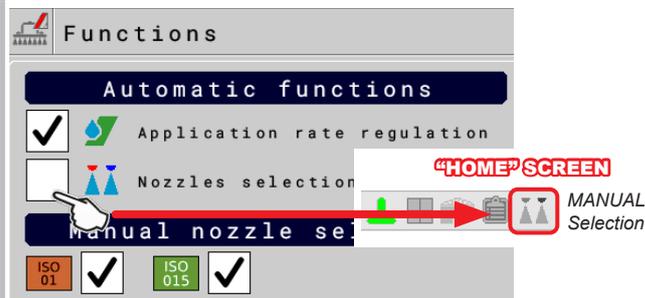


Fig. 129

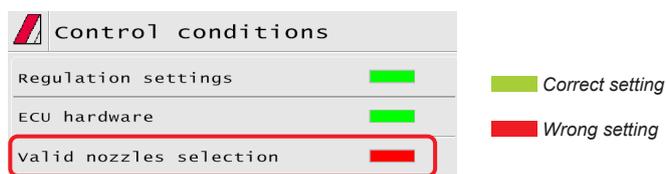


Fig. 130

HOW THE AUTOMATIC NOZZLE SELECTION WORKS (SELETRON and DUAL BOOM SYSTEM)

In a traditional system, the farming machine speed limits depend on the minimum and maximum pressure of the nozzle in use and on the desired spray rate. For instance, if we were spraying 100 l/ha with a violet evenfan nozzle ISO110025, the minimum operating speed shall be 6.9 km/h (corresponding to a pressure of 1 bar) while maximum speed shall be 13.9 Km/h (corresponding to a pressure of 4 bars). This operation field can be restrictive for the features of both crop to be treated and machine.

Operation field of possible combinations of ISO11002 and ISO110025 nozzles

When automatic nozzle selection is enabled, the VT (using Seletron devices) will enable the nozzle, or combination of nozzles, according to the set spray rate and driving speed.

This system allows to widen the machine operating range, i.e. in the above instance, using ISO11002 yellow (A) and ISO110025 violet (B) nozzles, that work correctly at a speed from 5.5 km/h to 24.9 km/h.

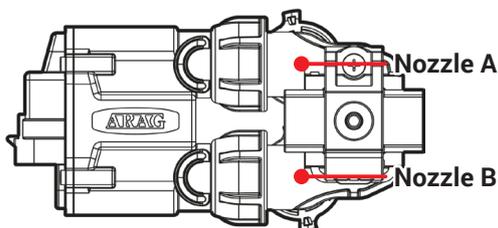


Fig. 131

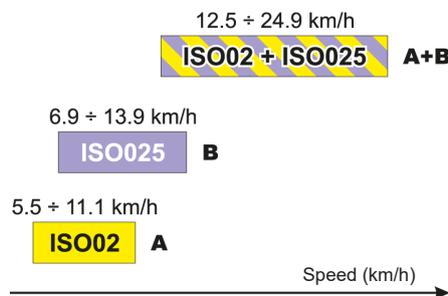


Fig. 132

According to the set data and those detected by the sensors, the monitor selects the suitable nozzle configuration constantly checking that:

- the spraying pressure always remains within the job features set for each single nozzle
- in case of many possible nozzle configurations, the operating pressure of the configuration in use is as close as possible to the operating range of the nozzle
- required number of nozzle changes is as low as possible.

When setting a spraying, make sure to couple compatible nozzles.

For example:

• **Compatible nozzles:** the flowrate at 1 bar of the ISO025 nozzle is LOWER than the flowrate at 5 bars of the ISO02 nozzle (Fig. 133).

• **NON-compatible nozzles:** the flowrate at 1 bar of the ISO05 nozzle is HIGHER than the flowrate at 5 bars of the ISO02 nozzle (Fig. 134).

In the same way, the overall flowrate of both nozzles at MINIMUM pressure shall be LOWER than the flowrate of the high flowrate nozzle at MAXIMUM pressure.

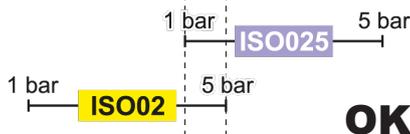


Fig. 133

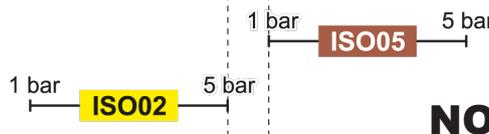


Fig. 134

	Goes back to main screen		Goes back to previous menu, or scrolls the pages of a menu (previous page)		Quits without confirming the changes		Cancel
	Saves the changes to current page		Scrolls the pages of a menu (next page)		Saves the changes		Exits
							Confirm

15.3.3 Home > Automatic functions > Simulated speed

Allows enabling / disabling speed simulation (DEFAULT: OFF).
 The simulation allows carrying out regulation tests with stopped machine (default presetting at 6 km/h - 3.7 MPH).

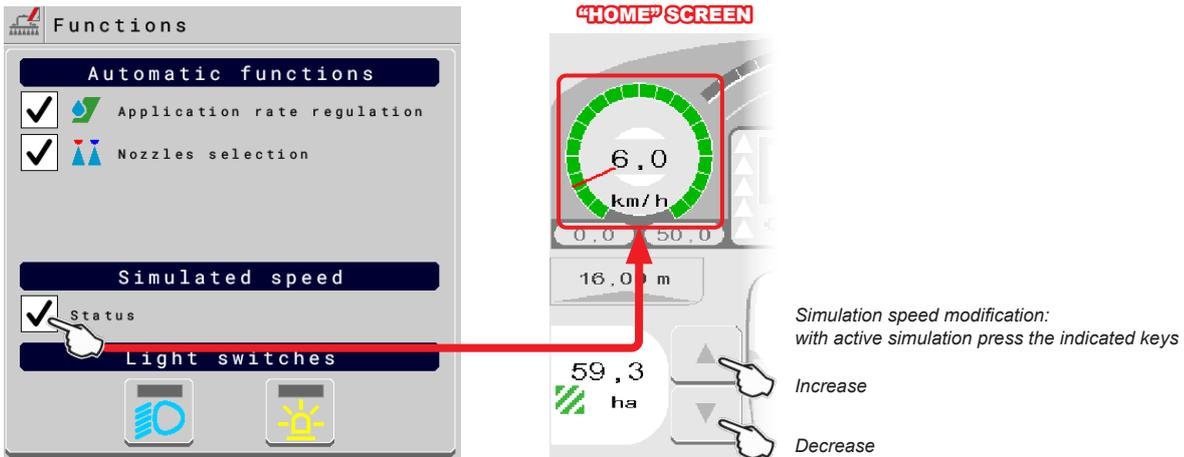


Fig. 135

15.3.4 Home > Automatic functions > Light switches

Allows turning on/off the installed light switches (DEFAULT: OFF).


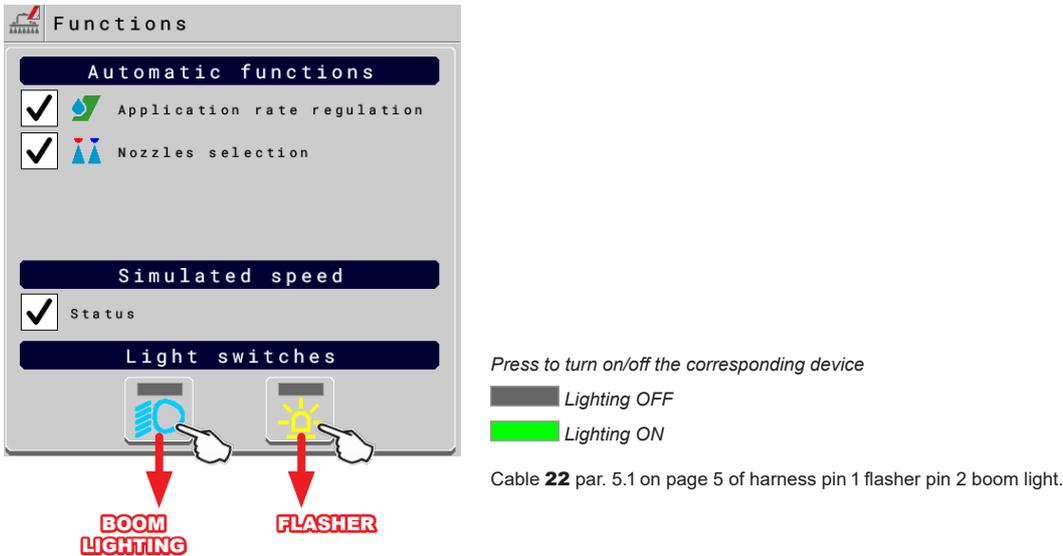


Fig. 136

	Goes back to main screen		Goes back to previous menu, or scrolls the pages of a menu (previous page)		Quits without confirming the changes		Cancel
	Saves the changes to current page		Scrolls the pages of a menu (next page)		Saves the changes		Exits
							Confirm

15.4 Home > Tank

Manages tank filling. The management mode will change according to the device set for the tank level reading (chap. 10).

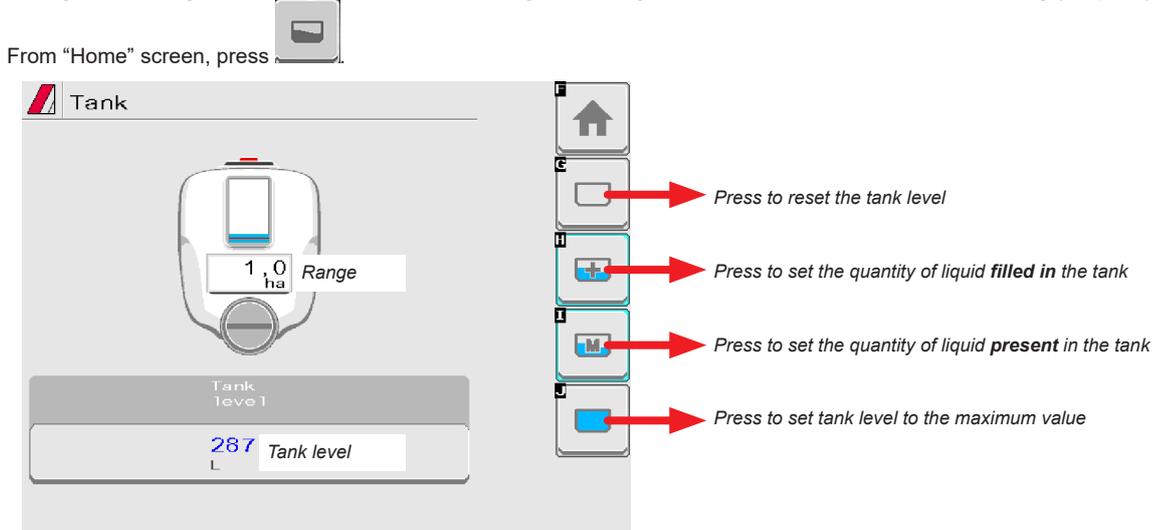

• Tank level source: Single tank level


The computer displays the real quantity of fluid inside the tank, detected by the level sensor.

• Tank level source: Manual / Filling flowmeter


The computer calculates the quantity of fluid inside the tank (by processing the job data), and allows to enable several manual procedures:

- Level reset.
- Filled quantity manual setup.
- Tank level manual setting.
- Complete filling, according to the tank capacity.

LEVEL RESET

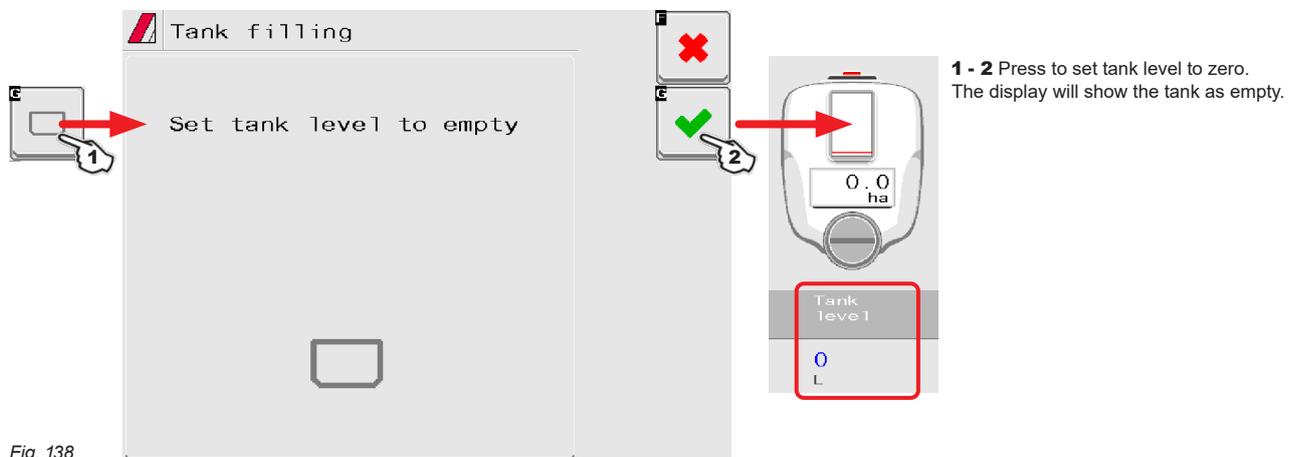

FILLED QUANTITY MANUAL SETUP

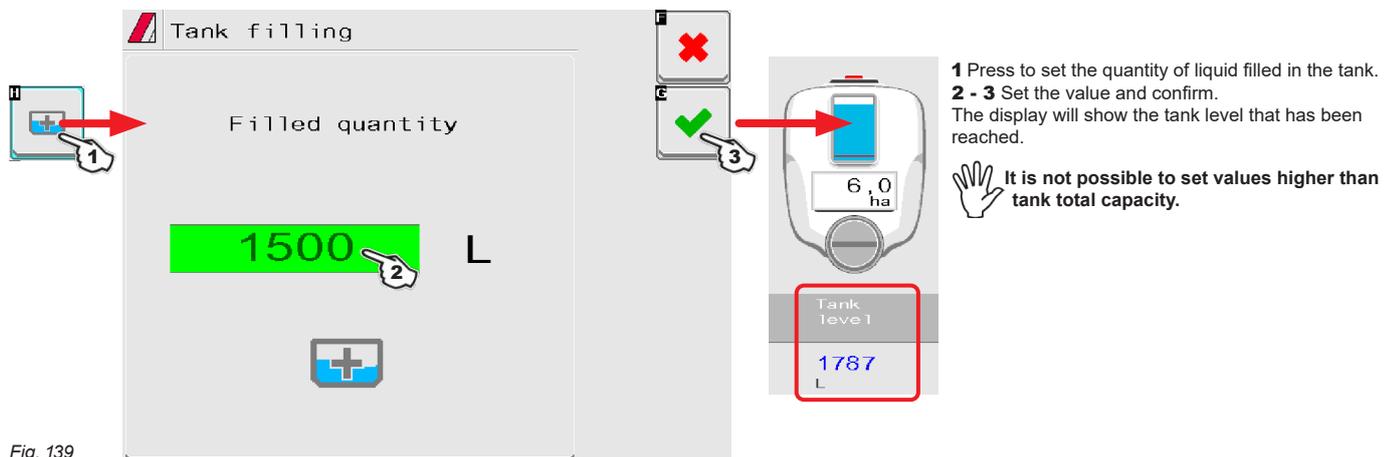

TANK LEVEL MANUAL SETTING

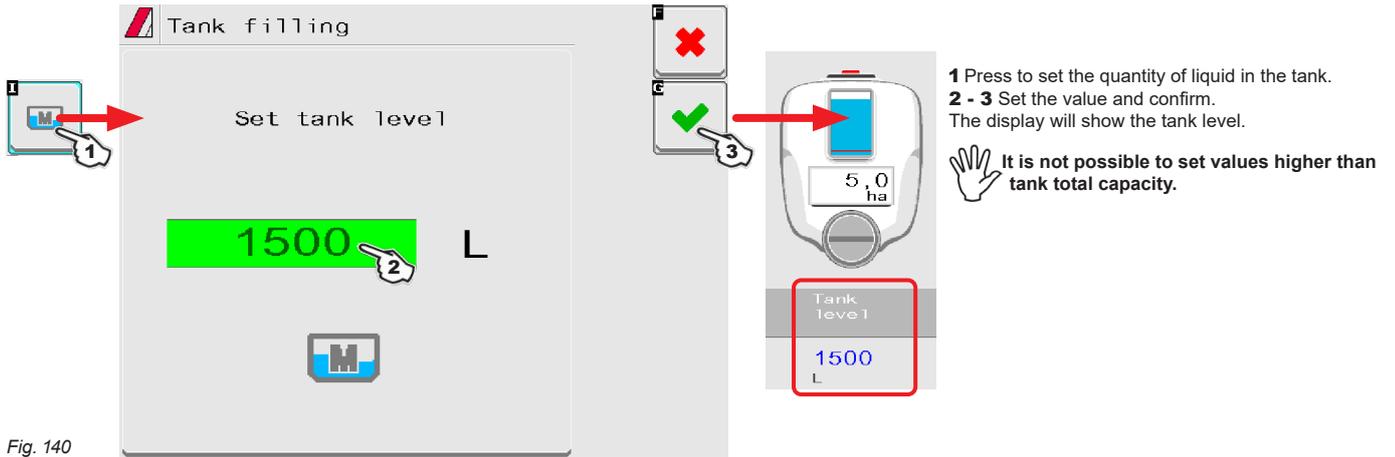


Fig. 140

TANK FILLING

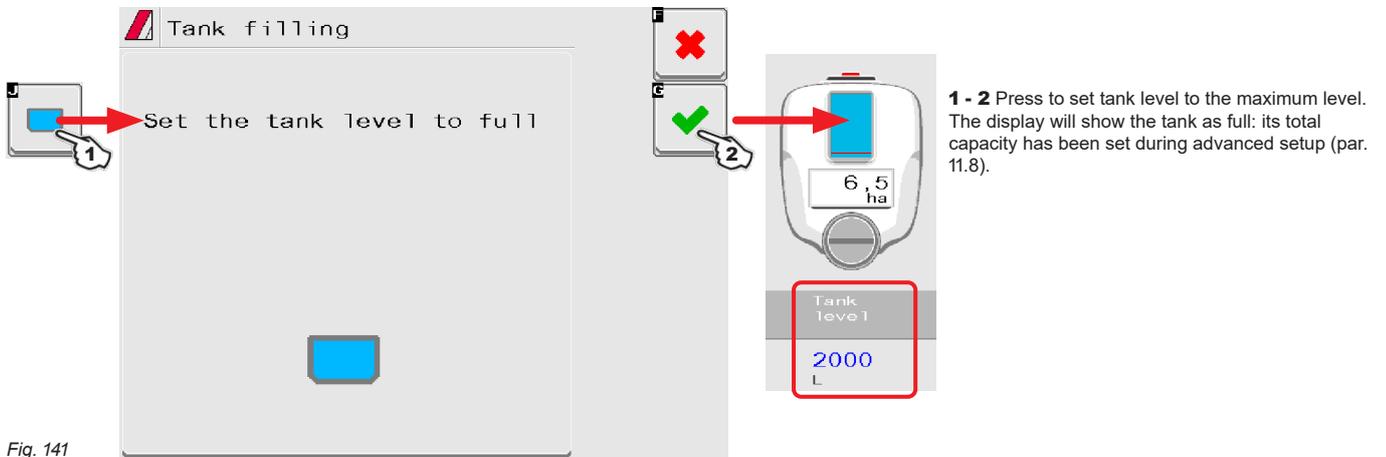


Fig. 141



Goes back to main screen



Goes back to previous menu, or scrolls the pages of a menu (previous page)



Quits without confirming the changes



Cancel



Saves the changes to current page



Scrolls the pages of a menu (next page)



Saves the changes



Exits



Confirm

15.5 Main control and section management

15.5.1 Control settings WITH Auxiliary Input

Refer to the user's manual supplied with the device.



Type	Sequential	HYD	9	0
Using center section switch	YES			7

ARAG Auxiliary Input control system is not compulsory on all systems, and must thus be ordered separately. Some VTs allow controlling section valves directly from monitor touch-screen panel.

Type	Direct	HYD	9	0
Number of section switches	7			7

To display the necessary controls on the touch-screen panel, your auxiliary input must nevertheless be set (par. 11.12).

If the hydraulic valve management is handled by IBX100 Hydraulic Isobus, select zero as HYD value.

Type	Joystick	HYD	9	0
				7

15.5.2 Control settings WITHOUT Auxiliary Input



Type	Direct	HYD	9	0
Number of section switches	7			7

If no Auxiliary Input is present, the valves are controlled (control unit and/or hydraulic valves) directly through the monitor touch-screen panel (keys in the bottom part of the HOME page).




Type	Sequential	HYD	9	0
Using center section switch	YES			7


Type	Joystick	HYD	9	0
				7

To display the necessary controls on the touch-screen panel, your auxiliary input must nevertheless be set (par. 11.12).


If the hydraulic valve management is handled by IBX100 Hydraulic Isobus, select zero as HYD value.

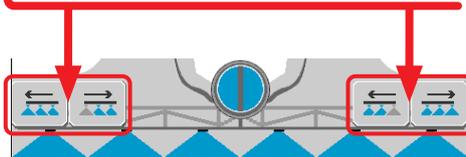

MAIN CONTROL FROM TOUCH-SCREEN PANEL

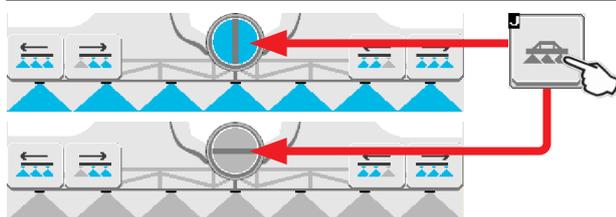


Press key to enable or disable the main control.

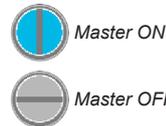


SECTION DIRECT CONTROL FROM TOUCH-SCREEN PANEL


Press button to display the **Section switches** page

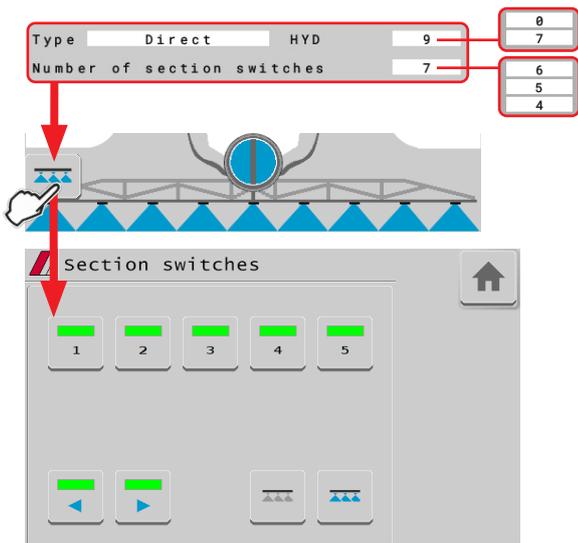

- Press to open/close the relevant section

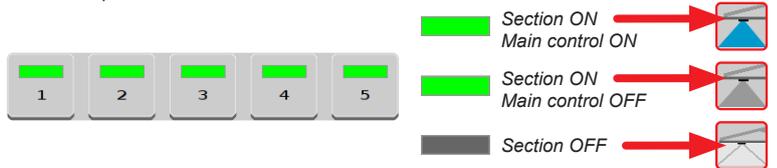


- Press to open/close the relevant end nozzle

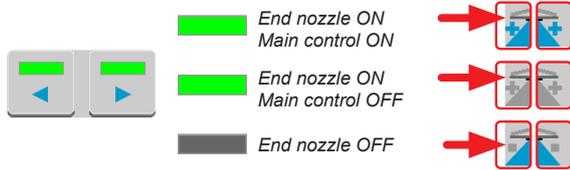

- Press to close all boom sections




- Press to open all boom sections

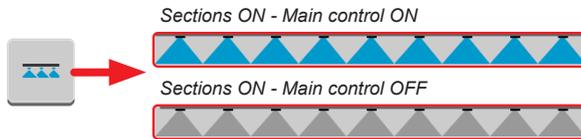


CONTINUES


SECTION SEQUENTIAL CONTROL FROM TOUCH-SCREEN PANEL

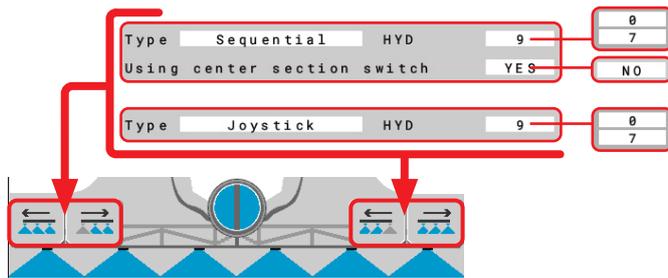


Press button to open sections to the left, starting from the first available on the right.

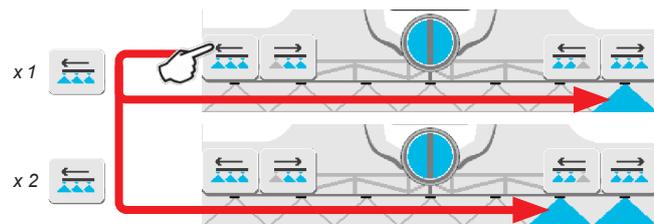


Press button to open sections to the right, starting from the first available on the left.

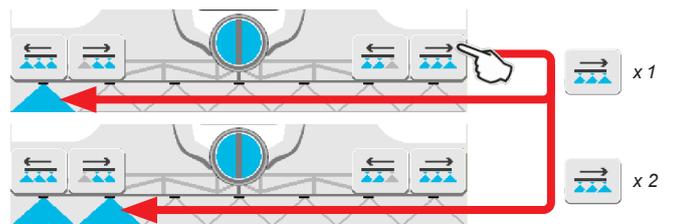

Press button to close sections to the right, starting from the first available on the left.


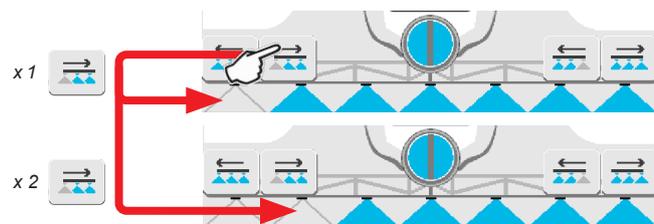


Press button to close sections to the left, starting from the first available on the right.

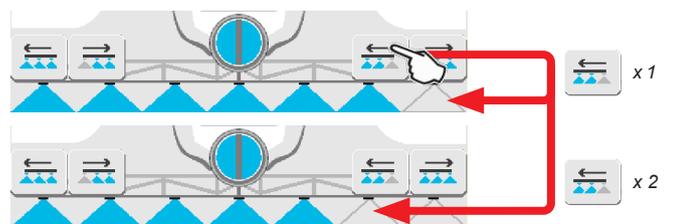

HYDRAULIC CONTROLS FROM TOUCH-SCREEN PANEL

Press button to display the **Hydraulic controls** page

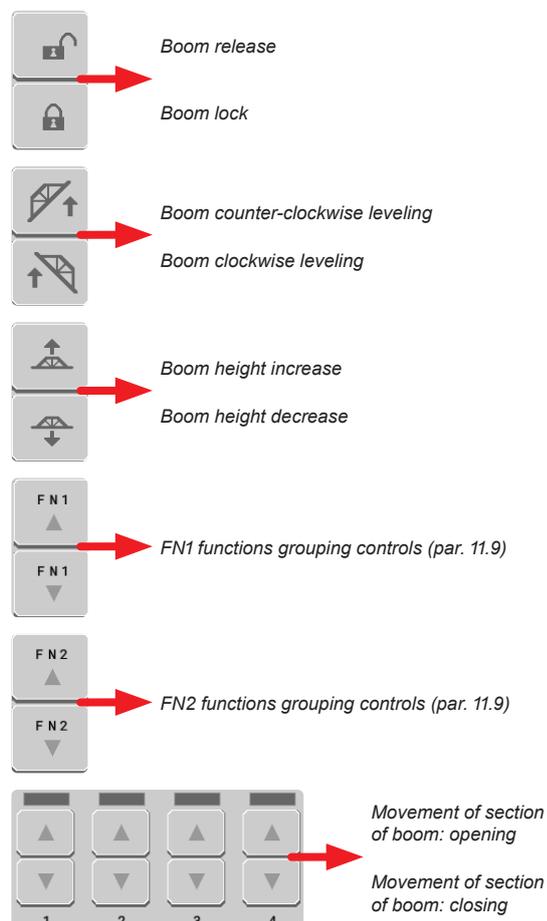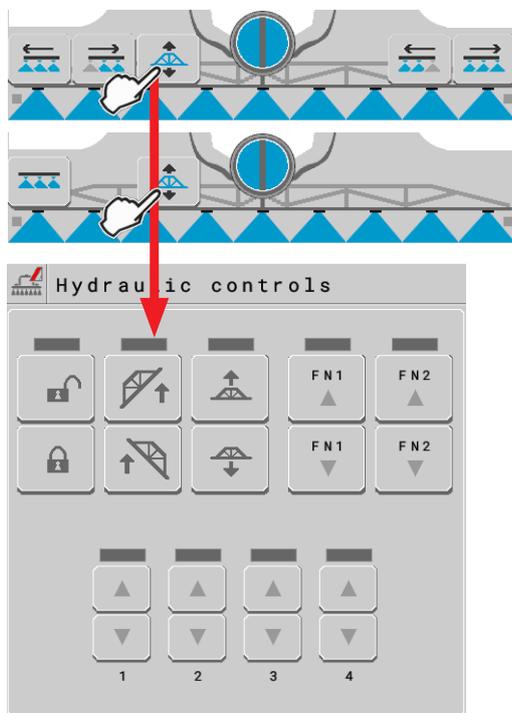


16 JOYSTICK: ARAG DEFAULT FUNCTIONS

The functions described below are illustrative. The following contents may NOT be updated and may differ from the product in your possession.


Press keys to scroll pages.

O = opens the hydraulic valve
C = closes the hydraulic valve

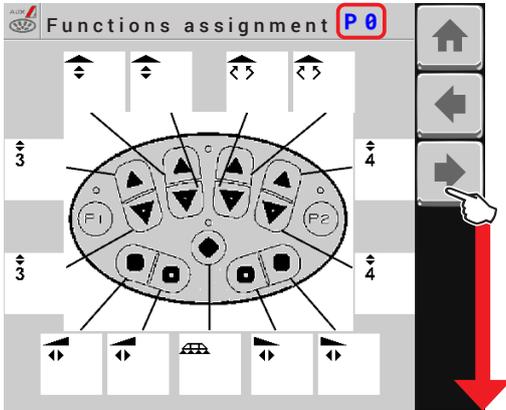


"Main" page (P0)

3			4
Var. geom. L (A) Var. geom. L (C)	Height (A) Height (C)	Boom tilt (A) Boom tilt (C)	Var. geom. R (A) Var. geom. R (C)
Seq. 1 LH	Seq. 1 RH	Main valve switch key	Seq. 2 LH

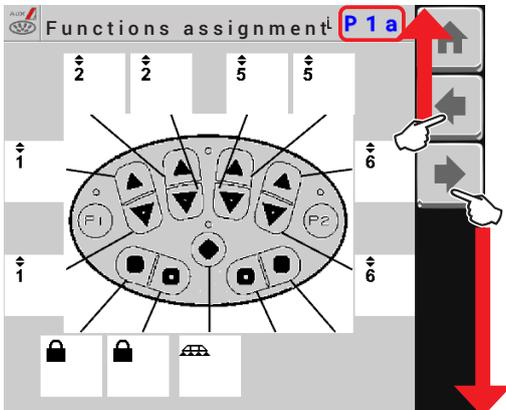


PAGE 1a

1	2	5	6
Arm no. 2 L (A) Arm no. 2 L (C)	Arm no. 1 L (A) Arm no. 1 L (C)	Arm no. 1 R (A) Arm no. 1 R (C)	Arm no. 2 R (A) Arm no. 2 R (C)
Boom lock (A)	Boom lock (C)	Main valve switch key	Not mapped

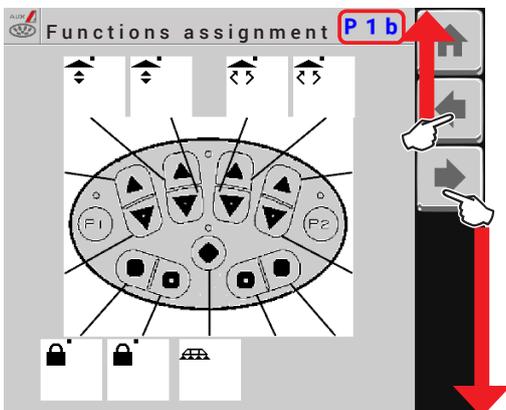

PAGE 1b

Not mapped			Not mapped
--	Height (A) Height (C)	Boom tilt (A) Boom tilt (C)	--
Boom lock (A)	Boom lock (C)	Main valve switch key	Not mapped

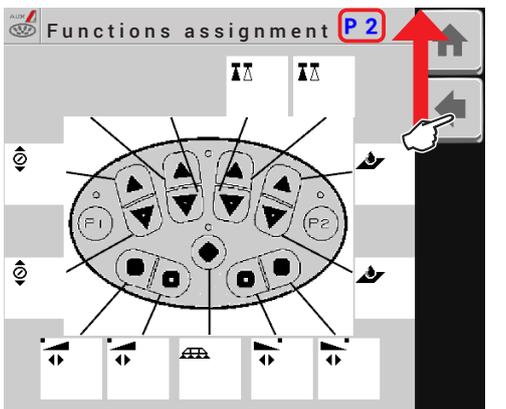

PAGE 2

	Not mapped		
Pressure + Pressure -	--	Nozzle selection AUTO/MAN switch	Spray rate AUTO/MAN switch
Seq. 1 LH	Seq. 1 RH	Main valve switch key	Seq. 2 LH

"BUFFER ZONE" FUNCTION ENABLED - ONLY FOR SELETRON SYSTEM

Some spraying modes entail special areas called "Buffer zones", where spraying must be reduced or absent. Besides the normally used nozzles, special nozzles must be installed (e.g.: ASJ AOC), which reduce the jet or the drift effect at boom end sides. To connect the "Buffer" nozzles, proceed as follows:
 LH "Buffer" nozzle (boom view from back), 1st boom nozzle, 2nd boom nozzle,---> No. of boom nozzle, RH "Buffer" nozzle (boom view from back).

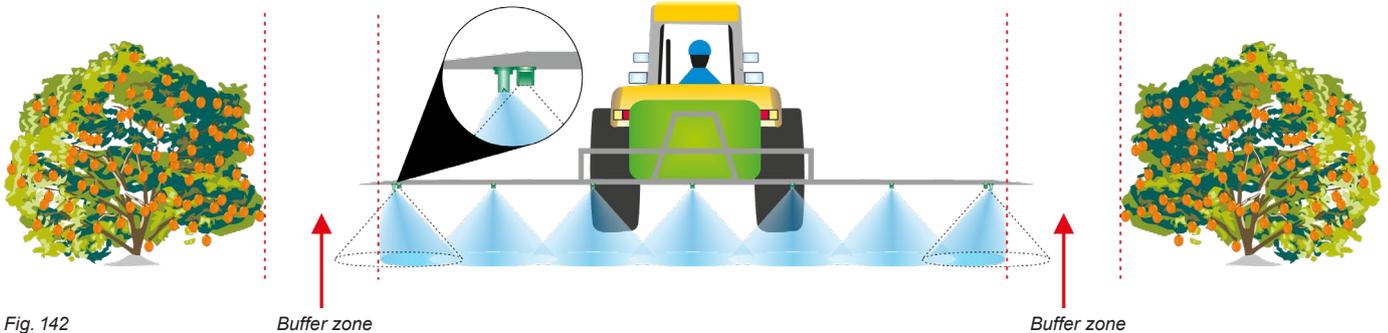


Fig. 142

By enabling the function in implement basic settings (chap. 10) standard nozzles or special nozzles can be alternately selected. Nozzle selection modes are variable (they vary based on the Auxiliary Input connected to the VT). Following are some examples.

**END NOZZLES:
CORRESPONDING ICON ON "HOME" SCREEN**

<p>Special LEFT nozzle ENABLED</p>	→		←		<p>Special RIGHT nozzle ENABLED</p>
<p>Special LEFT nozzle DISABLED</p>	→		←		<p>Special RIGHT nozzle DISABLED</p>

EXAMPLE OF NOZZLE SELECTION THROUGH THE SWITCH BOX

• LH special nozzle enabling (Boom view from back)




Press switch to the left once to enable the LH "Buffer zone" nozzle and to close the standard one. The LED on the left flashes alternately.

• RH special nozzle enabling (Boom view from back)



Press switch to the right once to enable the RH "Buffer zone" nozzle and to close the standard one. The LED on the right flashes alternately.

• LH special nozzle disabling (Boom view from back)

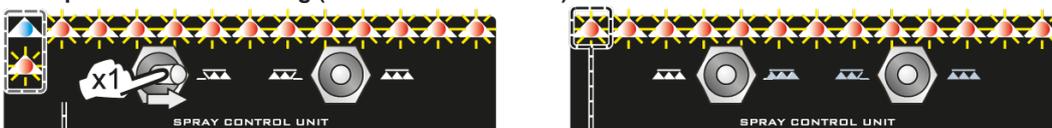

Press switch to the right once to disable the LH "Buffer zone" nozzle and to enable the standard one. The LED on the left no longer flashes and is steady.


• RH special nozzle disabling (Boom view from back)



Press switch to the left once to disable the RH "Buffer zone" nozzle and to enable the standard one. The LED on the right no longer flashes and is steady.

EXAMPLE OF NOZZLE SELECTION THROUGH THE JOYSTICK

The operation is similar to the one just described for the sequential switch box. The functions associated to nozzle enabling are included in the "Main" page. For further details, refer to the instructions provided with the joystick.

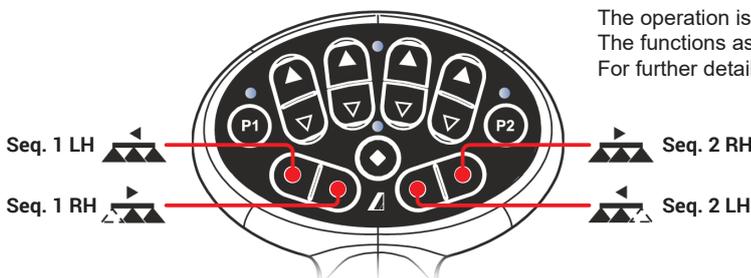

"FENCE NOZZLE" function enabled

This function entails the assembly of specific nozzles at boom end; these nozzles allow spraying areas that cannot be reached by the traditional nozzles due to the boom size (i.e. fences). The enabling of such nozzles does not stop the output from the other boom nozzles.

The connection and pairing procedure of seletron devices and "Fence" nozzles is the following: at first connect all boom nozzles, then the left "Fence" nozzle and the right "Fence" nozzle.

By setting the reference flowrate and pressure for the "Fence" nozzle, it is possible to control the output of all nozzles based on the set spray rate. The width covered by the fence nozzle is not included in the calculation of the applied area.


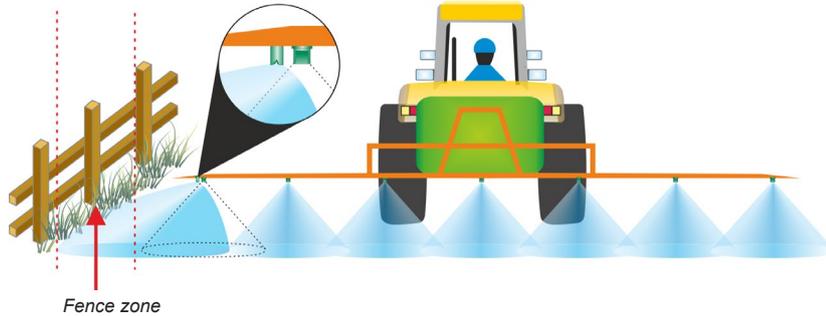


Fig. 143


Fence zone

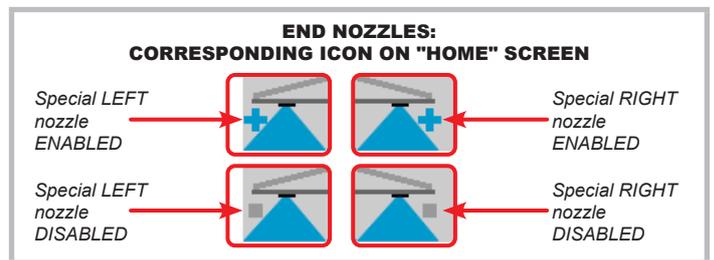

By activating the function in the basic settings of the implement (chap. 10) it is possible to select normal or special nozzles: the activation of the "Fence" nozzles does not interrupt the delivery of the other boom nozzles. Nozzle selection modes are variable (they vary based on the Auxiliary Input connected to the VT). Following are some examples.

EXAMPLE OF NOZZLE SELECTION THROUGH THE SWITCH BOX

• LH special nozzle enabling (Boom view from back)

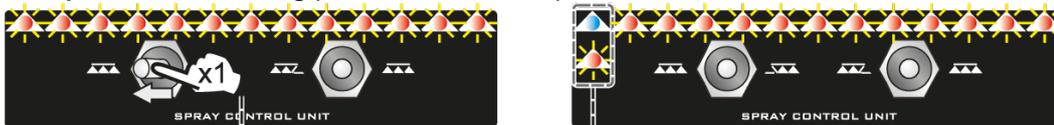


Press switch to the left once to enable the LH "Fence" nozzle. The LED on the left flashes alternately.

• RH special nozzle enabling (Boom view from back)




Press switch to the right once to enable the RH "Fence" nozzle. The LED on the right flashes alternately.

• LH special nozzle disabling (Boom view from back)

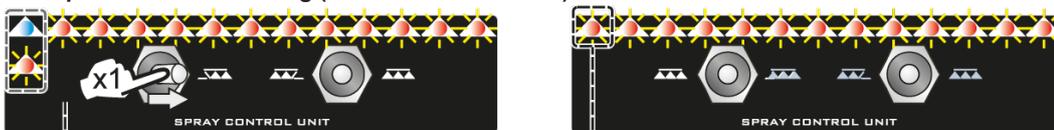


Press switch to the right once to disable the LH "Fence" nozzle. The LED on the left no longer flashes and is steady.

• RH special nozzle disabling (Boom view from back)

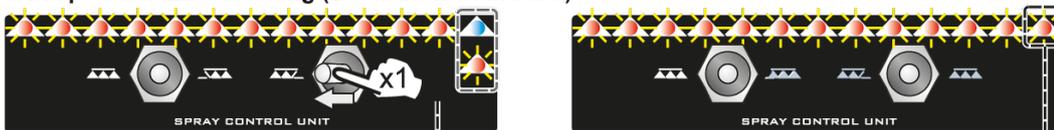

Press switch to the left once to disable the RH "Fence" nozzle. The LED on the right no longer flashes and is steady.

EXAMPLE OF NOZZLE SELECTION THROUGH THE JOYSTICK

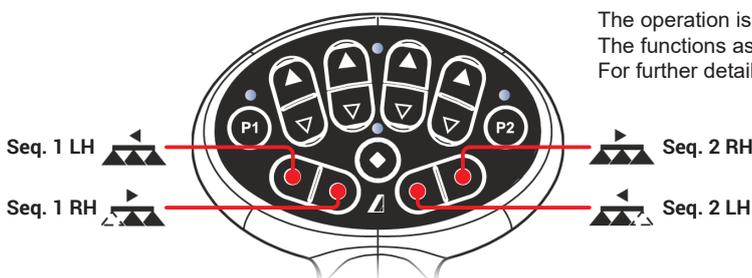


The operation is similar to the one just described for the sequential switch box. The functions associated to nozzle enabling are included in the "Main" page. For further details, refer to the instructions provided with the joystick.

16.2 Home > Syncro control

The user can access the functions of the connected Syncro ISOBUS: execute available commands, view info and alarms.

The user **CANNOT** program the Syncro.

From "Home" screen, press .

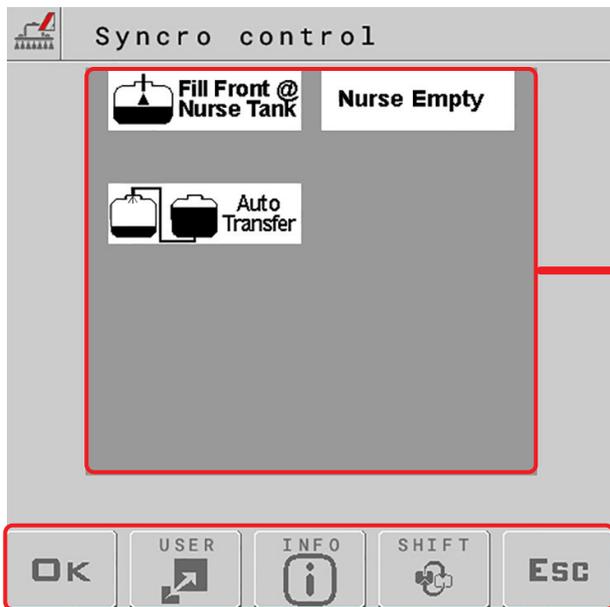

 Please, refer to the relevant instruction manual (download area of the site "www.aragnet.com").

Fig. 144

 This page is not available to the remote connection.
ALARM DISPLAYED WHEN A COMMAND IS NOT ACCESSIBLE FROM VT: USE ISOBUS SYNCRO.

When this mode is active the application rate adjustment button  in the Home is NOT present.

To make the adjustment press this area  in the Home page and follow the instructions in par. 15.1.

	Goes back to main screen		Goes back to previous menu, or scrolls the pages of a menu (previous page)		Quits without confirming the changes		Cancel
	Saves the changes to current page		Scrolls the pages of a menu (next page)		Saves the changes		Exits
							Confirm

17 MAINTENANCE / DIAGNOSTICS / REPAIRS

17.1 Cleaning rules

- Clean only with a soft wet cloth.
- **DO NOT** use aggressive detergents or products.
- **DO NOT** aim water jets directly at control unit.


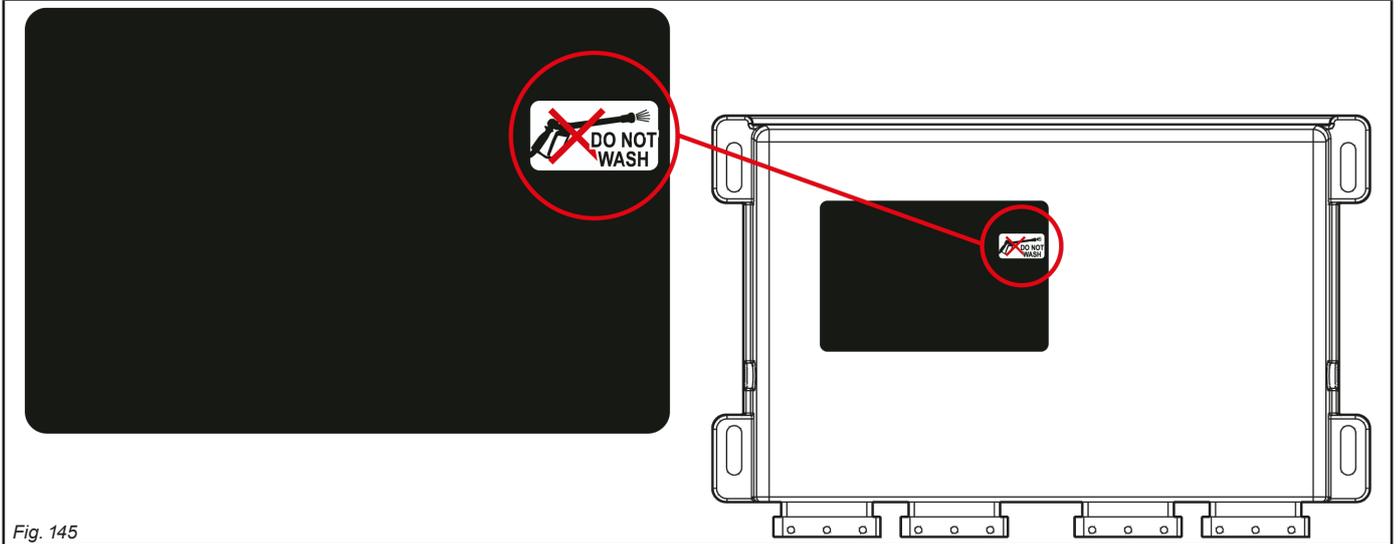


Fig. 145

17.2 LED status key

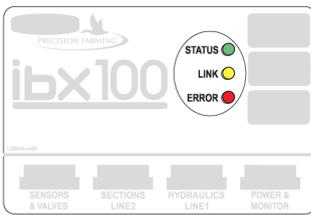

COLOR	
STATUS	green
LINK	yellow
ERROR	red

- **regular blinking** = constant blinking
- **periodical blinking** = series of blinks interrupted by a pause

Switching on Upon start-up, the control unit carries out the **LED switching on in a sequence**, as follows:
1 green LED - 2 yellow LED - 3 red LED
 Whole sequence duration: 2 seconds

- STATUS** ●
- **off**: control unit not powered
 - **steady on**: control unit operational
 - **1 periodical blink**: control unit initialization
 - **2 Periodical blinks**: the control unit has been correctly initialized and is waiting for connection with Virtual Terminal
 - **3 periodical blinks**: OP loading
 - **4 periodical blinks**: ERROR - OP loading on Virtual Terminal failed
 - **5 periodical blinks**: SEVERE ERROR - internal flash drive formatting in progress

- LINK** ●
- **steady ON**: CAN-Bus communication lines operate regularly
 - **1 periodical blink**: error on CAN ISOBUS line
 - **2 periodical blinks**: error on CAN LINE 1 (Seletron)
 - **3 periodical blinks**: error on CAN LINE 2 (Seletron)

- ERROR** ●
- **OFF**: no error
 - **1 periodical blink**: temperature too high
 - **2 periodical blinks**: supply voltage out of range
 - **3 periodical blinks**: BUS 1 (LINE 1) short circuit or absorption too high
 - **4 periodical blinks**: BUS 2 (LINE 2) short circuit or absorption too high
 - **5 periodical blinks**: hydraulic circuit short circuit or absorption too high
 - **6 periodical blinks**: control valve short circuit or absorption too high
 - **7 periodical blinks**: section valve short circuit or absorption too high
 - **8 periodical blinks**: analog sensor connection problem

17.3 Error messages

MESSAGE ON DISPLAY	CAUSE	SOLUTION	OPERATING MODE
Disable main valve switch	Main switch ON upon switching on	• Disable main control (OFF)	--
Move forward! The machine is stopped	Main control ON with machine stopped	• Start the machine • Disable main control (OFF)	Master ON + Regulation AUTO ON 
Hyd-ECU not detected!	Communication problems between VT hydraulic control unit (Hyd-ECU)	• Check condition of connection cables (and connectors)	--
	The cables are damaged	• Replace the cable	--
Enable pump! No flowrate	Main control ON but flowrate at zero	• Start the pump and move the machine	Master ON + Regulation AUTO ON 
Minimum tank level reached!	Tank level is lower than the set reserve value	• Fill the tank	Master ON
	Minimum value was not set correctly	• Check set reserve value	
Maximum tank level reached!	Tank level has reached the maximum set value	• Stop tank filling phase	--
Low pressure! Regulation locked.	Pressure does not reach set value	• Increase driving speed	Master ON + Regulation AUTO ON 
	Limit was not set correctly	• Check set limit	
Slow down! High pressure	The pressure exceeds the maximum level allowed for the nozzle being used	• Decrease driving speed • Adjust the operating pressure so as to respect the previously set limits for nozzles in use • Check maximum pressure setting for nozzles in use	Master ON
Accelerate! Low pressure	The pressure does not reach the minimum value for the nozzle in use	• Increase driving speed • Adjust the operating pressure so as to respect the previously set limits for nozzles in use • Check minimum pressure setting for nozzle in use	Master ON
Flowmeter out of max value Flowmeter out of min value Flowrate out of range (Max) Flowrate out of range (Min)	Flowrate out of the limits allowed by flowmeter	• Modify working conditions to suit flowmeter limits (speed, pressure, etc.) • Make sure that flowmeter parameters are set correctly	Master ON
Slow down! Too low flow rate!	Flowrate does not reach the value requested for output	• Decrease driving speed • Make sure that flowmeter parameters are set correctly	Master ON + Regulation AUTO ON 
Accelerate! Too high flowrate!	The flowrate exceeds the value required for output	• Increase driving speed • Check that the setup of the menu Implement settings (boom width, flowmeter, etc.) has been set correctly	Master ON + Regulation AUTO ON 
Reduce rotation speed!	RPM exceeds the maximum set value	• Decrease the rotation speed of the moving part • Check the constant set for the rev counter	--
Increase rotation speed!	RPM does not reach the minimum value	• Increase the rotation speed of the moving part • Check the constant set for the rev counter	Master ON
Nozzles wear check	Difference between measured and calculated flowrate (according to selected nozzle data) higher than set value	• Check that the set nozzle coincides with the one installed on the boom • Replace nozzles	Master ON + Regulation AUTO ON 
Seletron system failure!	One or more spraying points do not respond	• Identify the unrecognized spraying point • Check that the corresponding spraying point is connected correctly • Check condition of harness on the corresponding spraying point	--
Seletron system error!	Low supply voltage on one or more spraying points	Check battery voltage level	--
		• Identify the unrecognized spraying point • Check condition of harness on the corresponding spraying point	--

17.4 Troubleshooting

PROBLEM	CAUSE	SOLUTION
Section valve controls take no effect	Valves not connected	• Connect the IN-CAB cable and the connection cable to the valves.
One valve does not open	No power supply to valve	• Check valve electric connection and operation.
The display no longer shows the speed	Wrong setup	• Check the setup of the wheel constant.
	No signal coming from the speed sensor	• Check connections to speed sensor.
The displayed speed is not precise	Wrong setup	• Check the setup of the wheel constant.
Output volume readout inaccurate	Wrong setup	• Check the setup of the boom width. • Check the setup of the flowmeter constant. • Check the setup of the wheel constant. • Check the setup of the section valve type. • Check connections to speed sensor.
Covered area count displayed does not match actual area covered	Wrong setup	• Check the setup of the boom width. • Check the setup of the wheel constant. • Check connections to speed sensor.
	Counter not reset	• Reset the counter.
Distance traveled count displayed does not match actual distance covered	Wrong setup	• Check the setup of the wheel constant. • Check connections to speed sensor.
	Counter not reset	• Reset the counter.
Sprayed fluid count displayed does not match liters/gpm actually sprayed	Wrong setup	• Check the setup of the flowmeter constant. • Check the setup of the section valve type.
	Counter not reset	• Reset the counter.
	Use of three-way section valves without setting metered by-passes	• Perform setting.
Time count displayed does not match actual work time	Counter not reset	• Reset the counter.
Unable to reach output volume value set for the automatic operation	Wrong setup	• Check spray rate setup. • Check the setup of the boom width.
	System not adequately sized to provide required flowrate	• Check maximum pressure valve adjustment. • Make sure control valve is adequate for specific system.
	Control valve malfunction	• Check valve operation.
Instantaneous pressure readout inaccurate	Wrong setup	• Check full scale setup for pressure sensor.
	Pressure sensor not calibrated	• Perform setting.
	Pressure sensor wrong installation	• Check connections to pressure sensor.
Instantaneous pressure is not displayed	Wrong setup	• Check pressure sensor setting.
	IBX100 does not receive signals from pressure sensor	• Check connections to pressure sensor.
	Pressure sensor wrong installation	• Check connections to pressure sensor.
Rpm readout inaccurate	Wrong setup	• Check rpm sensor constant setting.
Rpm value not displayed	IBX100 does not receive signals from RPM sensor	• Check connections to RPM sensor.
	Rpm sensor wrong installation	• Check connections to RPM sensor.

18 TECHNICAL DATA**18.1 Electrical features**

Nominal supply voltage.....	9 ÷ 16 Vdc
Protection against polarity inversion.....	Yes
Protection against short-circuit.....	Yes
Digital inputs.....	For Open collector sensors: max. frequency 2000 Hz
Analogue inputs.....	4-20 mA
Digital outputs (valves).....	Active high (max 200 mA)
Hydraulic valves power outputs.....	Active high (max 2,5 A)
Seletron lines power outputs.....	Active high (max 15 A)

18.2 Environmental features

Operating temperature.....	-40 °C ÷ +60 °C / -40 °F ÷ +140 °F
Storage temperature.....	-40 °C ÷ +85 °C / -40 °F ÷ +185 °F

18.3 Physical features

Weight (without cables).....	1213 g
------------------------------	--------

18.4 Pin-out of IBX100

VALVE sprayer technology

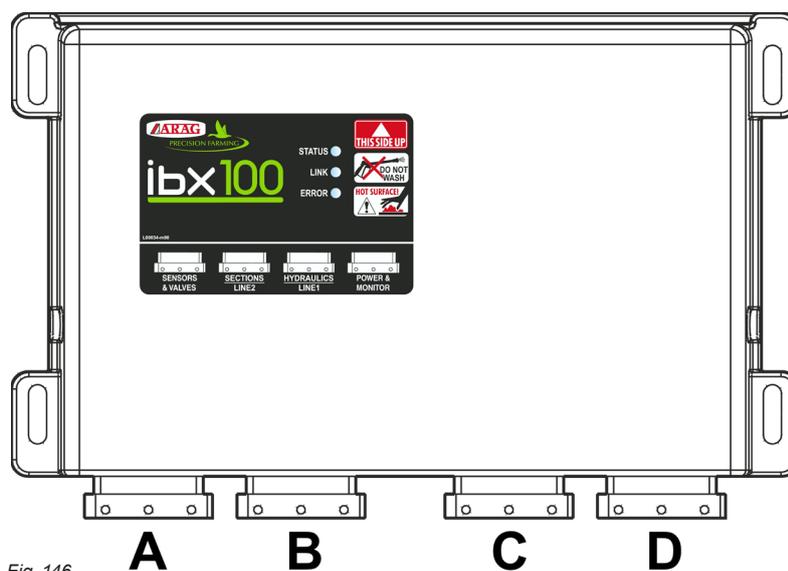


Fig. 146

A		B		C		D	
SENSOR CABLE		H2O VALVES (7/14 sections)		HYD VALVES		ISOBUS CABLE Tractor / Self-propelled	
PIN	IBX100 signal	PIN	IBX100 signal	PIN	IBX100 signal	PIN	IBX100 signal
A1	12V sensor power supply	A1	Power supply GND	A1	Valve AC	A1	PWR
A2	Pressure sensor (M)	A2	Valve 1	A2	Valve AA	A2	-
A3	Level sensor 1 (L main tank)	A3	Valve 2	A3	Valve BC	A3	-
A4	Level sensor 2 (secondary tank)	A4	Valve 3	A4	Valve BA	A4	-
A5	-	A5	Valve 4	A5	Valve CC	A5	-
A6	-	A6	Valve 5	A6	Valve CA	A6	-
A7	-	A7	Valve 6	A7	Valve DD	A7	PWR
A8	Sensor power supply GND	A8	Power supply 12V	A8	-	A8	PWR
B1	Proportional valve	B1	Power supply GND	B1	Valve power supply Hyd GND	B1	PWR GND
B2	Spraying activation / deactivation	B2	Valve 7	B2	Valve 1A	B2	-
B3	-	B3	-	B3	Valve 1C	B3	CAN L
B4	-	B4	-	B4	Valve 2A	B4	CAN H
B5	Boom lock sensor	B5	Valve 8	B5	Valve 2C	B5	-
B6	-	B6	Valve 9	B6	Valve 3A	B6	-
B7	-	B7	Activation Fence LH	B7	Valve 3C	B7	ECU-POWER
B8	Valve power supply G 12V	B8	Power supply 12V	B8	-	B8	PWR
C1	Proportional valve	C1	Power supply Fence GND	C1	-	C1	PWR GND
C2	Speed sensor (S)	C2	Valve 10	C2	Valve 4A	C2	PWR GND
C3	Flowmeter (F)	C3	Valve 11	C3	Valve 4C	C3	-
C4	Filling flowmeter (T)	C4	Valve 12	C4	Valve 5A	C4	-
C5	RPM sensor (X)	C5	Valve 13	C5	Valve 5C	C5	TBC-POWER
C6	Flasher (Light)	C6	Valve 14	C6	Valve 6A	C6	TBC GND
C7	Boom lighting (Light)	C7	Activation Fence RH	C7	Valve 6C	C7	ECU-POWER GND
C8	Valve power supply G GND	C8	Power supply Fence 12V	C8	Valve power supply Hyd GND	C8	PWR GND

SELETRON sprayer technology

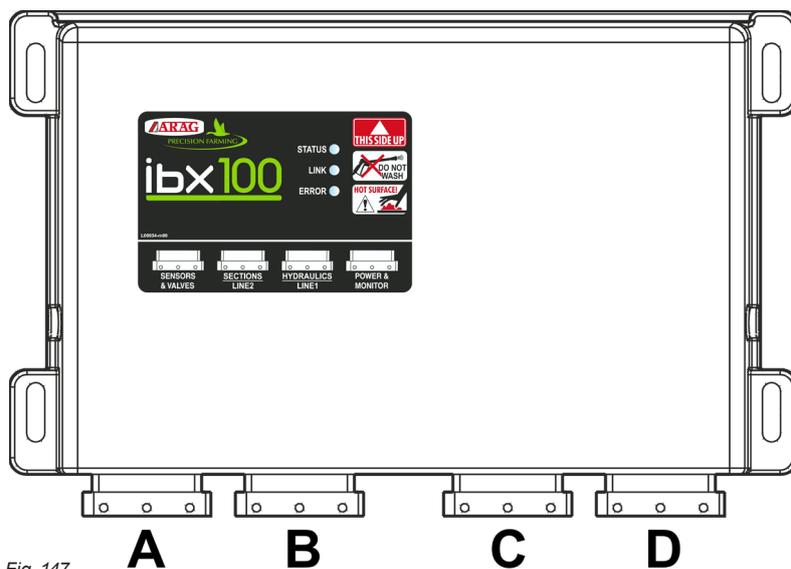


Fig. 147

A		B		C		D	
SENSOR CABLE		SELETRON Line 2		SELETRON Line 1		ISOBUS CABLE Tractor / Self-propelled	
PIN	IBX100 signal	PIN	IBX100 signal	PIN	IBX100 signal	PIN	IBX100 signal
A1	Sensor power supply 12V	A1	GND	A1	GND	A1	PWR
A2	Pressure sensor (M)	A2	-	A2	-	A2	-
A3	Level sensor 1 (L main tank)	A3	-	A3	-	A3	-
A4	Level sensor 2 (secondary tank)	A4	-	A4	-	A4	-
A5	-	A5	-	A5	-	A5	-
A6	-	A6	-	A6	-	A6	-
A7	-	A7	-	A7	-	A7	PWR
A8	Sensor power supply GND	A8	VBAS	A8	VBAS	A8	PWR
B1	Proportional valve	B1	GND	B1	GND	B1	PWR GND
B2	Spraying activation / deactivation	B2	-	B2	-	B2	-
B3	-	B3	CAN L	B3	CAN L	B3	CAN L
B4	-	B4	CAN H	B4	CAN H	B4	CAN H
B5	Boom lock sensor	B5	-	B5	-	B5	-
B6	-	B6	-	B6	-	B6	-
B7	-	B7	-	B7	-	B7	ECU-POWER
B8	Valve power supply G 12V	B8	VBAS	B8	VBAS	B8	PWR
C1	Proportional valve	C1	GND	C1	GND	C1	PWR GND
C2	Speed sensor (S)	C2	-	C2	-	C2	PWR GND
C3	Flowmeter (F)	C3	-	C3	-	C3	-
C4	Filling flowmeter (T)	C4	-	C4	-	C4	-
C5	RPM sensor (X)	C5	-	C5	-	C5	TBC-POWER
C6	Flasher (Light)	C6	-	C6	-	C6	TBC GND
C7	Boom lighting (Light)	C7	-	C7	-	C7	ECU-POWER GND
C8	Valve power supply G GND	C8	VBAS	C8	VBAS	C8	PWR GND

19 END-OF-LIFE DISPOSAL

Dispose of the system in compliance with the established legislation in the country of use.

20 GUARANTEE TERMS

1. ARAG s.r.l. guarantees this apparatus for a period of 360 days (1 year) from the date of sale to the client user (date of the goods delivery note).
The components of the apparatus, that in the unappealable opinion of ARAG are faulty due to an original defect in the material or production process, will be repaired or replaced free of charge at the nearest Assistance Center operating at the moment the request for intervention is made. The following costs are excluded:
 - disassembly and reassembly of the apparatus from the original system;
 - transport of the apparatus to the Assistance Center.
2. The following are not covered by the guarantee:
 - damage caused by transport (scratches, dents and similar);
 - damage due to incorrect installation or to faults originating from insufficient or inadequate characteristics of the electrical system, or to alterations resulting from environmental, climatic or other conditions;
 - damage due to the use of unsuitable chemical products, for spraying, watering, crop sprayer or any other crop treatment, that may damage the apparatus;
 - malfunctioning caused by negligence, mishandling, lack of know how, repairs or modifications carried out by unauthorized personnel;
 - incorrect installation and regulation;
 - damage or malfunction caused by the lack of ordinary maintenance, such as cleaning of filters, nozzles, etc.;
 - anything that can be considered to be normal wear and tear;
3. Repairing the apparatus will be carried out within time limits compatible with the organizational needs of the Assistance Center.
No guarantee conditions will be recognized for those units or components that have not been previously washed and cleaned to remove residue of the products used;
4. Repairs carried out under guarantee are guaranteed for one year (360 days) from the replacement or repair date.
5. ARAG will not recognize any further expressed or intended guarantees, apart from those listed here.
No representative or retailer is authorized to take on any other responsibility relative to ARAG products.
The period of the guarantees recognized by law, including the commercial guarantees and allowances for special purposes are limited, in length of time, to the validities given here.
In no case will ARAG recognize loss of profits, either direct, indirect, special or subsequent to any damage.
6. The parts replaced under guarantee remain the property of ARAG.
7. All safety information present in the sales documents regarding limits in use, performance and product characteristics must be transferred to the end user as a responsibility of the purchaser.
8. Any controversy must be presented to the Reggio Emilia Law Court.

21 EU DECLARATION OF CONFORMITY

The declaration of conformity is available at the website www.aragnet.com, in the relevant section.

Only use genuine ARAG accessories or spare parts to make sure manufacturer guaranteed safety conditions are maintained in time. Always refer to the Internet address www.aragnet.com

D20354_GB-m05 10/2021



42048 RUBIERA (Reggio Emilia) - ITALY
Via Palladio, 5/A

Tel. +39 0522 622011
Fax +39 0522 628944

<http://www.aragnet.com>
info@aragnet.com